


# Quick Installation Guide

Ver.B (P/N: 60177A0329X00)

## Accessories

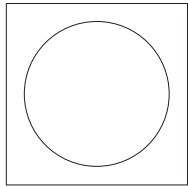

Placement sticker





Screw kit




Quick guide

## Physical Descriptions

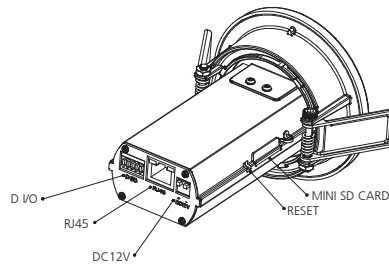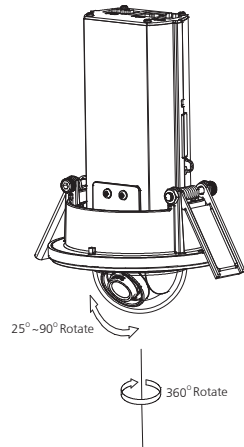


## DI/O Pinout Assignment

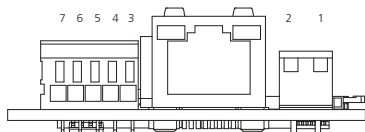


1	DC12V/AC24V (-)
2	DC12V/AC24V (+)
3	ALM_IN (+)
4	ALM_IN (-)
5	LM_out_NC
6	ALM_out_COM
7	ALM_out_NO

## Hardware Installation


1. Position the placement sticker at the desired installation location on the wall/ceiling. Then use a drill to drill the mounting holes on the sticker.

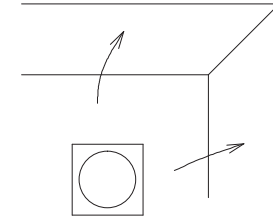


2. Adjust the camera angle to the desired field of view, then push down the two spring plates on the sides of the camera and slide it through the hole.

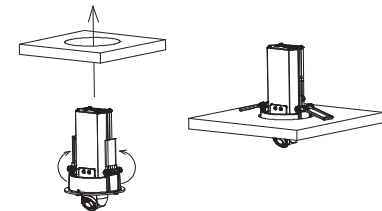

3. Replace the top cover to complete the installation.

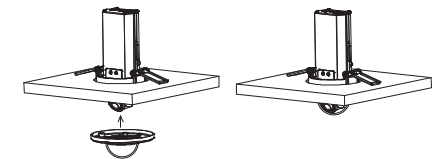

Please check below

 Be careful of the leaf spring which might hurt fingers when remove the camera from ceiling.

## Web Browser (Internet Explorer)

1. Locate and open the Internet Explorer (IE) shortcut on the desktop.
2. In the address bar, type 192.168.1.168 (default IP address of the camera) and then press the Enter button.
3. You will be prompted with a pop-up window asking for login information, type in "admin" (default login name) and "9999" (default password)