


NIFE 100 Quick Reference Guide

Ver A. (P/N:60177A0360X00)

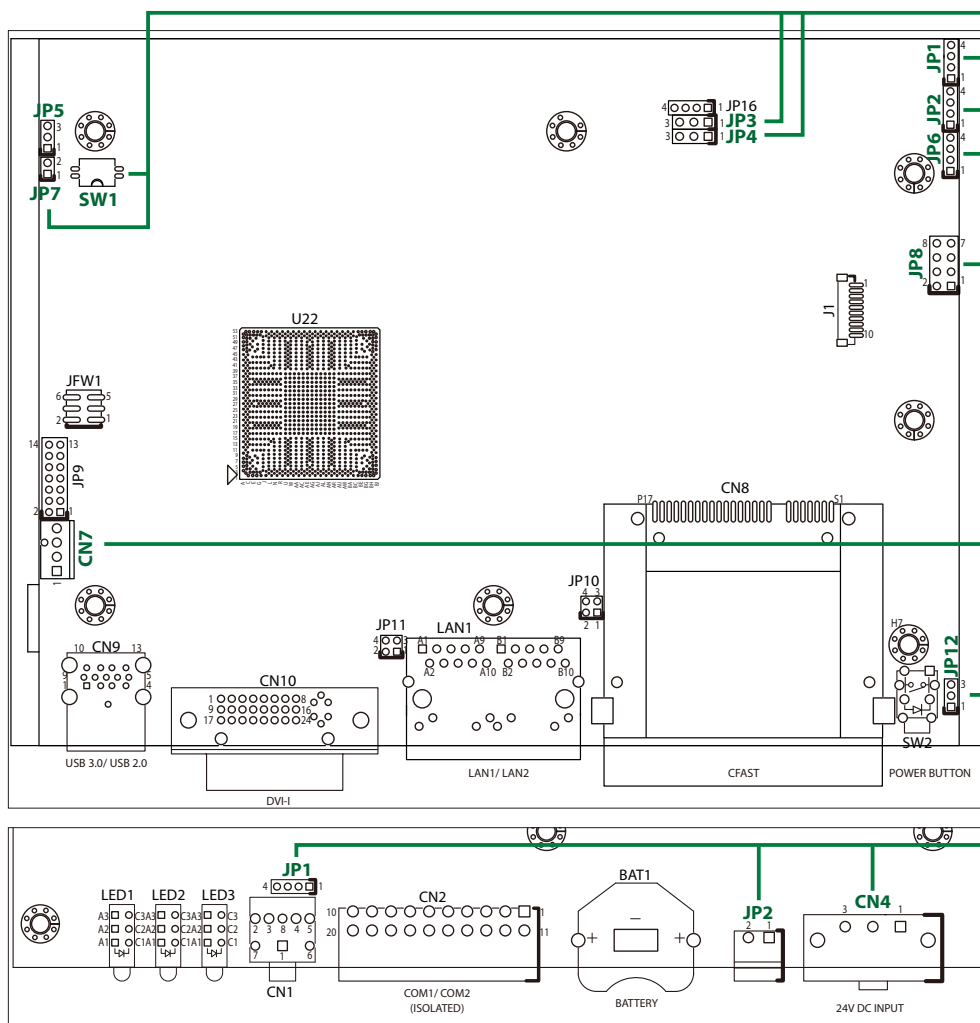

JP1: LINE_OUT PIN HEADER

Pin	Description	Pin	Description
1	FLIN_L	3	LIN_GND
2	NC	4	FLIN_R

JP2: MIC_IN PIN HEADER

Pin	Description	Pin	Description
1	MIC1_L3	3	MIC_GND
2	NC	4	MIC1_R3

JP3: 3.5G LINE-OUT PIN HEADER

Pin	Description	Pin	Description
1	LOUT_RL	3	ANGND
2	LOUT_RR		

JP4: 3.5G MIC PIN HEADER

Pin	Description	Pin	Description
1	MIC_RL	3	ANGND
2	MIC_RR		

JP5: AT/ ATX Pin header

Pin	Description
1-2	AT
*2-3	ATX

JP6: LINE_IN PIN HEADER

Pin	Description	Pin	Description
1	FLIN_L	3	LIN_GND
2	NC	4	FLIN_R

JP7: Reset Pin header

Pin	Description
1	PM_RESET#_J
2	GND

JP8: PS2 KB/ MS PIN HDEADER

Pin	Description	Pin	Description
1	VCC5	2	VCC5
3	KDAT_R	4	MDAT_R
5	KCLK_R	6	MCLK_R
7	GND	8	GND

SW1: RTC SWITCH (Default All Off)

Pin	Description	Pin	Description
1	SRTC_TEST#	3	GND
2	RTC_TEST#	4	GND

CN7: FAN CONNECTOR

Pin	Description	Pin	Description
1	GND	2	VCC12
3	CPUFANIN	4	CPUFANOUT

JP12: ATX OR RESET ON/ OFF

Pin	Description
*1-2	Push Button Type
2-3	RESET Button Type

JP1: LINE OUT PIN HEADER (POWER BOARD)

Pin	Description	Pin	Description
1	OUT_L	2	AGND
3	NC	4	OUT_R

JP2: POWER HEADER (POWER BOARD)

Pin	Description
1	PBT_PU
2	GND

CN4: POWER CONNECTOR (POWER BOARD)


Pin	Description	Pin	Description
1	VIN_M	3	ChASSIS_GND
2	VIN_VSS		

Quick reference guide is subject to change without prior notice.
For any update, please visit our website: www.nexcom.com

□ = Pin1 [*] = Default setting

NIFE 100/ 101 Quick Reference Guide

Ver A. (P/N:60177A0360X00)

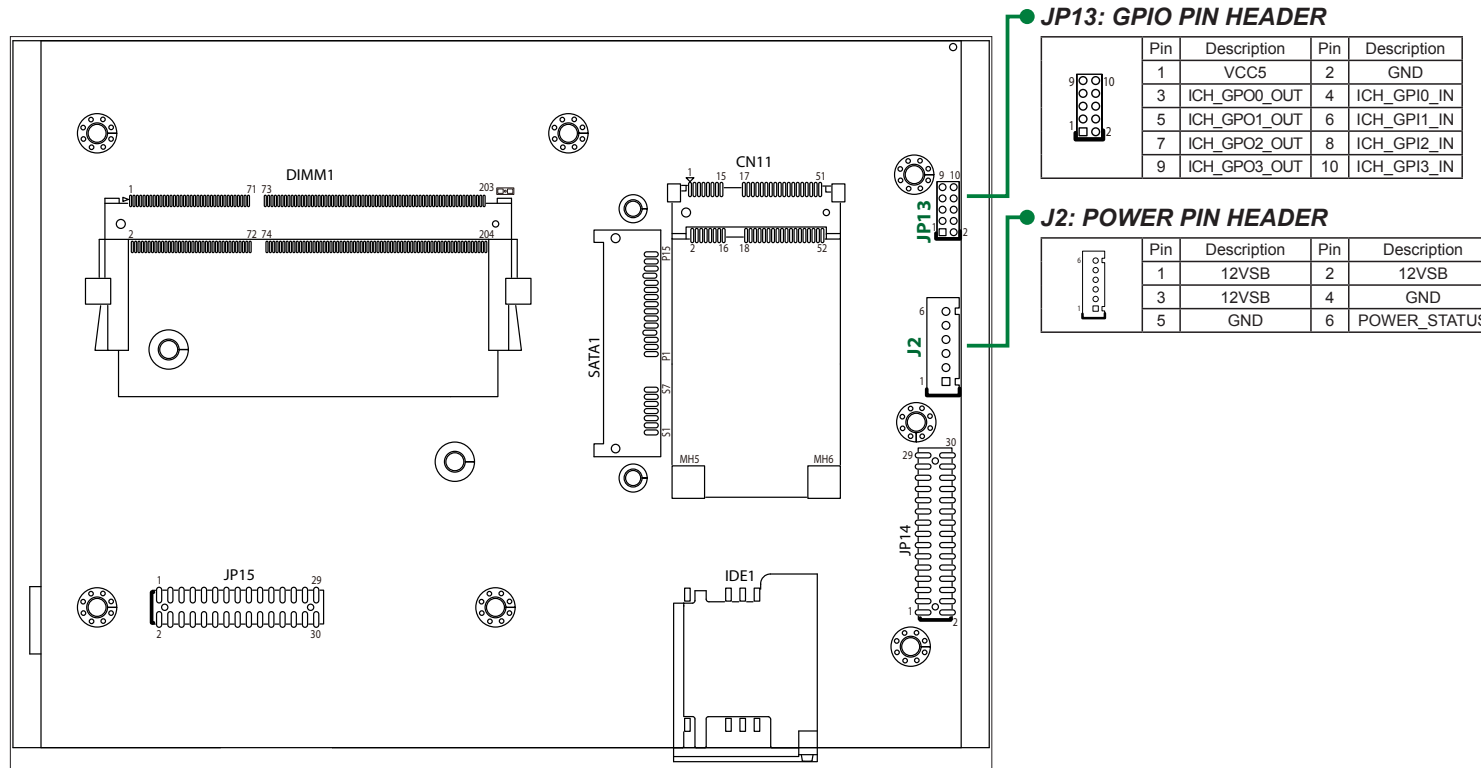

Quick reference guide is subject to change without prior notice.
For any update, please visit our website: www.nexcom.com

□=Pin1 [*]=Default setting

