

NEXCOM International Co., Ltd.

Intelligent Digital Security Video Intelligent Surveillance NViS 1482 Series User Manual

NEXCOM International Co., Ltd. Published August 2022

www.nexcom.com



CONTENTS

Preface

NE(COM

Copyright	iv
Disclaimer	iv
Acknowledgements	iv
Regulatory Compliance Statements	iv
Declaration of Conformity	iv
RoHS Compliance	\
Warranty and RMA	V
Safety Information	vii
Installation Recommendations	vii
Safety Precautions	i>
Technical Support and Assistance	>
Conventions Used in this Manual	>
Global Service Contact Information	X
Package Contents	xii
Ordering Information	xi\

Chapter 1: Product Introduction

Overview	1
Key Features	1
Hardware Specifications	2
Knowing Your NViS 1482 Series	3
Front Panel	3
NViS 1482 Rear Panel	4
Mechanical Dimensions	5
Mechanical Dimensions	6

Mechanical Dimensions	7
Chapter 2: Jumpers and Connectors	
Before You Begin	8
Precautions	8
Jumper Settings	9
Locations of the Jumpers and Connectors	10
Jumpers	11
Clear CMOS	11
Connector Pin Definitions	12
54V Power-in Connector (Outside)	12
PoE LAN 8 Ports RJ45 Connector	12
GPIO Connector	13
System Fan	14
USB2.0 Connector	14
HDD/PWR LED Wire	15
SATA Connector	15
SATA Connector	16
SATA Power Connector	16
Audio Connectors	17
Power SW Connector	17
COM Port Connector	18
Debug Port Connector	18
LAN1 Connector and USB 3.0 Ports	19
LAN2 Connector and USB 3.0 Ports	19
SPI BIOS Update Connector	20



HDMI Connector	20
DVI-I and RS485 Connector	21
POE 8 Ports LAN LED Connector	22
M.2 B Key Connector	23
PoE Switch Action Guidance	24
PoE Switch Connecter Define (Rear IO)	24
PoE Switch LED Indicator Status (Front Side)	24
PoE Switch Deployment	24
Block Diagram	26

Chapter 3: System Setup

Removing the Chassis Cover	27
Installing the 3.5" HDD	28
Installing the 2.5" SSD/HDD	34
Installing M.2 SSD	39
Installing Memory SO-DIMM (Use DDR4 SO-DIMM)	41
Installing the Wall Mount Kit	43
Installing the Rack Mount	46

Chapter 4: BIOS Setup

49
49
50
50
50
52
52
53
62
67
68

Boot	68
Save & Exit	69



PREFACE

Copyright

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written consent from NEXCOM International Co., Ltd.

Disclaimer

NE:COM

The information in this document is subject to change without prior notice and does not represent commitment from NEXCOM International Co., Ltd. However, users may update their knowledge of any product in use by constantly checking its manual posted on our website: http://www.nexcom.com. NEXCOM shall not be liable for direct, indirect, special, incidental, or consequential damages arising out of the use of any product, nor for any infringements upon the rights of third parties, which may result from such use. Any implied warranties of merchantability or fitness for any particular purpose is also disclaimed.

Acknowledgements

NViS 1482 is a trademarks of NEXCOM International Co., Ltd. All other product names mentioned herein are registered trademarks of their respective owners.

Regulatory Compliance Statements

This section provides the FCC compliance statement for Class B devices and describes how to keep the system CE compliant.

Declaration of Conformity

FCC

This equipment has been tested and verified to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area (domestic environment) is likely to cause harmful interference, in which case the user will be required to correct the interference (take adequate measures) at their own expense.

CE

The product(s) described in this manual complies with all applicable European Union (CE) directives if it has a CE marking. For computer systems to remain CE compliant, only CE-compliant parts may be used. Maintaining CE compliance also requires proper cable and cabling techniques.



RoHS Compliance



NEXCOM RoHS Environmental Policy and Status Update

NEXCOM is a global citizen for building the digital infrastructure. We are committed to providing green products and services, which are compliant with

European Union RoHS (Restriction on Use of Hazardous Substance in Electronic Equipment) directive 2011/65/EU, to be your trusted green partner and to protect our environment.

RoHS restricts the use of Lead (Pb) < 0.1% or 1,000ppm, Mercury (Hg) < 0.1% or 1,000ppm, Cadmium (Cd) < 0.01% or 100ppm, Hexavalent Chromium (Cr6+) < 0.1% or 1,000ppm, Polybrominated biphenyls (PBB) < 0.1% or 1,000ppm, and Polybrominated diphenyl Ethers (PBDE) < 0.1% or 1,000ppm.

In order to meet the RoHS compliant directives, NEXCOM has established an engineering and manufacturing task force to implement the introduction of green products. The task force will ensure that we follow the standard NEXCOM development procedure and that all the new RoHS components and new manufacturing processes maintain the highest industry quality levels for which NEXCOM are renowned.

The model selection criteria will be based on market demand. Vendors and suppliers will ensure that all designed components will be RoHS compliant.

How to recognize NEXCOM RoHS Products?

For existing products where there are non-RoHS and RoHS versions, the suffix "(LF)" will be added to the compliant product name.

All new product models launched after January 2013 will be RoHS compliant. They will use the usual NEXCOM naming convention.



Warranty and RMA

NEXCOM Warranty Period

NEXCOM manufactures products that are new or equivalent to new in accordance with industry standard. NEXCOM warrants that products will be free from defect in material and workmanship for 2 years, beginning on the date of invoice by NEXCOM. HCP series products (Blade Server) which are manufactured by NEXCOM are covered by a three year warranty period.

NEXCOM Return Merchandise Authorization (RMA)

- Customers shall enclose the "NEXCOM RMA Service Form" with the returned packages.
- Customers must collect all the information about the problems encountered and note anything abnormal or, print out any on-screen messages, and describe the problems on the "NEXCOM RMA Service Form" for the RMA number apply process.
- Customers can send back the faulty products with or without accessories (manuals, cable, etc.) and any components from the card, such as CPU and RAM. If the components were suspected as part of the problems, please note clearly which components are included. Otherwise, NEXCOM is not responsible for the devices/parts.
- Customers are responsible for the safe packaging of defective products, making sure it is durable enough to be resistant against further damage and deterioration during transportation. In case of damages occurred during transportation, the repair is treated as "Out of Warranty."
- Any products returned by NEXCOM to other locations besides the customers' site will bear an extra charge and will be billed to the customer.

Repair Service Charges for Out-of-Warranty Products

NEXCOM will charge for out-of-warranty products in two categories, one is basic diagnostic fee and another is component (product) fee.

Repair Service Charges for Out-of-Warranty Products

NEXCOM will charge for out-of-warranty products in two categories, one is basic diagnostic fee and another is component (product) fee.

System Level

- Component fee: NEXCOM will only charge for main components such as SMD chip, BGA chip, etc. Passive components will be repaired for free, ex: resistor, capacitor.
- Items will be replaced with NEXCOM products if the original one cannot be repaired. Ex: motherboard, power supply, etc.
- Replace with 3rd party products if needed.
- If RMA goods can not be repaired, NEXCOM will return it to the customer without any charge.

Board Level

- Component fee: NEXCOM will only charge for main components, such as SMD chip, BGA chip, etc. Passive components will be repaired for free, ex: resistors, capacitors.
- If RMA goods can not be repaired, NEXCOM will return it to the customer without any charge.

NE:COM



Warnings

Read and adhere to all warnings, cautions, and notices in this guide and the documentation supplied with the chassis, power supply, and accessory modules. If the instructions for the chassis and power supply are inconsistent with these instructions or the instructions for accessory modules, contact the supplier to find out how you can ensure that your computer meets safety and regulatory requirements.

Cautions

Electrostatic discharge (ESD) can damage system components. Do the described procedures only at an ESD workstation. If no such station is available, you can provide some ESD protection by wearing an antistatic wrist strap and attaching it to a metal part of the computer chassis.



Safety Information

Before installing and using the device, note the following precautions:

- Read all instructions carefully.
- Do not place the unit on an unstable surface, cart, or stand.
- Follow all warnings and cautions in this manual.
- When replacing parts, ensure that your service technician uses parts specified by the manufacturer.
- Avoid using the system near water, in direct sunlight, or near a heating device.
- The load of the system unit does not solely rely for support from the rackmounts located on the sides. Firm support from the bottom is highly necessary in order to provide balance stability.
- The computer is provided with a battery-powered real-time clock circuit. There is a danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

Installation Recommendations

Ensure you have a stable, clean working environment. Dust and dirt can get into components and cause a malfunction. Use containers to keep small components separated.

Adequate lighting and proper tools can prevent you from accidentally damaging the internal components. Most of the procedures that follow require only a few simple tools, including the following:

- A Philips screwdriver
- A flat-tipped screwdriver
- A grounding strap
- An anti-static pad

Using your fingers can disconnect most of the connections. It is recommended that you do not use needle-nose pliers to disconnect connections as these can damage the soft metal or plastic parts of the connectors.



Safety Precautions

- 1. Read these safety instructions carefully.
- 2. Keep this User Manual for later reference.
- 3. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
- 4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
- 5. Keep this equipment away from humidity.
- 6. Put this equipment on a stable surface during installation. Dropping it or letting it fall may cause damage.
- 7. The openings on the enclosure are for air convection to protect the equipment from overheating. DO NOT COVER THE OPENINGS.
- 8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
- 9. Place the power cord in a way so that people will not step on it. Do not place anything on top of the power cord. Use a power cord that has been approved for use with the product and that it matches the voltage and current marked on the product's electrical range label. The voltage and current rating of the cord must be greater than the voltage and current rating marked on the product.
- 10. All cautions and warnings on the equipment should be noted.
- 11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
- 12. Never pour any liquid into an opening. This may cause fire or electrical shock.
- 13. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.

- 14. If one of the following situations arises, get the equipment checked by service personnel:
 - a. The power cord or plug is damaged.
 - b. Liquid has penetrated into the equipment.
 - c. The equipment has been exposed to moisture.
 - d. The equipment does not work well, or you cannot get it to work according to the user's manual.
 - e. The equipment has been dropped and damaged.
 - f. The equipment has obvious signs of breakage.
- 15. Do not place heavy objects on the equipment.
- 16. The unit uses a three-wire ground cable which is equipped with a third pin to ground the unit and prevent electric shock. Do not defeat the purpose of this pin. If your outlet does not support this kind of plug, contact your electrician to replace your obsolete outlet.
- 17. CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER. DISCARD USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.

"ATTENTION: Risque d'explosion si la batterie est remplacée par un type incorrect. Mettre au rebus les batteries usagées selon les instructions."

18. This equipment is not suitable for use in locations where children are likely to be present.

Cet équipement ne convient pas à une utilisation dans des lieux pouvant accueillir des enfants.

19. Suitable for installation in Information Technology Rooms in accordance with Article 645 of the National Electrical Code and NFPA 75.

Peut être installé dans des salles de matériel de traitement de l'information conformément à l'article 645 du National Electrical Code et à la NFPA 75.

NEXCOM



Technical Support and Assistance

- 1. For the most updated information of NEXCOM products, visit NEXCOM's website at www.nexcom.com.
- 2. For technical issues that require contacting our technical support team or sales representative, please have the following information ready before calling:
 - Product name and serial number
 - Detailed information of the peripheral devices
 - Detailed information of the installed software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wordings of the error messages

Warning!

- 1. Handling the unit: carry the unit with both hands and handle it with care.
- 2. Maintenance: to keep the unit clean, use only approved cleaning products or clean with a dry cloth.
- 3. CompactFlash: Turn off the unit's power before inserting or removing a CompactFlash storage card.
- 4. This product is intended to be supplied by a UL listed (Certificate) power supply, output rated 54Vdc, 3.33 A minium, TMA 40 degree C minimum, and altitude 5000m. If you need further assistance, please contact Nexcom International Co. Ltd. or visit us at http://www.nexcom.com.tw
- 5. The ITE is to be connected only to PoE networks without routing to the outside plant.

Conventions Used in this Manual



Warning:

Information about certain situations, which if not observed, can cause personal injury. This will prevent injury to yourself when performing a task.



Caution:

Information to avoid damaging components or losing data.

Note:

Provides additional information to complete a task easily.



Global Service Contact Information

Headquarters NEXCOM International Co., Ltd.

9F, No. 920, Zhongzheng Rd., Zhonghe District, New Taipei City, 23586, Taiwan, R.O.C. Tel: +886-2-8226-7786 Fax: +886-2-8226-7782 www.nexcom.com

Asia

Taiwan NexAloT Headquarters Industry 4.0 and Cloud Services

13F, No.922, Zhongzheng Rd., Zhonghe District, New Taipei City, 23586, Taiwan, R.O.C. Tel: +886-2-8226-7796 Fax: +886-2-8226-7926 Email: jacobhuang@nexaiot.com www.nexaiot.com

NexAloT Co., Ltd. Taichung Office

NECOM

16F, No.250, Sec.2, Chongde Rd., Beitun District, Taichung City, 406, Taiwan, R.O.C. Tel: +886-4-2249-1179 Fax: +886-4-2249-1172 Email: jacobhuang@nexaiot.com www.nexaiot.com

NexCOBOT Taiwan Co., Ltd.

13F, No.916, Zhongzheng Rd., Zhonghe District, New Taipei City, 23586, Taiwan, R.O.C. Tel: +886-2-8226-7786 Fax: +886-2-8226-7926 Email: jennyshern@nexcobot.com www.nexcobot.com

GreenBase Technology Corp.

13F, No.922, Zhongzheng Rd., Zhonghe District, New Taipei City, 23586, Taiwan, R.O.C. Tel: +886-2-8226-7786 Fax: +886-2-8226-7900 Email: vivianlin@nexcom.com.tw www.nexcom.com.tw

DivioTec Inc.

19F-1A, No.97, Sec.4, ChongXin Rd., Sanchong District, New Taipei City, 24161, Taiwan, R.O.C. Tel: +886-2-8976-3077 Email: sales@diviotec.com www.diviotec.com

AloT Cloud Corp.

13F, No.922, Zhongzheng Rd., Zhonghe District, New Taipei City, 23586, Taiwan, R.O.C. Tel: +886-2-8226-7786 Fax: +886-2-8226-7782 Email: alantsai@aiotcloud.net www.aiotcloud.dev

EMBUX TECHNOLOGY CO., LTD.

13F, No.916, Zhongzheng Rd., Zhonghe District, New Taipei City, 23586, Taiwan, R.O.C. Tel: +886-2-8226-7786 Fax: +886-2-8226-7782 Email: info@embux.com www.embux.com

TMR TECHNOLOGIES CO., LTD.

13F, No.916, Zhongzheng Rd., Zhonghe District, New Taipei City, 23586, Taiwan, R.O.C. Tel: +886-2-8226-7786 Fax: +886-2-8226-7782 Email: services@tmrtek.com www.tmrtek.com



China NEXSEC Incorporated

201, Floor 2, Unit 2, Building 15, Yard 3, Gaolizhang Road, Haidian District, Beijing, 100094, China Tel: +86-10-5704-2680 Fax: +86-10-5704-2681 Email: marketing@nexsec.cn www.nexsec.cn

NEXCOM Shanghai

Room 406-407, Building C, No 154, Lane 953, Jianchuan Road, Minhang District, Shanghai, 201108, China Tel: +86-21-5278-5868 Fax: +86-21-3251-6358 Email: sales@nexcom.cn www.nexcom.cn

NEXCOM Surveillance Technology Corp.

Floor 8, Building B3, Xiufeng Industrial Zone, GanKeng Community, Buji Street, LongGang District, ShenZhen, 518112, China Tel: +86-755-8364-7768 Fax: +86-755-8364-7738 Email: steveyang@nexcom.com.tw www.nexcom.cn

NEXGOL Chongqing

1st Building No.999, Star Boulevard, Yongchuan Dist, Chongqing City, 402160, China Tel: +86-23-4960-9080 Fax: +86-23-4966-5855 Email: sales@nexgol.com.cn www.nexcom.cn

Beijing NexGemo Technology Co.,Ltd.

2F, Gemotech Building, No.1, Development Rd., Changping International Information Industry Base, Changping District, Beijing, 102206, China Tel: +86-10-8072-2025 Fax: +86-10-8072-2022 Email: sales@gemotech.cn www.nexgemo.cn

Japan NEXCOM Japan

9F, Tamachi Hara Bldg., 4-11-5, Shiba Minato-ku, Tokyo, 108-0014, Japan Tel: +81-3-5419-7830 Fax: +81-3-5419-7832 Email: sales@nexcom-jp.com www.nexcom-jp.com

America USA NEXCOM USA

46665 Fremont Blvd., Fremont CA 94538, USA Tel: +1-510-656-2248 Fax: +1-510-656-2158 Email: sales@nexcom.com www.nexcomusa.com

Europe United Kingdom NEXCOM EUROPE

10 Vincent Avenue, Crownhill Business Centre, Milton Keynes, Buckinghamshire MK8 0AB, United Kingdom Tel: +44-1908-267121 Fax: +44-1908-262042 Email: sales.uk@nexcom.eu www.nexcom.com



Package Contents

Before continuing, verify that the NViS 1482 series package that you received is complete. Your package should have all the items listed in the following table.

NViS 1482

Item	Part Number	Name	Description	
	10C00148200X0	NViS 1482 System	NViS 1482 CPU J6412	1
1	50311F0310X00	P Head Screw	P6#32x6 NI+Nylok+Nyseal for 3.5" HDD bracket	4
2	50311F0660X00	I Head Screw	I3x6 NI+Nylok for 2.5" HDD bracket	4
3	6016600007X00	Cable Tie	L=160mm W=2.5mm 21SPC(a)(h)(f2)-UL	1
4	603ATA0159X00	SATA Cable	SATA 7P/F/LATCH 180D TO 7P/F/LATCH 180D BLUE L=150mm	2
5	603POW0467X00	SATA Power Cable	SATA 15P/F/Latch TO 1x4P H.S PH:2.5mm L=150mm	2
6	7400180011X00	Power Adapter	Power Adapter EDAC:EA11701S 180W 54V/3.33A 4Pin Power Molding	1

۹,



Ordering Information

The following information below provides ordering information for the NViS 1482 series.

NViS 1482 (P/N: 10C00148200X0)

NViS1482 desktop SoC NVR with Intel® Elkhart Lake platform built-in 8-port PoE



CHAPTER 1: PRODUCT INTRODUCTION

Overview





Key Features

- Intel Celeron J6412, Quad Core 2.0GHz
- Max. 32GB DDR4 supported
- Dual display of HDMI and DVI-I
- 1 x 3.5" SATA HDD
- 1 x 2.5" SATA HDD or SSD/1 x M.2 2242 Key B SATA III (select either one)
- 1 x 10/100/1000 Intel[®] Ethernet
- 1 x 2.5G Intel Ethernet
- 8 x 10/100 PoE (120W max PSE)
- Support TPM 2.0 onboard
- Support eMMC onboard (option)



Hardware Specifications

CPU Support

 Intel 8th Gen Intel[®] Celeron[®] J6412, Quad Core, 2.0GHz base frequency, 2.6 GHz burst frequency (compatible with other Intel 8th Gen Intel Atom[®] (Elkhart Lake) processor X Series and Intel[®] Celeron[®] J Series)

Main Memory

• Dual channel DDR4 3200 MHz SDRAM, max. 32GB

I/O Interface-Front

- 2 x USB 2.0 ports
- Power & HDD status LED
- PoE 8 ports status LED

I/O Interface-Rear

- 2 x RJ45 (1 x 1GbE + 1 x 2.5GbE)
- 4 x USB 3.1 Gen1 ports
- 1 x HDMI 2.0b (supports max. resolution 4096 x 2160 @ 60Hz)
- 1 x DVI-I
- 1 x UART port (RS-232/485 setting from BIOS)
- 1 x Min-in & 1 x Line-Out & 1 x MIC
- Power on/off switch
- 54V DC-IN jack (4-pin)
- 8 x Ethernet PoE port
 - 802.3af/at compliance with total 120W max (PSE)
 - 802.3af support 8 ports @ 15W
 - 802.3at support 4 ports @30W
- 1 x 4DI/2DO (relay type) terminal block or 4DI/4DO GPIO DB15 port (option)

Storage

- 1 x 3.5" SATA HDD
- 1 x 2.5" SATA HDD or SSD/1 x M.2 2242 Key B SATAIII (select either one)
- 1 x eMMC 32GB (option)

Power Input

Adapter 54V/3.34A 180W

Dimensions

• 360mm (W) x 49mm (H) x 224.5mm (D)

Environment

- Operating Temperature: Ambient with air flow: 0°C to 40°C
- Storage temperature: -20°C to 70°C
- Relative humidity: 10% to 90% (non-condensing)

Certifications

- CE approval
- FCC Class A
- UL 62368 compliance



Knowing Your NViS 1482 Series Front Panel

LED Indicators

Indicates the power status of the system. Indicates the status of the hard drive.

Dual USB Ports Used to connect USB 2.0 devices.

PoE LAN LED Indicators

Indicates the status of the LAN ports.





NViS 1482 Rear Panel

1x COM (RS232/RS485) Port (BIOS Support)

Supports RS232 and RS485 compatible serial devices.

DVI-I

Used to connect a digital LCD panel.

HDMI

Used to connect a high-definition display.



8x PoE LAN Ports RJ45 Connector 1.0 GbE RJ45/2.5 GbE RJ45

Used to connect the system to a local area network.

4x USB3.0 Ports

Four USB ports to connect the system with USB 3.0 devices.

Audio Connectors (Line in/Line out/MIC in)

Line in: Receives audio signal input Line out: Provides audio signal output MIC-in: Used to connect an external microphone

8x PoE LAN Ports RJ45 Connectors

Enables communication among network clients and delivers power using the same RJ45 to PoE-enabled edge devices.

Power Switch

Press to power on the device.

54V DC Input Used to plug a DC power cord.

Copyright © 2021 NEXCOM International Co., Ltd. All Rights Reserved.



Mechanical Dimensions

Rackmount Model









Mechanical Dimensions

Desktop Model







Mechanical Dimensions

Wallmount Model









CHAPTER 2: JUMPERS AND CONNECTORS

This chapter describes how to set the jumpers and connectors on the NViS 1482 series motherboard.

Before You Begin

- Ensure you have a stable, clean working environment. Dust and dirt can get into components and cause a malfunction. Use containers to keep small components separated.
- Adequate lighting and proper tools can prevent you from accidentally damaging the internal components. Most of the procedures that follow require only a few simple tools, including the following:
 - A Philips screwdriver
 - A flat-tipped screwdriver
 - A set of jewelers screwdrivers
 - A grounding strap
 - An anti-static pad
- Using your fingers can disconnect most of the connections. It is recommended that you do not use needle-nosed pliers to disconnect connections as these can damage the soft metal or plastic parts of the connectors.
- Before working on internal components, make sure that the power is off. Ground yourself before touching any internal components, by touching a metal object. Static electricity can damage many of the electronic components. Humid environments tend to have less static electricity than

dry environments. A grounding strap is warranted whenever danger of static electricity exists.

Precautions

Computer components and electronic circuit boards can be damaged by discharges of static electricity. Working on computers that are still connected to a power supply can be extremely dangerous.

Follow the guidelines below to avoid damage to your computer or yourself:

- Always disconnect the unit from the power outlet whenever you are working inside the case.
- If possible, wear a grounded wrist strap when you are working inside the computer case. Alternatively, discharge any static electricity by touching the bare metal chassis of the unit case, or the bare metal body of any other grounded appliance.
- Hold electronic circuit boards by the edges only. Do not touch the components on the board unless it is necessary to do so. Don't flex or stress the circuit board.
- Leave all components inside the static-proof packaging that they shipped with until they are ready for installation.
- Use correct screws and do not over tighten screws.



Jumper Settings

A jumper is the simplest kind of electric switch. It consists of two metal pins and a cap. When setting the jumpers, ensure that the jumper caps are placed on the correct pins. When the jumper cap is placed on both pins, the jumper is short. If you remove the jumper cap, or place the jumper cap on just one pin, the jumper is open.

Refer to the illustrations below for examples of what the 2-pin and 3-pin jumpers look like when they are short (on) and open (off).

Two-Pin Jumpers: Open (Left) and Short (Right)



Three-Pin Jumpers: Pins 1 and 2 are Short





Locations of the Jumpers and Connectors

The figure below shows the location of the jumpers and connectors.





Jumpers

.

Clear CMOS

Connector type: 1x3 3-pin header Connector location: JP1



Pin Settings	
1-2	Normal
2-3	Clear CMOS

1-2 On: default



Connector Pin Definitions

54V Power-in Connector (Outside)

Connector type: 2x2 4-pin header Connector location: CON6



PoE LAN 8 Ports RJ45 Connector

Connector type: Phone Jack RJ45 2x4 Port PoE Connector location: CON5



Pin	Definition	Pin	Definition
1	54V-in	2	54V-in
3	GND	4	GND



GPIO Connector

Connector type: 2x5 10-pin header Connector location: CN8



Pin	Definition	Pin	Definition
1	5.0V	2	GND
3	GPIO80	4	GPIO84
5	GPIO81	6	GPIO85
7	GPIO82	8	GPIO86
9	GPIO83	10	GPIO87

Pin	Definition	Pin	Definition
1	5.0V	2	GPIO84
3	GPIO85	4	GPIO86
5	GPIO87	6	GND
7	GPIO80	8	GPIO81
9	GPIO82	10	GPIO83
11		12	
13		14	
15			

15 11

6

 \mathbf{O}

0

10 5



System Fan

.

Connector type: 1x4 4-pin header Connector location: FAN2



USB2.0 Connector

Connector type: 2x5 10-pin header Connector location: CN6



Pin	Definition	Pin	Definition
1	GND	2	+12V
3	SYS2_FAN_TACO	4	SYS2_FAN_PWM

Pin	Definition	Pin	Definition
1	V5P0_USB2_HDR	2	V5P0_USB2_HDR
3	USB2_4_DN_CM	4	USB2_5_DN_CM
5	USB2_4_DP_CM	6	USB2_5_DP_CM
7	GND	8	GND
9	Х	10	N/C

.



HDD/PWR LED Wire

4 0 0 0 1

Connector type: 1x4 4-pin header Connector location: CN11

SATA Connector

Connector type: 1x4 4-pin header Connector location: CN1



Pin	Definition	Pin	Definition
1	LED_PWR_PU	2	LED_PWR_LOGIC_N
3	LED_HDD_LOGIC_N	4	LED_HDD_PU

Pin	Definition	Pin	Definition
1	GND	2	SATA_CON1_TXP
3	SATA_CON1_TXN	4	GND
5	SATA_CON1_RXN	6	SATA_CON1_RXP
7	GND		



SATA Connector

Connector type: 1x4 4-pin header Connector location: CN4

SATA Power Connector

Connector type: 1x4 4-pin header Connector location: CN2, CN3





Pin	Definition	Pin	Definition
1	GND	2	SATA_CON2_TXP
3	SATA_CON2_TXN	4	GND
5	SATA_CON2_RXN	6	SATA_CON2_RXP
7	GND		

Pin	Definition	Pin	Definition
1	V12P0_SATA	2	GND
3	GND	4	V5P0_SATA



Audio Connectors

.

Connector location: AUDIO1



Power SW Connector

Connector type: 1x2 2-pin header Connector location: PWR_SW1



Pin	Definition	Pin	Definition
1	GND	2	PWRBTN_N



COM Port Connector

Connector type: 1x10 10-pin header Connector location: CN9

Debug Port Connector

10

]000000

Connector type: 1x10 10-pin header Connector location: ESPI DB1



Pin

1 3

5

7

9

Definition	Pin	Definition
SP2_DCD_N	2	SP2_RXD
SP2 TXD	4	SP2 DTR N

SP2 DSR N

SP2_CTS_N

GND

6

8

10

Pin	Definition	Pin	Definition
1	GND	2	PMC_PLTRST_N
3	ESPI_CLK	4	ESPI_CSO_N
5	ESPI_IO3	6	ESPI_IO2
7	ESPI_IO1	8	ESPI_IO0
9	ESPI_RSTO_N	10	V3P3A

GND

SP2_RTS_N

SP2_RI_N



LAN1 Connector and USB 3.0 Ports

Connector type: RJ45 port with LEDs Dual USB3.0 ports

Connector location: CON3

ACT	LINK

	Act	Status	
	Yellow	Data activity	
Off		No activity	
	Link	Statuc	

LINK	Status
Steady Green	2.5Gbps network link
Steady Orange	1000Mbps network link
Off	100Mbps or no link

LAN2 Connector and USB 3.0 Ports

Connector type: RJ45 port with LEDs Dual USB3.0 ports

Connector location: CON4

ACT	LINK
데	
ŢШ	nnnn (

Act	t Status	
Yellow	Data activity	
Off	No activity	

Link	Status
Steady Green	1Gbps network link
Steady Orange	100Mbps network link
Off	10Mbps or no link



SPI BIOS Update Connector

Connector type: 2x4 8-pin header Connector location: JP3



HDMI Connector

Connector type: HDMI Connector location: CON2



Pin	Definition	Pin	Definition
1	V3P3_V1P8_SPI	2	SPIO_CS_N
3	SPIO_HOLD_N	4	SPIO_MISO_N
5	FSPI_CLK_SPI0	6	SPIO_WP_N
7	SPI0_MOSI_N	8	GND

Pin	Definition	Pin	Definition
1	HDMI_TX2_DP_CM	2	GND
3	HDMI_TX2_DN_CM	4	HDMI_TX1_DP_CM
5	GND	6	HDMI_TX1_DN_CM
7	HDMI_TX0_DP_CM	8	GND
9	HDMI_TX0_DN_CM	10	HDMI_CLK_DP_CM
11	GND	12	HDMI_CLK_DN_CM
13	NC	14	NC
15	HDMI_RT_SCL_SNK	16	HDMI_RT_SDA_SNK
17	GND	18	V5P0_HDMI
19	HDMI_RT_HPD_SNK		





DVI-I and RS485 Connector

Connector location: CON1



Pin	Definition	Pin	Definition
1	DVI_D2_N	2	DVI_D2_P
3	GND	4	NC
5	NC	6	DVI_DDC_SCL
7	DVI_DDC_SDA	8	VGA_VSYNC_C
9	DVI_D1_N	10	DVI_D1_P
11	GND	12	NC
13	NC	14	+DVI_5V
15	GND	16	DVI_HPD_C
17	DVI_D0_N	18	DVI_D0_P
19	GND	20	VGA_DDCCLK_C
21	VGA_DDCDATA_C	22	GND
23	DVI_CK_P	24	DVI_CK_N
25	SP1_DCD_N	26	SP1_RXD
27	SP1_TXD	28	SP1_DTR_N
29	GND	30	SP1_DSR_N
31	SP1_RTS_N	32	SP1_CTS_N

Pin	Definition	Pin	Definition
33	SP1_R1_N	C1	VGA_RED_C
C2	VGA_GREEN_C	С3	VGA_BLUE_C
C4	VGA_HSYNC_C	C5A	VGA_GND
C5B	GND		



POE 8 Ports LAN LED Connector

Connector type: 2x10 20-pin header Connector location: CN7

Pin	Definition	Pin	Definition
1	V3P3_IP403	2	V3P3_IP403
3	P1LINK_ACT	4	POE_P1_STATE
5	P2LINK_ACT	6	POE_P2_STATE
7	P3LINK_ACT	8	POE_P3_STATE
9	P4LINK_ACT	10	POE_P4_STATE
11	P5LINK_ACT	12	POE_P5_STATE
13	P6LINK_ACT	14	POE_P6_STATE
15	P7LINK_ACT	16	POE_P7_STATE
17	P8LINK_ACT	18	POE_P8_STATE
19	V3P3_IP403	20	V3P3_IP403
NECOM

M.2 B Key Connector

Connector location: CN6



D'	D. G. History	D'	
PIN	Definition	PIN	Definition
1	NC	2	V3P3A_M2E
3	GND	4	V3P3A_M2E
5	GND	6	NC
7	NC	8	NC
9	NC	10	M2_SATA_LED_N
11	NC	12	CONNECTOR KEY
13	CONNECTOR KEY	14	CONNECTOR KEY
15	CONNECTOR KEY	16	CONNECTOR KEY
17	CONNECTOR KEY	18	CONNECTOR KEY
19	CONNECTOR KEY	20	NC
21	NC	22	NC
23	NC	24	NC
25	NC	26	NC
27	GND	28	NC
29	NC	30	NC
31	NC	32	NC

Pin	Definition	Pin	Definition
33	GND	34	NC
35	NC	36	NC
37	NC	38	SATA_DEVSLP0
39	GND	40	NC
41	M2_SATA_RP	42	NC
43	M2_SATA_RN	44	NC
45	GND	46	NC
47	M2_SATA_TN	48	NC
49	M2_SATA_TP	50	NC
51	GND	52	NC
53	NC	54	NC
55	NC	56	MFG_DATA
57	GND	58	MFG_CLK
59	NC	60	NC
61	NC	62	NC
63	NC	64	NC
65	NC	66	NC
67	NC	68	M2E_SUSCLK
69	M2E_SEL_N	70	V3P3A_M2E
71	GND	72	V3P3A_M2E
73	GND	74	V3P3A_M2E
75	NC		



PoE Switch Action Guidance

8ch PoE ports 10/100 Mbps, 802.3af/at compliance with a total of 120W max (PSE) $\,$

- 802.3af support 8port @ 15W
- 802.3at support 4port @ 30W

PoE Switch Connecter Define (Rear IO)



PoE Switch LED Indicator Status (Front Side)



- When the cable is plugged into the PoE port and if the device is detected, then the LED will indicate the corresponding port.
- When PoE overload >120W, the LED of the last plug in PoE port will blink.

PoE Switch Deployment

1. AF Mode Port 1, 2, 3, 4, 5, 6, 7, 8



2. AT Mode

Port 1, 2, 3, 4









Port 5, 6, 7, 8

2 4 6 8 X X AT AT X X AT AT 1 3 5 7

3. AF/AT Multi-mode

1AT + 6AF



2AT + 4AF



3AT + 2AF



Copyright © 2021 NEXCOM International Co., Ltd. All Rights Reserved.



Block Diagram





CHAPTER 3: SYSTEM SETUP

Removing the Chassis Cover



Prior to removing the chassis cover, make sure the unit's power is off and disconnected from the power sources to prevent electric shock or system damage.

1. Remove the 11 screws on the system's top cover. (Out of the 11 screws, there are 6 long screws and 5 short screws.)



2. Remove the top cover.







Installing the 3.5" HDD

1. Remove the HDD bracket.







- 2. Set 3.5" HDD into the HDD bracket. (Use #6-32 type screw)









3. Plug in the HDD SATA cable and SATA power cable, install the HDD set into the system.







Note: HDD SATA cable should be installed at CN4 of the mainboard. SATA power cable should be installed at CN3 of the mainboard.



4. Lock the screw.





5. Tightening Cable Guidance For 3.5" HDD



Complete!



NEXCOM

6. Complete!





Installing the 2.5" SSD/HDD

1. Remove the HDD bracket.





Note: The SATA port CN1 and M.2 slot cannot be used simultaneously. 

2. Set 2.5" SSD/HDD into the HDD bracket. (Use M3 type screw)







M3 screw x4 (2.5" HDD lock on bracket)



- 3. Plug in the SATA cable and SATA power cable, install the SSD/HDD set into the system.
- 4. Lock the screw.





Note: SATA cable should be installed at CN1 of the mainboard. SATA power cable should be installed at CN2 of the mainboard.





5. Tightening Cable Guidance For 2.5" SSD/HDD



Complete!





6. Complete!





Installing M.2 SSD

1. First, remove the screw on the board.



2. Insert the M.2 SSD into the M.2 slot at a 45 degree angle until the gold -plated connector on the edge of the module completely dissapears inside the slot.





The SATA port CN1 and M.2 slot cannot be used simultaneously.



- 3. With the module fully inserted, tighten a screw into the mounting hole on the module to secure it.
- 4. Complete!







Installing Memory SO-DIMM (Use DDR4 SO-DIMM)

1. Locate the DIMM memory sockets.



2. Release the locks on the DIMM memory sockets. Insert the modules into the sockets at a 90 degree angle. Apply firm even pressure to each end of the modules until they slip into the sockets.



Copyright © 2021 NEXCOM International Co., Ltd. All Rights Reserved.

Chapter 3: System Setup

- 2. Release the locks on the second DIMM memory sockets. Insert the other module into the sockets also at a 90 degree angle. Apply firm even pressure to each end of the modules until they slip into the sockets.
- 4. Complete!





NEXCOM



Installing the Wall Mount Kit

1. Take out the wall mount bracket and screws.







2. Flip the system upside down.





3. Use the screws to lock the bracket onto the device.



4. Use the screws to lock the other bracket side onto the device.







5. Complete!





Installing the Rack Mount

1. Take out the rack mount brackets.



2. Unscrew and remove the side screws.





3. Fasten the screws in sequence.



4. Unscrew and remove the side screws on the other side of the device.





3. Fasten the screws in sequence.



4. Complete!







CHAPTER 4: BIOS SETUP

This chapter describes how to use the BIOS setup program for the NViS 1482 series. The BIOS screens provided in this chapter are for reference only and may change if the BIOS is updated in the future.

To check for the latest updates and revisions, visit the NEXCOM website at www.nexcom.com.tw.

About BIOS Setup

The BIOS (Basic Input and Output System) Setup program is a menu driven utility that enables you to make changes to the system configuration and tailor your system to suit your individual work needs. It is a ROM-based configuration utility that displays the system's configuration status and provides you with a tool to set system parameters.

These parameters are stored in non-volatile battery-backed-up CMOS RAM that saves this information even when the power is turned off. When the system is turned back on, the system is configured with the values found in CMOS.

With easy-to-use pull down menus, you can configure such items as:

- Hard drives, diskette drives, and peripherals
- Video display type and display options
- Password protection from unauthorized use
- Power management features

The settings made in the setup program affect how the computer performs. It is important, therefore, first to try to understand all the setup options, and second, to make settings appropriate for the way you use the computer.

When to Configure the BIOS

- This program should be executed under the following conditions:
- When changing the system configuration
- When a configuration error is detected by the system and you are prompted to make changes to the setup program
- When resetting the system clock
- When redefining the communication ports to prevent any conflicts
- When making changes to the Power Management configuration
- When changing the password or making other changes to the security setup

Normally, CMOS setup is needed when the system hardware is not consistent with the information contained in the CMOS RAM, whenever the CMOS RAM has lost power, or the system features need to be changed.



Default Configuration

Most of the configuration settings are either predefined according to the Load Optimal Defaults settings which are stored in the BIOS or are automatically detected and configured without requiring any actions. There are a few settings that you may need to change depending on your system configuration.

Entering Setup

When the system is powered on, the BIOS will enter the Power-On Self Test (POST) routines. These routines perform various diagnostic checks; if an error is encountered, the error will be reported in one of two different ways:

- If the error occurs before the display device is initialized, a series of beeps will be transmitted.
- If the error occurs after the display device is initialized, the screen will display the error message.

Powering on the computer and immediately pressing allows you to enter Setup.

Press the belkey to enter Setup:

NEXCOM

Legends

Кеу	Function			
+ +	Moves the highlight left or right to select a menu.			
	Moves the highlight up or down between sub- menus or fields.			
Esc	Exits the BIOS Setup Utility.			
+	Scrolls forward through the values or options of the highlighted field.			
-	Scrolls backward through the values or options of the highlighted field.			
Tab	Selects a field.			
F1	Displays General Help.			
F2	Load previous values.			
F3	Load optimized default values.			
F4	Saves and exits the Setup program.			
Enter,	Press <enter> to enter the highlighted sub-menu</enter>			

NECOM

Scroll Bar

When a scroll bar appears to the right of the setup screen, it indicates that there are more available fields not shown on the screen. Use the up and down arrow keys to scroll through all the available fields.

Submenu

When " \blacktriangleright " appears on the left of a particular field, it indicates that a submenu which contains additional options are available for that field. To display the submenu, move the highlight to that field and press from \blacksquare .



BIOS Setup Utility

Once you enter the AMI BIOS Setup Utility, the Main Menu will appear on the screen. The main menu allows you to select from several setup functions and one exit. Use arrow keys to select among the items and press to accept or enter the submenu.

Main

The Main menu is the first screen that you will see when you enter the BIOS Setup Utility.

Aptio Setup - AMI						
Main	Advanced	Chipset	Security	Boot	Save	& Exit
BIOS Info BIOS Ven Product N BIOS Ver Build Dat Processor	ormation dor Jame sion e and Time Information		American M NViS-1482 S RN14-005 x 08/18/2021 1	legatrends Series 64 15:14:20		
Intel(R) C ID Microcode Stepping	Celeron(R) J6412 e Revision	@ 2.00GH	z 0x90661 11 BO			
Memory I Total Men Memory I	nformation nory Date Rate		8192 MB 3200 MTPS	0		→←: Select Screen ↑↓: Select Item
Stepping Package			B1 Not Implem	ented Yet		Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values
TXT Cap: Productio Intel(R) S ME FW V	ability of Platforn n Type afety Island Boot 'ersion	m/PCH	Unsupporte Production N/A 15.40.10.220	d)4		F3: Optimized Defaults F4: Save & Exit ESC: Exit
Version 2.21.1278 Convright (C) 2021 AMI						

System Date

The date format is <day>, <month>, <date>, <year>. Day displays a day, from Monday to Sunday. Month displays the month, from January to December. Date displays the date, from 1 to 31. Year displays the year, from 1999 to 2099.

System Time

The time format is <hour>, <minute>, <second>. The time is based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00. Hour displays hours from 00 to 23. Minute displays minutes from 00 to 59. Second displays seconds from 00 to 59.



Advanced

The Advanced menu allows you to configure your system for basic operation. Some entries are defaults required by the system board, while others, if enabled, will improve the performance of your system or let you set some features according to your preference.



Setting incorrect field values may cause the system to malfunction.

Aptio Setup - AMI					
Main	Advanced	Chipset	Security	Boot	Save & Exit
 CPU Config Power & P. Trusted Co. NCT5525D Hardware M USB Config Network St SDIO Confi 	guration erformance mputing Super IO Con Monitor guration ack Configura iguration	figuration			CPU Configuration Parameters →: Select Screen 1: Select Item Enter: Select +-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
		Version 2.2	1.1278 Copyrig	ght (C) 2021	AMI

CPU Configuration

This section is used to view CPU status and configure CPU parameters.

	Aptio Setup - AMI			
Advanced				
CPU Configuration Type ID Speed L1 Data Cache L1 Instruction Cache L2 Cache L3 Cache L4 Cache VMX SMX/TXT Intel (VMX) Virtualization Technol	Intel(R) Celeron(R) J 0x90661 2000 MHz 32 KB x 4 32 KB x 4 1536 KB x 4 4 MB N/A Supported Not Supported [Enabled]	When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology. →→: Select Screen 11: Select fem Enter: Select +→<: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit		
Version 2.21.1278 Copyright (C) 2021 AMI				

Intel® (VMX) Virtualization Technology

When this field is set to Enabled, the VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.



Power & Performance

This section is used to configure the power management features of the CPU.



CPU - Power Management Control

Enters the CPU - Power Management Control sub-menu.

CPU - Power Management Control

Aptio Setup - AMI				
Advanced				
CPU - Power Management Control P0 Fused Max Core Ratio P1 Fused Max Core Ratio P2 Fused Max Core Ratio P3 Fused Max Core Ratio Bot performance mode Intel(R) Speedstep(tm) Race to Halt (RTH) Intel(R) Speed Shift Technology C states	N/A N/A N/A [Max Non-Turbo Perf] [Enabled] [Enabled] [Enabled] [Disabled]	Select the performance state that the BIOS will set starting from reset vector.		
		→ -: Select Screen 14: Select Item Enter: Select +/.: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit		
Version 2.21.1278 Copyright (C) 2021 AMI				

Boot Performance Mode

Configures the performance state that the BIOS will set before OS handoff.

Intel[®] Speedstep[™]

Enables or disables Intel SpeedStep technology.

Race to Halt (RTH)

Enables or disables RTH feature. RTH will dynamically increase CPU frequency in order to enter pkg C-State faster to reduce overall power.

NEXCOM

Intel[®] Speed Shift Technology

Enables or disables Intel Speed Shift Technology support. Enabling it will expose the CPPC v2 interface to allow hardware controlled P-states.

C states

Enables or disables CPU C states support for power saving.



Trusted Computing

This section is used to configure Trusted Platform Module (TPM) settings.



Version 2.21.1278 Copyright (C) 2021 AMI

Security Device Support

Enables or disables BIOS support for security device.

SHA-1 PCR Bank Enables or disables SHA-1 PCR bank.

SHA256 PCR Bank

Enables or disables SHA256 PCR bank.

Pending operation

Scheduling an operation for the security device. Note: Your computer will reboot during restart in order to change state of security device.

Platform Hierarchy

Enables or disables platform hierarchy.

Storage Hierarchy Enables or disables storage hierarchy.

Endorsement Hierarchy Enables or disables endorsement hierarchy.

TPM 2.0 UEFI Spec Version

Select the TCG Spec Version Support.

TCG_1_2: the compatible mode for Win8/Win10.

TCG_2: Support new TCG2 protocol and event format for Win10 or later.

Physical Presence Spec Version

Select to tell O.S. to support PPI Spec Version 1.2 or 1.3. Note some HCK tests might not support 1.3.

Device select

TPM 1.2 will restrict support to TPM 1.2 devices. TPM 2.0 will restrict support to TPM 2.0 devices. Auto will support both with the default set to TPM 2.0 devices if not found, TPM 1.2 devices will be enumerated.



NCT5525D Super IO Configuration

This section is used to configure the serial port.



Super IO Chip

Displays the Super I/O chip used on the board.

Serial Port 1 Configuration

Configuration settings for serial port 1.

Serial Port 1 Configuration

This section is used to configure serial port 1.

Serial Port 1 Configuration		Enable or Disable Serial Por (COM)
Serial Port Device Settings Onboard Serial Port Mode	[Enabled] IO=3F8h; IRQ=4; [RS-232]	
Change Settings	[Auto]	
		→+-: Select Screen 1: Select Item Enter: Select +/-: Change Opt. FI: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit

Serial Port

Enables or disables serial port.

Onboard Serial Port Mode

This field is used to configure the mode of serial port as RS232 or RS485.

Change Settings

Select an optimal settings for Super IO Device.



Hardware Monitor

This section is used to monitor hardware such as temperature, fan speed and voltages.



System temperature

Detects and displays current system temperature.

System Fan Speed

Detects and displays current system fan speed.

5V to 12V

Detects and displays the output voltages.

Smart Fan Function

Configures the smart fan function settings.

NEXCOM

System Fan Setting

This section is used to configure system fan settings.

Aptio Setup - AMI				
Advanced				
► System Fan Setting	Smart Fan function setting			
	-++-: Select Screen 1]: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit			
Version 2.21.1278. Copyright (C) 2021 AMI				

System Fan Setting

Configures smart fan function settings.


System Fan Setting

System Fan Setting		Fan control mode select
system Fan Setting iystem Fan mode step down time lemperature 1 lemperature 2 lemperature 3 lemperature 4 D/RPM 1 'D/RPM 1 'D/RPM 2 D/RPM 3 'D/RPM 3 'D/RPM 4 'ritical tolerance Snable critical duty folerance value RPM Mode 'anout stepping	[SMART FAN IV] 10 10 25 35 45 55 140 170 200 230 60 0 [Disabled] 0 [Disabled] [Disabled]	Fan control mode select →→-: Select Screen 1: Select Iem Enter: Select +:- Change Opt F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit

System Fan mode

Configures the fan mode. The options are Manual Mode, Thermal Cruise Mode (automatic fan mode), Speed Cruise Mode or Smart Fan IV Mode.

Step up time

The amount of time fan takes to increase its value by one step. (Units are intervals of 0.1 second)

Step down time

The amount of time fan takes to decrease its value by one step. (Units are intervals of 0.1 second)

Temperature 1 to Temperature 4 Configures the temperature setting.

FD/RPM 1 to FD/RPM 4 The value of Fan Duty/RPM when temperature is T1 to T4.

Critical temperature Configures the time that Fan Out requires for reducing its value by one step.

Critical tolerance Configures the tolerance of critical temperature.

Enable critical duty

Enables critital duty, if enabled, it will use critical duty value for fan out. If not will use full speed for fan out.

RPM Mode

Enables or disables Smart Fan IV close loop fan control RPM Mode.

Fanout stepping

Enables or disables Smart Fan IV stepping.



USB Configuration

This section is used to configure USB parameters.



Legacy USB Support

Enables Legacy USB.

Auto Disables support for Legacy when no USB devices are connected. Disable Keeps USB devices available only for EFI applications

XHCI Hand-off

This is a workaround for OSes without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.

USB Mass Storage Driver Support

Enables or disables USB Mass Storage Driver Support.

USB Transfer Time-out

The time-out value for control, bulk, and interrupt transfers.

Device Reset Time-Out

Selects the USB mass storage device start unit command time-out.

Device Power-up Delay

Maximum time the device will take before it properly reports itself to the Host Controller. 'Auto' uses default value: for a Root port it is 100ms, for a Hub port the delay is taken from Hub descriptor.



Network Stack

This section is used to configure the network stack.

	Aptio Setup - AMI	
Advanced		
Network Stack	[Disabled]	Enable or Disable UEFI Network Stack
		-+ Select Screen 11: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
	Version 2.21.1278. Copyright (C) 202	1 AMI

Network Stack

Enables or disables UEFI network stack.

SDIO Configuration

This section is used to configure the SDIO access mode.

SDIO Configuration		Auto Option: Access SD devi in DMA mode if controller
SDIO Access Mode Mass Storage Devices:		supports it, otherwise in PIO mode. DMA Option: Access SD device in DMA mode. PI Option: Access SD device in PIO mode.
Bus 0 Dev 1A Func 0 eMMC DA4032 (31.2GB)	[Auto]	
		→+-: Select Screen 1: Select Item Enter: Select +/: Change Opt. F1: General Help F2: Previous Values
		F3: Optimized Defaults F4: Save & Exit ESC: Exit

SDIO Access Mode

Auto option: Access SD device in DMA mode if controller supports it, otherwise in PIO mode. DMA option: Access SD device in DMA mode.

PIO option: Access SD device in PIO mode.

eMMC DA4032 (31.2GB)

Mass storage device emulation type. 'Auto' enumerates devices less than 530MB as floppies. Forced FDD option can be used to force HDD formatted drive to boot as FDD.



Chipset

This section gives you functions to configure the system based on the specific features of the chipset. The chipset manages bus speeds and access to system memory resources.

Aptio Setup - AMI						
Main	Advanced	Chipset	Security	Boot	Sav	e & Exit
► System Age	ent (SA) Config onfiguration	guration				PCH Parameters
						→→-: Select Screen [1: Select Item Enter: Select +/: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
		Version 2.21	.1278. Convri	ght (C) 2021	AMI	

System Agent (SA) Configuration

System Agent (SA) parameters.

PCH-IO Configuration

PCH-IO parameters.

System Agent (SA) Configuration

	Aptio Setup - AMI	
	Chipset	
System Agent (SA) Configur	ation	Memory Configuration Parameters
VT-d	Supported	
 ▶ Memory Configuration ▶ Graphics Configuration VT-d XZAPIC Opt Out 	[Enabled] [Enabled]	→→→: Select Screen 11: Select Item Enter: Select +/- Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Ve	rsion 2.21.1278. Copyright (C) 20	21 AMI

Memory Configuration

Configures the memory settings.

Graphics Configuration

Configures the graphics chip settings.

VT-d

Enables or disables the VT-d.

X2APIC Opt Out Enables or disables X2APIC mode.



Memory Configuration

	Aptio Setup - AMI	
Chipset		
Memory Configuration Memory RC Version Memory Data Rate Memory Timings (tCL-tRCD-tRP-t	0.0.4.104 3200 MTPS RAS) 22-22-22-52	Safe Mode enable support. Option will be used for changes/WAS that may affect an stable MRC
Channel 0 Slot 0 Size Number of Ranks Manufacturer Channel 0 Slot 1 Channel 1 Slot 0 Size Number of Ranks Manufacturer Channel 1 Slot 1 Memory ratio/reference clock optio Safe Mode Support Maximum Memory Frequency	Populated & Enabled 4096 MB (Unknown) 1 Kingston Not Populated/Disab Populated & Enabled 4096 MB (Unknown) 1 Kingston Not Populated / Disab	→→→: Select Screen 11: Select Item Ente: Select +/-: Change Opt F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit

Memory Configuration

Detects and displays information of the memory installed in the system.

Safe Mode Support

Safe Mode enables support. Option will be used for changes/WAs that may affect an stable MRC.

Maximum Memory Frequency

Configures the maximum frequency of the memory.

Graphics Configuration

	Aptio Setup - AMI	
Chipset		
Graphics Configuration		Graphics turbo IMON current values supported (14-31)
Graphics Turbo IMON Current	31	
Internal Graphics GTT Size Aperture Size PSMI SUPPORT DVMT Pre-Allocated DVMT Total Gfx Mem DiSM Size	[Auto] [8MB] [256MB] [Disabled] [60M] [256M] [0GB]	
		→→-: Select Screen 14: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Version 2.2	1.1278. Copyright (C) 2021	AMI

Graphics Turbo IMON Current

Configures the graphics turbo IMON value. The supported range is 14 to 31.

Internal Graphics

Keep IGFX enabled based on the setup options.



GTT Size

Configures the GTT memory size.

Aperture Size

Configures the Aperture size.

Note: above 4MB MMIO BIOS assignment is automatically enabled when selecting 2048MB aperture. To use this feature, please diasble CSM Support.

PSMI Support

Enables or disables PSMI.

DVMT Pre-Allocated

Select DVMT 5.0 Pre-Allocated (fixed) graphics memory size used by the internal graphics device.

DVMT Total Gfx Mem

Configures the DVMT5.0 Total Graphic Memory size used by the IGD.

DiSM Size

Configures the DiSM Size for 2LM SKu.

PCH-IO Configuration

This section is used to configure PCH-IO configuration.

	Aptio Setup - AMI							
Main	Advanced	Chipset	Security	Boot	Sav	e & Exit		
РСН-Ю Со	onfiguration					SATA Device Options Settings		
 ► SATA Confi ► USB Config 	iguration guration							
State After	G3		[S0 State]					
						→←: Select Screen ↑↓: Select Item		
						Enter: Select +/-: Change Opt. E1: General Help		
						F2: Previous Values F3: Optimized Defaults		
						F4: Save & Exit ESC: Exit		
			1050 0	1				

SATA Configuration

Configures SATA drives.

USB Configuration

Configures the USB.

State After G3

Configures the power state when power is re-applied after a power failure (G3 state).



SATA Configuration

This section is used to configure the SATA device option settings.



SATA Controller(s)

Enables or disables the SATA controller.

SATA Mode Selection

Configures the SATA as AHCI mode.

AHCI This option configures the Serial ATA drives to use AHCI (Advanced Host Controller Interface). AHCI allows the storage driver to enable the advanced Serial ATA features which will increase storage performance.

SATA Ports Multiplier Enables or disables ports multiplier.

SATA Test Mode Enables or disables test mode.

Port 0 to Port 1 Enables or disables SATA Port 0 to 1.

Hot Plug

Enables or disables hot plugging feature on SATA port 0 to port 1.



USB Configuration



XHCI Compliance Mode

Option to enable compliance mode, default is to disable compliance mode.

xDCI Support

Enables or disables xDCI (USB OTG Device)

USB2 PHY Sus Well Power Gating

Select 'Enabled' to enable SUS Well PG for USB2 PHY. This option has no effect on PCH-H.

USB3 Link Speed Selection

This option is to select USB3 Link Speed Gen1 or Gen2.

NEXCOM

USB PDO Programming

Select 'Enabled' if port disable override functionality is used.

USB Overcurrent

Select 'Disabled' for pin-based debug. If pin-based debug is enabled but USB overcurrent is not disabled, USB DbC does not work.

USB Overcurrent Lock

Select 'Enabled' if overcurrent functionality is used. Enabling this will make xHCI controller consume the overcurrent mapping data.

USB Port Disable Override

Selectively enable or disable the corresponding USB port from reporting a device connection to the controller.

USB Device/HOST Mode Override

Selectively enable or disable the corresponding USB 2.0 and USB 3.0 port device mode.

USB UCSI ACPI device

Enables or disables USB UCSI ACPI device

66



PCH-IO Configuration

This section is used to configure PCH-IO configuration.



State after G3

Specify what state to go to when power is re-applied after a power failure.

Security

		А	ptio Setup - A	MI		
Main	Advanced	Chipset	Security	Boot	Sav	e & Exit
Password De	scription					Set Administrator Password
If ONLY the then this onl only asked fo	Administrato y limits access or when enteri	r's password s to Setup an ing Setup.	is set, d is			
The passwor in the follow Minimum ler	d length must ing range: ngth	be	3			
Maximum le	ngth		20			
Administrate	or Password					
User Passwor	ď					→→→: Select Screen 1: Select Item Enter: Select +>: Change Opt. F1: General Help F2: Provious Values F3: Optimized Defaults F3: Optimized Defaults F4: Save & Exit ESC: Exit
		Version 2.21.	1278. Copyrigh	nt (C) 2021	AMI	

Administrator Password

Select this to reconfigure the administrator's password.

User Password

Select this to reconfigure the user's password.



Secure Boot



Secure Boot

NEXCOM

Select this to enable or disable Secure Boot. Secure Boot only works when the system runs in user mode.

Secure Boot Mode

Select this to configure the Secure Boot mode.

- Standard Fixed scure boot policy.
- Custom Secure boot policy variables can be configured by a physically present user without full authentication.

Boot

			Aptio Setup -	AMI		
Main	Advanced	Chipset	Security	Boot	Sav	e & Exit
Boot Confi Bootup Nu	guration mLock State		[On]			Select the keyboard NumLoc state
Boot Optio	n Priorities					
Boot Optio	n #1		[Windows B	oot Manag]	
Boot Optio	n #2		[UEFI: Built	-in EFI]		
Fast Boot			[Disabled]			
						→←: Select Screen
						↑↓: Select Item
						+/-: Change Opt.
						F1: General Help
						F2: Previous Values
						F4: Save & Exit
						ESC: Exit
		Version 2.2	1.1278. Copyrig	ght (C) 2021 .	AMI	

Bootup NumLock State

This allows you to determine the default state of the numeric keypad. By default, the system boots up with NumLock on wherein the function of the numeric keypad is the number keys. When set to Off, the function of the numeric keypad is the arrow keys.

Boot Option Priorities

Adjust the boot sequence of the system. Boot Option #1 is the first boot device that the system will boot from, next will be #2 and so forth.

Fast Boot

When enabled, the BIOS will shorten or skip some check items during POST. This will decrease the time needed to boot the system.



Save & Exit



Save Changes and Reset

To save the changes and restart the system, select this field then press <Enter>. A dialog box will appear. Confirm by selecting Yes. You can also press <F4> to save and exit Setup.

Discard Changes and Reset

To exit the Setup utility without saving the changes and restart the system, select this field then press <Enter>. You may be prompted to confirm again before exiting.

Restore Defaults

To restore the BIOS to default settings, select this field then press <Enter>. A dialog box will appear. Confirm by selecting Yes.