



NEXCOM International Co., Ltd.

Industrial Computing Solutions

Fan-less Computer

NISE 2100, NISE 2100A, NISE 2110, NISE 2110A

User Manual

Contents

Preface

| | |
|---|------|
| Copyright | iv |
| Disclaimer | iv |
| Acknowledgements | iv |
| Regulatory Compliance Statements | iv |
| Declaration of Conformity..... | iv |
| RoHS Compliance | v |
| Warranty and RMA | vi |
| Safety Information | vii |
| Installation Recommendations..... | vii |
| Safety Precautions..... | viii |
| Technical Support and Assistance..... | ix |
| Conventions Used in this Manual..... | ix |
| Global Service Contact Information..... | x |
| Package Contents..... | xii |
| Ordering Information..... | xiii |

Chapter 1: Product Introduction

| | |
|---|---|
| Overview | 1 |
| NISE 2100/2100A | 1 |
| NISE 2110/2110A | 2 |
| Hardware Specifications..... | 3 |
| Getting to Know NISE 2100/2110 Series | 5 |
| Mechanical Dimensions..... | 9 |

Chapter 2: Jumpers And Connectors

| | |
|--|----|
| Before You Begin | 13 |
| Precautions..... | 13 |
| Jumper Settings..... | 14 |
| Locations of the Jumpers and Connectors..... | 15 |
| Jumpers..... | 17 |
| Clear CMOS..... | 17 |
| COM3 RS232 RI Pin Power Select..... | 17 |
| Panel CCFL LVDS Backlight Power Select..... | 18 |
| Connector Pin Definitions..... | 19 |
| External I/O Interface - Front Panel..... | 19 |
| USB Ports..... | 19 |
| COM5 Serial Port | 19 |
| COM6 Serial Port | 20 |
| GPIO Connector..... | 20 |
| Status Indicators..... | 21 |
| ATX Power On/Off Switch | 21 |
| External I/O Interface - Rear Panel..... | 22 |
| 9-36V DC Input..... | 22 |
| Remote Power On/Off Switch..... | 22 |
| VGA Port | 23 |
| Speaker-out Jack | 23 |
| LAN1 and LAN2 Ports..... | 24 |
| LAN3 (NISE 2100/2110 only) and Dual USB Ports..... | 25 |



- COM1 and COM2 Ports 26
- COM3 and COM4 Ports 27
- USB 8-9 Connector 27
- Internal Connectors 28
- COM5 Connector 28
- COM6 Connector 28
- Remote Power On/Off Switch 29
- CPU Fan Connector 29
- Internal Power/HDD/LAN Power/LAN Active LED (RTC Connector) .. 30
- SMBus Pin Header 30
- Mic-in Connector 31
- Power Output Connector 31
- LVDS Connector 32
- Panel CCFL Connector 32
- CompactFlash 33
- Mini-PCIe Slot 34
- PCI Slot (Low Profile) 35

Chapter 3: System Setup

- Removing the Chassis Cover 36
- Installing a SODIMM 37
- Installing a Wireless LAN Module 39
- Installing a SATA Hard Drive (NISE 2100/2100A) 41
- Installing a SATA Hard Drive (NISE 2110/2110A) 44
- Installing a SATA DOM 48
- Installing a CompactFlash Card 49

Chapter 4: BIOS Setup

- About BIOS Setup 52
- When to Configure the BIOS 52
- Default Configuration 53

- Entering Setup 53
- Legends 53
- BIOS Setup Utility 54
- Main 54
- Advanced 55
- Boot 61
- Chipset 63
- PCI/PnP 66
- Security 67
- Exit 68

Appendix A: Power Consumption

- Test Configuration 69
- Power Consumption Measurement 70

Appendix B: GPI/O Programming Guide

- J8 - GPI/O Connector 71
- GPI/O Programming Sample Code 71

Appendix C: Watchdog Timer Setting

- Watchdog Timer Setting 73
- ITE8783 WatchDog Programming Guide 74



Preface

Copyright

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written consent from NEXCOM International Co., Ltd.

Disclaimer

The information in this document is subject to change without prior notice and does not represent commitment from NEXCOM International Co., Ltd. However, users may update their knowledge of any product in use by constantly checking its manual posted on our website: <http://www.nexcom.com>. NEXCOM shall not be liable for direct, indirect, special, incidental, or consequential damages arising out of the use of any product, nor for any infringements upon the rights of third parties, which may result from such use. Any implied warranties of merchantability or fitness for any particular purpose is also disclaimed.

Acknowledgements

NISE 2100/2110 Series is a trademark of NEXCOM International Co., Ltd. All other product names mentioned herein are registered trademarks of their respective owners.

Regulatory Compliance Statements

This section provides the FCC compliance statement for Class A devices and describes how to keep the system CE compliant.

Declaration of Conformity

FCC

This equipment has been tested and verified to comply with the limits for a Class A digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area (domestic environment) is likely to cause harmful interference, in which case the user will be required to correct the interference (take adequate measures) at their own expense.

CE

The product(s) described in this manual complies with all applicable European Union (CE) directives if it has a CE marking. For computer systems to remain CE compliant, only CE-compliant parts may be used. Maintaining CE compliance also requires proper cable and cabling techniques.

RoHS Compliance



NEXCOM RoHS Environmental Policy and Status Update

NEXCOM is a global citizen for building the digital infrastructure. We are committed to providing green products and services, which are compliant with European Union

RoHS (Restriction on Use of Hazardous Substance in Electronic Equipment) directive 2002/95/EU, to be your trusted green partner and to protect our environment.

RoHS restricts the use of Lead (Pb) < 0.1% or 1,000ppm, Mercury (Hg) < 0.1% or 1,000ppm, Cadmium (Cd) < 0.01% or 100ppm, Hexavalent Chromium (Cr6+) < 0.1% or 1,000ppm, Polybrominated biphenyls (PBB) < 0.1% or 1,000ppm, and Polybrominated diphenyl Ethers (PBDE) < 0.1% or 1,000ppm.

In order to meet the RoHS compliant directives, NEXCOM has established an engineering and manufacturing task force in to implement the introduction of green products. The task force will ensure that we follow the standard NEXCOM development procedure and that all the new RoHS components and new manufacturing processes maintain the highest industry quality levels for which NEXCOM are renowned.

The model selection criteria will be based on market demand. Vendors and suppliers will ensure that all designed components will be RoHS compliant.

How to recognize NEXCOM RoHS Products?

For existing products where there are non-RoHS and RoHS versions, the suffix "(LF)" will be added to the compliant product name.

All new product models launched after January 2006 will be RoHS compliant. They will use the usual NEXCOM naming convention.

Warranty and RMA

NEXCOM Warranty Period

NEXCOM manufactures products that are new or equivalent to new in accordance with industry standard. NEXCOM warrants that products will be free from defect in material and workmanship for 2 years, beginning on the date of invoice by NEXCOM. HCP series products (Blade Server) which are manufactured by NEXCOM are covered by a three year warranty period.

NEXCOM Return Merchandise Authorization (RMA)

- ❌ Customers shall enclose the “NEXCOM RMA Service Form” with the returned packages.
- ❌ Customers must collect all the information about the problems encountered and note anything abnormal or, print out any on-screen messages, and describe the problems on the “NEXCOM RMA Service Form” for the RMA number apply process.
- ❌ Customers can send back the faulty products with or without accessories (manuals, cable, etc.) and any components from the card, such as CPU and RAM. If the components were suspected as part of the problems, please note clearly which components are included. Otherwise, NEXCOM is not responsible for the devices/parts.
- ❌ Customers are responsible for the safe packaging of defective products, making sure it is durable enough to be resistant against further damage and deterioration during transportation. In case of damages occurred during transportation, the repair is treated as “Out of Warranty.”

- ❌ Any products returned by NEXCOM to other locations besides the customers’ site will bear an extra charge and will be billed to the customer.

Repair Service Charges for Out-of-Warranty Products

NEXCOM will charge for out-of-warranty products in two categories, one is basic diagnostic fee and another is component (product) fee.

System Level

- ❌ Component fee: NEXCOM will only charge for main components such as SMD chip, BGA chip, etc. Passive components will be repaired for free, ex: resistor, capacitor.
- ❌ Items will be replaced with NEXCOM products if the original one cannot be repaired. Ex: motherboard, power supply, etc.
- ❌ Replace with 3rd party products if needed.
- ❌ If RMA goods can not be repaired, NEXCOM will return it to the customer without any charge.

Board Level

- ❌ Component fee: NEXCOM will only charge for main components, such as SMD chip, BGA chip, etc. Passive components will be repaired for free, ex: resistors, capacitors.
- ❌ If RMA goods can not be repaired, NEXCOM will return it to the customer without any charge.

Warnings

Read and adhere to all warnings, cautions, and notices in this guide and the documentation supplied with the chassis, power supply, and accessory modules. If the instructions for the chassis and power supply are inconsistent with these instructions or the instructions for accessory modules, contact the supplier to find out how you can ensure that your computer meets safety and regulatory requirements.

Cautions

Electrostatic discharge (ESD) can damage system components. Do the described procedures only at an ESD workstation. If no such station is available, you can provide some ESD protection by wearing an antistatic wrist strap and attaching it to a metal part of the computer chassis.

Safety Information

Before installing and using the device, note the following precautions:

- Read all instructions carefully.
- Do not place the unit on an unstable surface, cart, or stand.
- Follow all warnings and cautions in this manual.
- When replacing parts, ensure that your service technician uses parts specified by the manufacturer.
- Avoid using the system near water, in direct sunlight, or near a heating device.
- The load of the system unit does not solely rely for support from the rackmounts located on the sides. Firm support from the bottom is highly necessary in order to provide balance stability.
- The computer is provided with a battery-powered real-time clock circuit. There is a danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

Installation Recommendations

Ensure you have a stable, clean working environment. Dust and dirt can get into components and cause a malfunction. Use containers to keep small components separated.

Adequate lighting and proper tools can prevent you from accidentally damaging the internal components. Most of the procedures that follow require only a few simple tools, including the following:

- A Philips screwdriver
- A flat-tipped screwdriver
- A grounding strap
- An anti-static pad

Using your fingers can disconnect most of the connections. It is recommended that you do not use needlenose pliers to disconnect connections as these can damage the soft metal or plastic parts of the connectors.

Safety Precautions

1. Read these safety instructions carefully.
2. Keep this User Manual for later reference.
3. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a stable surface during installation. Dropping it or letting it fall may cause damage.
7. Do not leave this equipment in either an unconditioned environment or in a above 40°C storage temperature as this may damage the equipment.
8. The openings on the enclosure are for air convection to protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
9. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
10. Place the power cord in a way so that people will not step on it. Do not place anything on top of the power cord. Use a power cord that has been approved for use with the product and that it matches the voltage and current marked on the product's electrical range label. The voltage and current rating of the cord must be greater than the voltage and current rating marked on the product.
11. All cautions and warnings on the equipment should be noted.
12. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
13. Never pour any liquid into an opening. This may cause fire or electrical shock.
14. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
15. If one of the following situations arises, get the equipment checked by service personnel:
 - a. The power cord or plug is damaged.
 - b. Liquid has penetrated into the equipment.
 - c. The equipment has been exposed to moisture.
 - d. The equipment does not work well, or you cannot get it to work according to the user's manual.
 - e. The equipment has been dropped and damaged.
 - f. The equipment has obvious signs of breakage.
16. Do not place heavy objects on the equipment.
17. The unit uses a three-wire ground cable which is equipped with a third pin to ground the unit and prevent electric shock. Do not defeat the purpose of this pin. If your outlet does not support this kind of plug, contact your electrician to replace your obsolete outlet.
18. **CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER. DISCARD USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.**
19. The computer is provided with CD drives that comply with the appropriate safety standards including IEC 60825.

Technical Support and Assistance

1. For the most updated information of NEXCOM products, visit NEXCOM's website at www.nexcom.com.
2. For technical issues that require contacting our technical support team or sales representative, please have the following information ready before calling:
 - Product name and serial number
 - Detailed information of the peripheral devices
 - Detailed information of the installed software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wordings of the error messages

Warning!

1. Handling the unit: carry the unit with both hands and handle it with care.
2. Maintenance: to keep the unit clean, use only approved cleaning products or clean with a dry cloth.
3. CompactFlash: Turn off the unit's power before inserting or removing a CompactFlash storage card.

Conventions Used in this Manual



Warning: Information about certain situations, which if not observed, can cause personal injury. This will prevent injury to yourself when performing a task.



Caution: Information to avoid damaging components or losing data.



Note: Provides additional information to complete a task easily.

Global Service Contact Information

Headquarters

NEXCOM International Co., Ltd.

15F, No. 920, Chung-Cheng Rd., ZhongHe District, New Taipei City, 23586, Taiwan, R.O.C.

Tel: +886-2-8226-7786

Fax: +886-2-8226-7782

www.nexcom.com.tw

America

USA

NEXCOM USA

2883 Bayview Drive,
Fremont CA 94538, USA

Tel: +1-510-656-2248

Fax: +1-510-656-2158

Email: sales@nexcom.com

www.nexcom.com

Asia

Taiwan

Taichung Office

16F, No.250, Sec. 2,
Chongde Rd., Beitun Dist.,
Taichung City 406, R.O.C.

Tel: +886-4-2249-1179

Fax: +886-4-2249-1172

www.nexcom.com.tw

NEXCOM Japan

9F, Tamachi Hara Bldg.,4-11-5, Shiba Minato-ku,

Tokyo, 108-0014, Japan

Tel: +81-3-5419-7830

Fax: +81-3-5419-7832

Email: sales@nexcom-jp.com

www.nexcom-jp.com

China

NEXCOM China

2F, Block 4, Venus Plaza, Building 21,
ZhongGuanCun Software Park, No.8,
Dongbeiwang West Road, Haidian District,
Beijing, 100193, China

Tel: +86-10-8282-5880

Fax: +86-10-8282-5955

Email: sales@nexcom.cn

www.nexcom.cn

Shanghai Office

Room 1505, Greenland He Chuang Bldg.,
No. 450 Caoyang Rd.,
Shanghai, 200062, China

Tel: +86-21-6150-8008

Fax: +86-21-3251-6358

Email: sales@nexcom.cn

www.nexcom.cn

Nanjing Office

Hall C, Block 17, Tian Xing Cui Lang Bldg.,
No. 49 Yunnan North Rd.,
Nanjing, 210018, China

Tel: +86-25-8315-3486

Fax: +86-25-8315-3489

Email: sales@nexcom.cn

www.nexcom.cn

Shenzhen Office

Western Room 708, Block 210,
Tairan Industry & Trading Place, Futian Area,
Shenzhen, 518040, China

Tel: +86-755-833 7203

Fax: +86-755-833 7213

Email: sales@nexcom.cn

www.nexcom.cn

Wuhan Office

1-C 1804/1805, Mingze Liwan, No.519
South Luoshi Rd, Hongshan District,
Wuhan, 430070, China

Tel: +86-27-8722-7400

Fax: +86-27-8722-7400

Email: sales@nexcom.cn

www.nexcom.cn

Chengdu Office

9F, Shuxiangxie, Xuefu Garden,
No.12 Section 1, South Yihuan Rd.,
Chengdu, 610061, China
Tel: +86-28-8523-0186
Fax: +86-28-8523-0186
Email: sales@nexcom.cn
www.nexcom.cn

Europe

France

NEXCOM France

La Grande Arche-Paroi Nord
92044 Paris La Défense
France
Tel: +33 (0) 1 40 90 33 35
Fax: +33 (0) 1 40 90 31 01
Email: sales.fr@nexcom.eu
www.nexcom.eu

Germany

NEXCOM GmbH
Leopoldstraße Business Centre,
Leopoldstraße 244,
80807 Munich, Germany
Tel: +49-89-208039-278
Fax: +49-89-208039-279
Email: sales.de@nexcom.eu
www.nexcom.eu

Italy

NEXCOM ITALIA S.r.l
Via Gaudenzio Ferrari 29,
21047 Saronno (VA), Italia
Tel: +39 02 9628 0333
Fax: +39 02 9286 9215
Email: nexcomitalia@nexcom.eu
www.nexcomitalia.it

United Kingdom

NEXCOM EUROPE

10 Vincent Avenue,
Crownhill Business Centre,
Milton Keynes, Buckinghamshire
MK8 0AB, United Kingdom
Tel: +44-1908-267121
Fax: +44-1908-262042
Email: sales.uk@nexcom.eu
www.nexcom.eu

Package Contents

Before continuing, verify that the NISE 2100/2110 Series package that you received is complete. Your package should have all the items listed in the following table.

| Item | Part Number | Description | Qty |
|------|---------------|--|-----|
| 1 | 50311F0110X00 | (H)FLAT HEAD SCREW LONG FEI:F3x5ISO+NYLOK NIGP | 4 |
| 2 | 602DCD0337X00 | (N)NISE2100 CD DRIVER VER:2.0 | 1 |
| 3 | 60177A0223X00 | (N)NISE2100 QUICK REFERENCE GUIDE VER:A | 1 |
| 4 | 4NCPF00310X00 | (N)TERMINAL BLOCKS 3P PHOENIX CONTACT:1803581 | 1 |
| 5 | 4NCPF00204X00 | TERMINAL BLOCKS 2P PHOENIX CONTACT:1777989 | 1 |

Ordering Information

The following provides ordering information for NISE 2100/2110 Series.

- **Barebone**

- **NISE 2100 (P/N: 10J00210000X0)**

- Intel® Atom™ D525 fanless barebone system with DDR3 SODIMM socket and optional wireless module support (either WiFi or mobile wireless)
 - 19V 65W AC/DC power adapter w/o power cord (P/N: 7400065009X00)

- **Barebone**

- **NISE 2100A (P/N: 10J00210001X0)**

- Intel® Atom™ D525 fanless barebone system with DDR3 SODIMM socket and optional wireless module support (either WiFi or mobile wireless)
 - 19V 65W AC/DC power adapter w/o power cord (P/N: 7400065009X00)

- **Barebone**

- **NISE 2110 (P/N: 10J00211000X0)**

- Intel® Atom™ D525 fanless barebone system with DDR3 SODIMM socket, one PCI expansion, and optional wireless module support (either WiFi or mobile wireless)
 - 19V 65W AC/DC power adapter w/o power cord (P/N: 7400065009X00)

- **Barebone**

- **NISE 2110A (P/N: 10J00211001X0)**

- Intel® Atom™ D525 fanless barebone system with DDR3 SODIMM socket, one PCI expansion, and optional wireless module support (either WiFi or mobile wireless)
 - 19V 65W AC/DC power adapter w/o power cord (P/N: 7400065009X00)

Chapter 1: Product Introduction

Overview

NISE 2100/2100A



Front



Rear: NISE 2100



Rear: NISE 2100A

Key Features

- Onboard Intel® Atom™ Dual Core D525 (1.8GHz, 1M cache) processor
- One DDR3 SODIMM socket, DDR3 800, maximum of 2GB memory module
- 3 x Intel® 1000/100/10 Mbps LAN ports (NISE 2100)
2 x Intel® 1000/100/10 Mbps LAN ports (NISE 2100A)
- 4 x USB 2.0
- 1 x VGA
- 1 x DB15 GPIO connector
- 4 x RS232 and 2 x RS232/422/485 with auto flow control
- One external CF socket
- One external SIM card holder
- 9 ~ 36V DC input
- ATX power mode

NISE 2110/2110A



Front



Rear: NISE 2110



Rear: NISE 2110A

Key Features

- Onboard Intel® Atom™ Dual Core D525 (1.8GHz, 1M cache) processor
- One DDR3 SODIMM socket, DDR3 800, maximum of 2GB memory module
- 3 x Intel® 1000/100/10 Mbps LAN ports (NISE 2110)
2 x Intel® 1000/100/10 Mbps LAN ports (NISE 2110A)
- 4 x USB 2.0
- 1 x VGA
- 1 x DB15 GPIO connector
- 4 x RS232 and 2 x RS232/422/485 with auto flow control
- One external CF socket
- One external SIM card holder
- 9 ~ 36V DC input
- ATX power mode
- 1 x PCI Expansion Slot

Hardware Specifications

Main Board

- NISB 2100 (NISE 2100/2110)
NISB 2100A (NISE 2100A/2110A)
- Onboard Intel® Atom™ D525 dual core processor, 1.8GHz, 1M cache
- Intel® ICH8M PCH

Main Memory

- One DDR3 SODIMM socket
- Supports up to 2GB DDR3 800 SDRAM memory module, unbuffered, non-ECC

Expansion

- NISE 2100/2100A
 - One Mini-PCIe socket (for optional WiFi or mobile wireless module)
- NISE 2110/2110A
 - 1 x PCI expansion
 - One Mini-PCIe socket (for optional WiFi or mobile wireless module)

I/O Interface - Front

- ATX Power on/off switch
- HDD access / Power status LEDs
- 1 x DB15 GPIO connector
- 2 x Serial ports (RS232)
- 2 x USB 2.0 ports
- 1 x CompactFlash socket
- 1 x external SIM card holder
- 2 x antenna holes (for optional WiFi or mobile wireless module)

I/O Interface - Rear

- 9~36V DC input
- 1 x 3-pin connector for remote power on/off switch
- 1 x DB15 VGA port
- 1 x speaker-out jack
- 3 x Intel® GbE LAN ports (NISE 2100/2110)
2 x Intel® GbE LAN ports (NISE 2100A/2110A)
- 2 x USB 2.0 ports
- 4 x Serial ports (2x RS232 and 2x RS232/422/485 with auto-flow control: isolation protection on COM1 and COM2)

Storage

- 1 x 2.5" SATA HDD drive bay (NISE 2100/2100A)
1 x 2.5" SATA HDD drive bay or optional SATA DOM module - horizontal type (NISE 2110/2110A)
- 1 x external CF socket

Power Requirements

- ATX Power mode
- DC to DC power design onboard, supports 9~36V DC
- Optional 19V, 65W power adapter

Dimensions

- NISE 2100/2100A
195mm (W) x 200mm (D) x 65mm (H) (7.7" x 7.9" x 2.6")
- NISE 2110/2110A
195mm (W) x 200mm (D) x 90mm (H) (7.7" x 7.9" x 3.5")

Construction

- Aluminum chassis with fanless design

Environment

- Operating temperature - ambient with airflow:
 - 5°C to 55°C (NISE 2100/2110)
 - 20°C to 70°C with industrial grade devices (NISE 2100A/2110A)
(According to IEC60068-2-1, IEC60068-2-2, IEC60068-2-14)
- Storage temperature: -20°C to 80°C
- Relative humidity: 10% to 93% (Non-Condensing)


Certifications

- CE approval
- FCC Class A



Getting to Know NISE 2100/2110 Series

NISE 2100/2100A - Front Panel

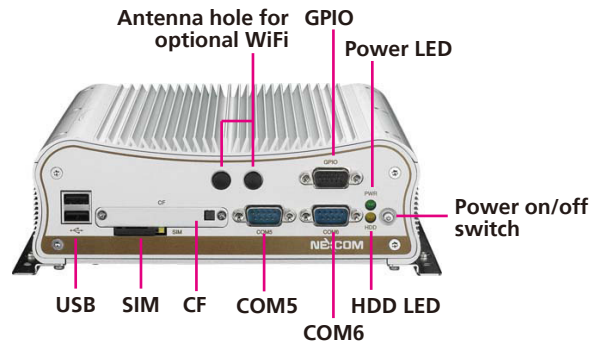

USB

Used to connect USB 2.0/1.1 devices.

CF

Used to insert a CompactFlash card.

SIM

Used to insert a SIM card.

Antenna Hole for Optional WiFi

Used to connect an optional Mini-PCIe WiFi module.

COM5 and COM6

Used to connect RS232 compatible serial devices.

GPIO

The GPIO connector supports 4 digital input and 4 digital output.

Power LED

Indicates the power status of the system.


HDD LED

Indicates the status of the hard drive.

Power On/Off Switch

Press to power-on or power-off the system.

NISE 2100/2100A - Rear Panel

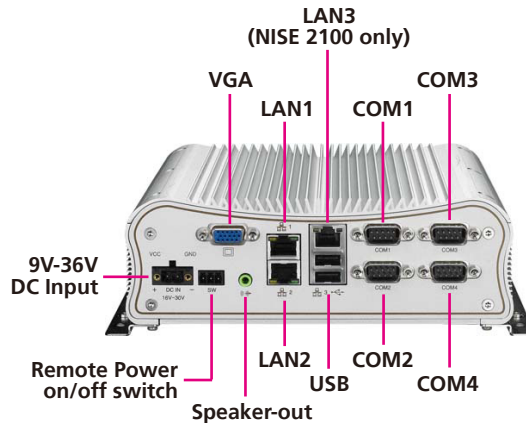

9V-36V DC Input

Used to plug a DC power cord.

Output for Remote Power On/Off Switch

Used to connect a remote to power on/off the system.

VGA

Used to connect an analog VGA monitor.

Speaker-out

Used to connect a headphone or a speaker.

LAN

Used to connect the system to a local area network.

NISE 2100: LAN1 to LAN3

NISE 2100A: LAN1 and LAN2 only.

USB

Used to connect USB 2.0/1.1 devices.


COM1 and COM2

Used to connect RS232/422/485 compatible serial devices.

COM3 and COM4

Used to connect RS232 compatible serial devices.

NISE 2110/2110A - Front Panel

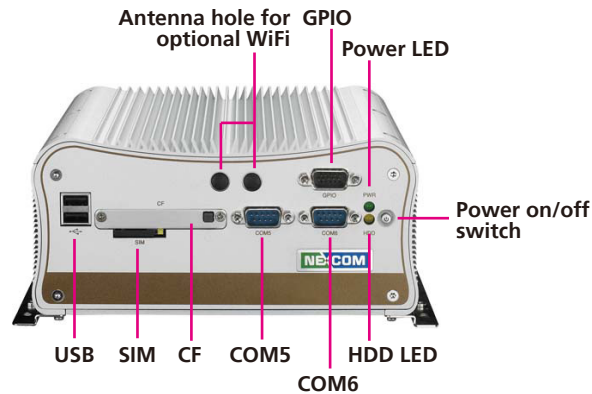

USB

Used to connect USB 2.0/1.1 devices.

CF

Used to insert a CompactFlash card.

SIM

Used to insert a SIM card.

Antenna Hole for Optional WiFi

Used to connect an optional Mini-PCIe WiFi module.

COM5 and COM6

Used to connect RS232 compatible serial devices.

GPIO

The GPIO connector supports 4 digital input and 4 digital output.

Power LED

Indicates the power status of the system.


HDD LED

Indicates the status of the hard drive.

Power On/Off Switch

Press to power-on or power-off the system.

NISE 2110/2110A - Rear Panel

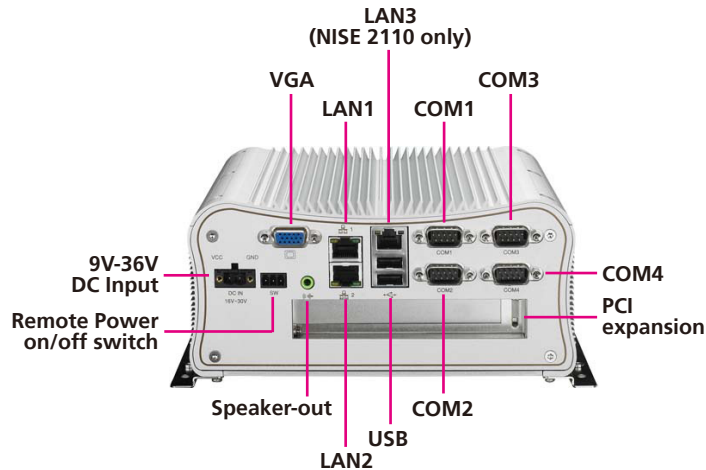

9V-36V DC Input

Used to plug a DC power cord.

Output for Remote Power On/Off Switch

Used to connect a remote to power on/off the system.

VGA

Used to connect an analog VGA monitor.

Speaker-out

Used to connect a headphone or a speaker.

USB

Used to connect USB 2.0/1.1 devices.

LAN

Used to connect the system to a local area network.

NISE 2110: LAN1 to LAN3

NISE 2110A: LAN1 and LAN2 only.

COM1 and COM2

Used to connect RS232/422/485 compatible serial devices.

COM3 and COM4







Used to connect RS232 compatible serial devices.

PCI Expansion







Used to connect a PCI expansion card.

Mechanical Dimensions


NISE 2100

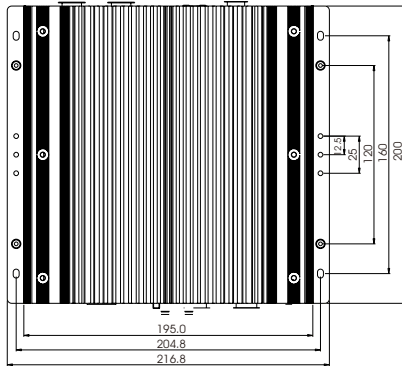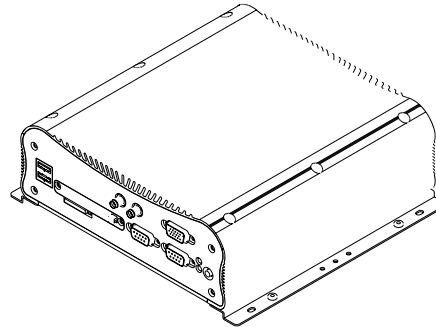


NISE 2100A

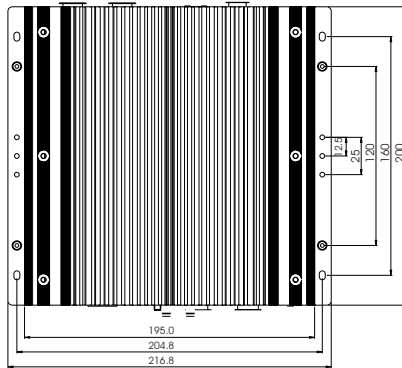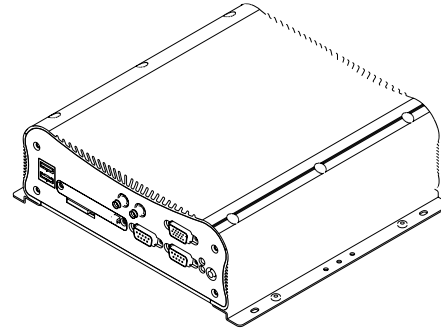

NISE 2110

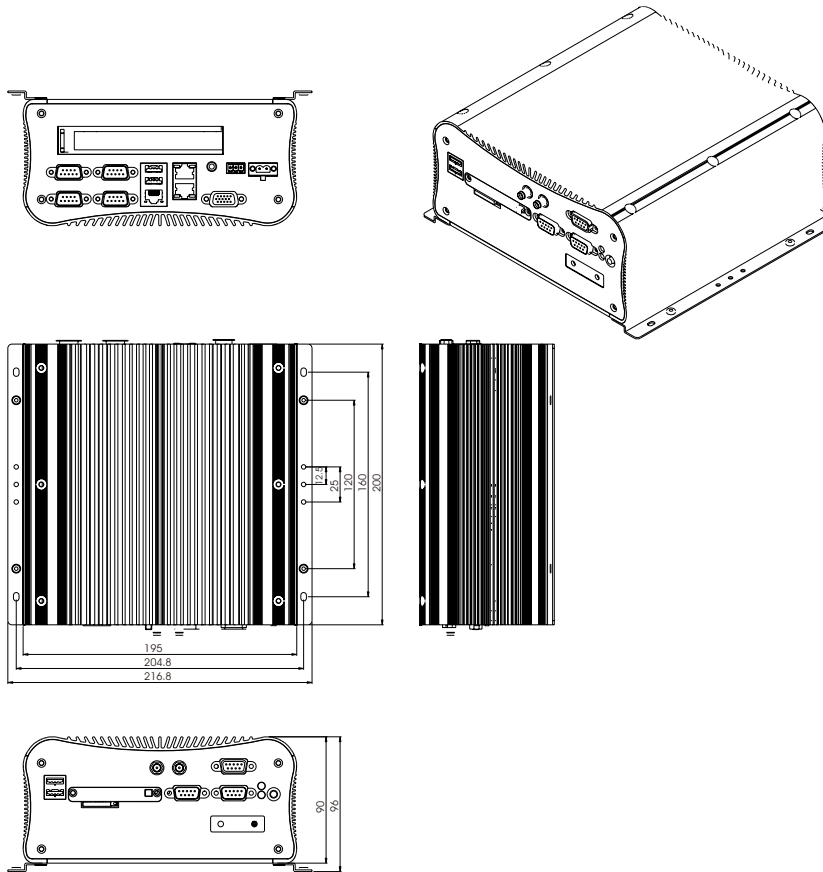

NISE 2110A

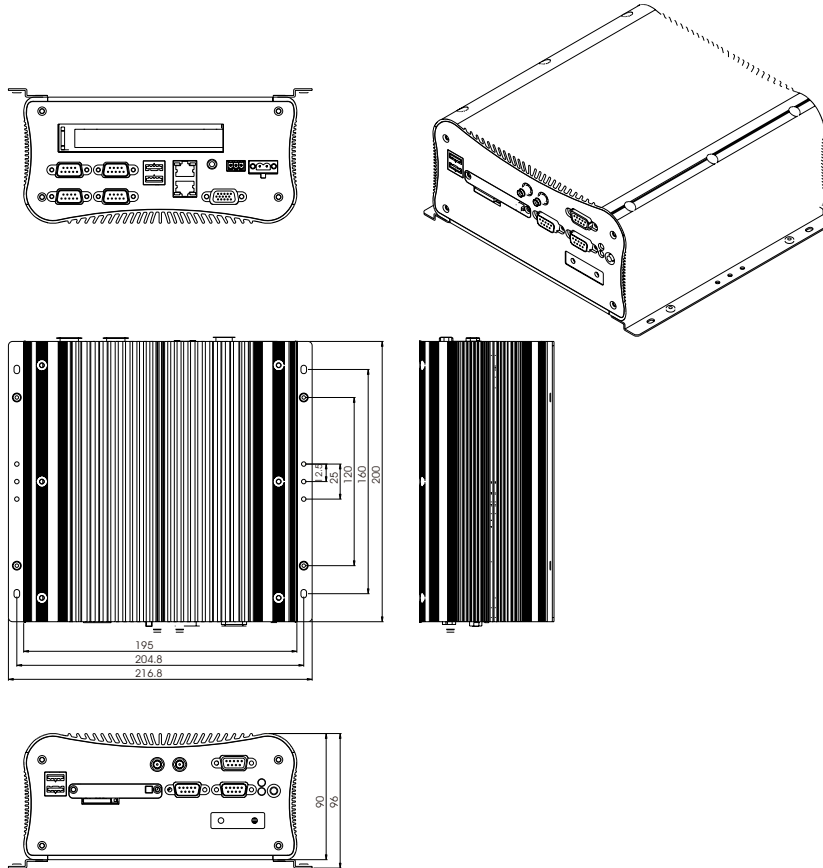

Chapter 2: Jumpers and Connectors

This chapter describes the jumpers and connectors on the motherboard. Note that the following procedures are generic for all NISE 2100/2110 series.

Before You Begin

- Ensure you have a stable, clean working environment. Dust and dirt can get into components and cause a malfunction. Use containers to keep small components separated.
- Adequate lighting and proper tools can prevent you from accidentally damaging the internal components. Most of the procedures that follow require only a few simple tools, including the following:
 - A Philips screwdriver
 - A flat-tipped screwdriver
 - A set of jewelers Screwdrivers
 - A grounding strap
 - An anti-static pad
- Using your fingers can disconnect most of the connections. It is recommended that you do not use needle-nosed pliers to disconnect connections as these can damage the soft metal or plastic parts of the connectors.
- Before working on internal components, make sure that the power is off. Ground yourself before touching any internal components, by touching a metal object. Static electricity can damage many of the elec-

tronic components. Humid environment tend to have less static electricity than dry environments. A grounding strap is warranted whenever danger of static electricity exists.

Precautions

Computer components and electronic circuit boards can be damaged by discharges of static electricity. Working on the computers that are still connected to a power supply can be extremely dangerous.

Follow the guidelines below to avoid damage to your computer or yourself:


- Always disconnect the unit from the power outlet whenever you are working inside the case.
- If possible, wear a grounded wrist strap when you are working inside the computer case. Alternatively, discharge any static electricity by touching the bare metal chassis of the unit case, or the bare metal body of any other grounded appliance.
- Hold electronic circuit boards by the edges only. Do not touch the components on the board unless it is necessary to do so. Don't flex or stress the circuit board.
- Leave all components inside the static-proof packaging that they shipped with until they are ready for installation.
- Use correct screws and do not over tighten screws.

Jumper Settings


A jumper is the simplest kind of electric switch. It consists of two metal pins and a cap. When setting the jumpers, ensure that the jumper caps are placed on the correct pins. When the jumper cap is placed on both pins, the jumper is **short**. If you remove the jumper cap, or place the jumper cap on just one pin, the jumper is **open**.

Refer to the illustrations below for examples of what the 2-pin and 3-pin jumpers look like when they are short (on) and open (off).

Two-Pin Jumpers: Open (Left) and Short (Right)

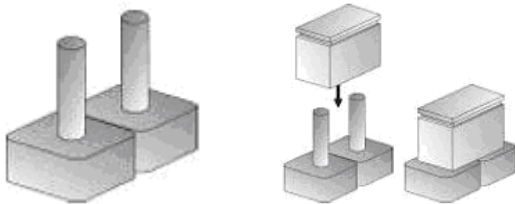


Three-Pin Jumpers: Pins 1 and 2 Are Short

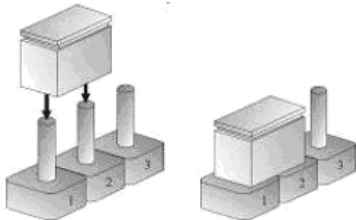


Locations of the Jumpers and Connectors

NISB 2100

The figure below is the top view of the NISB 2100 main board which is the main board used in the NISE 2100 Series system. It shows the locations of the jumpers and connectors.

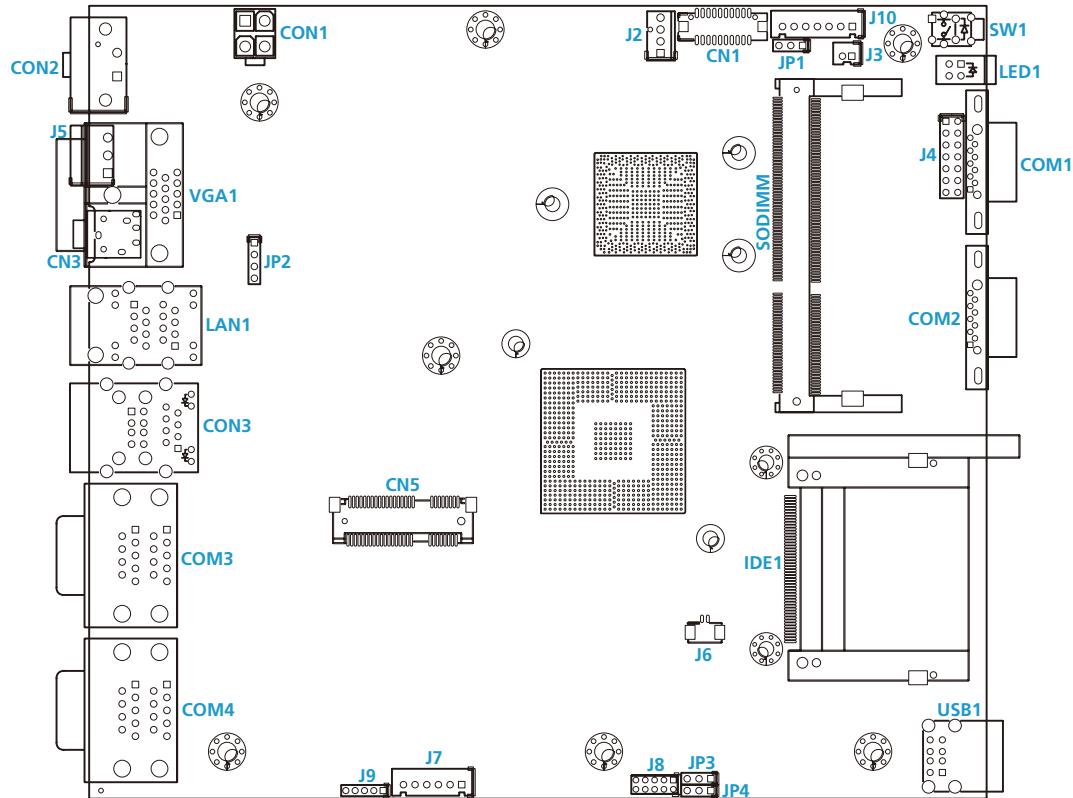

The figure below is the bottom view of the NISB 2100 main board.

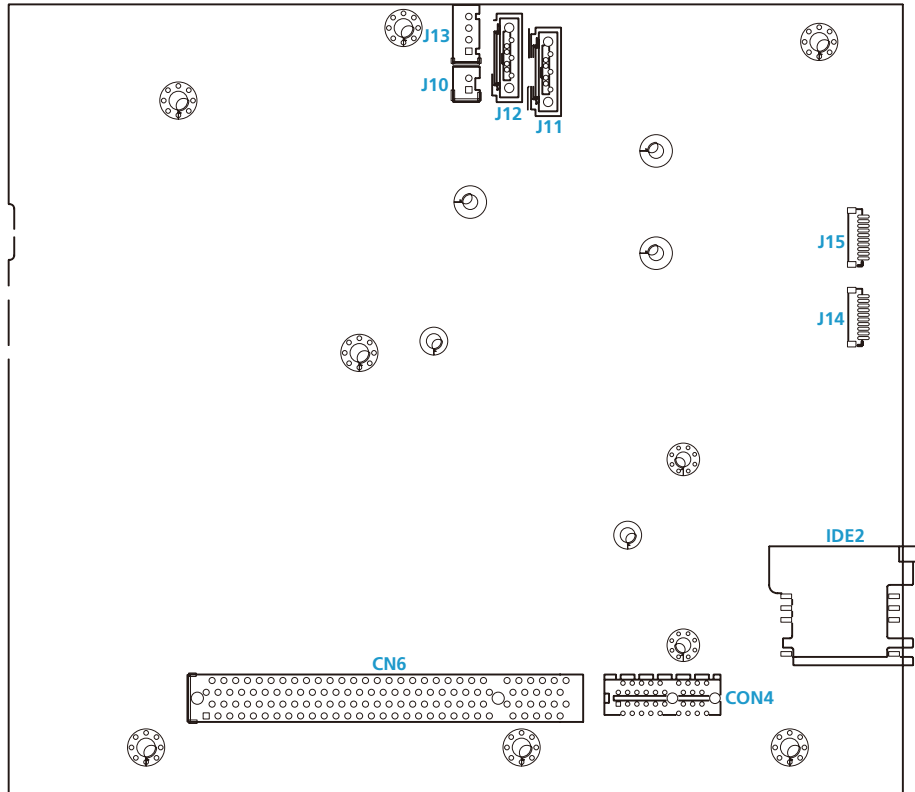

Jumpers

Clear CMOS

Connector size: 1x3 3-pin header, 2.54 mm pitch

Connector location: JP3



| Pin | Settings |
|--------|------------|
| 1-2 On | Normal |
| 2-3 On | CMOS Clear |


1-2 On: default

| Pin | Definition |
|-----|------------|
| 1 | NC |
| 2 | IRTCRST# |
| 3 | GND |

COM3 RS232 RI Pin Power Select

Connector type: 1x5 5-pin header 2.54mm -M-180

Connector location: J9



| Pin | Settings |
|-----|----------|
| 1-2 | +5V |
| 2-3 | +12V |
| 4-5 | RING |

4-5 On: default

| Pin | Definition |
|-----|------------|
| 1 | VCC5 |
| 2 | RING_T |
| 3 | +12V |
| 4 | RING_T |
| 5 | RING |

Panel CCFL LVDS Backlight Power Select

Connector size: 1x3 3-pin header, 2.54 mm pitch

Connector location: JP1

1  3

| Pin | Settings |
|-----|-------------|
| 1 | VCC3 (3.3V) |
| 2 | VCC_LCD |
| 3 | VCC5(+5V) |

1-2 On: default


Connector Pin Definitions

External I/O Interface - Front Panel

USB Ports

Connector type: Dual USB port

Connector location: USB1

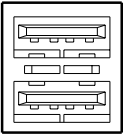


| Pin | Definition | Pin | Definition |
|-----|-------------|-----|-------------|
| 1 | USB_VCC(5V) | 5 | USB_VCC(5V) |
| 2 | DATA_N | 6 | DATA_N |
| 3 | DATA_P | 7 | DATA_P |
| 4 | GND | 8 | GND |

COM5 Serial Port

Connector type: DB-9 port

Connector location: COM2

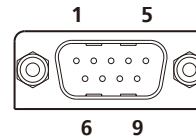


| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | COM5_DCD | 6 | COM5_DSR |
| 2 | COM5_RXD | 7 | COM5_RTS |
| 3 | COM5_TXD | 8 | COM5_CTS |
| 4 | COM5_DTR | 9 | COM5_RI |
| 5 | GND | | |

COM6 Serial Port

Connector type: DB-9 port

Connector location: COM1

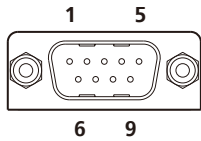


| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | COM6_DCD | 6 | COM6_DSR |
| 2 | COM6_RXD | 7 | COM6_RTS |
| 3 | COM6_TXD | 8 | COM6_CTS |
| 4 | COM6_DTR | 9 | COM6_RI |
| 5 | GND | | |

GPIO Connector

(4 digital input and 4 digital output)

Connector type: DB-15 port, 2x5 10-pin header, 2.0 mm-M-180

Connector location: J8

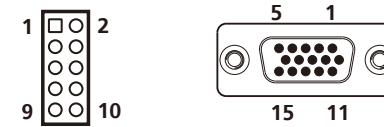

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | +5V | 2 | GND |
| 3 | GPO | 4 | GPI |
| 5 | GPO | 6 | GPI |
| 7 | GPO | 8 | GPI |
| 9 | GPO | 10 | GPI |



Status Indicators

PWR



HDD

| Status | LED Color |
|--------|-----------|
| PWR | Green |
| HDD | Yellow |

ATX Power On/Off Switch

Connector location: SW1



| Pin | Definition |
|-----|------------|
| On | Blue light |
| Off | Red light |


| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | GND | 2 | PBT_PU |
| 3 | PBT_PU | 4 | GND |
| A1 | PWRLED_N | C1 | PWRLED_P |

External I/O Interface - Rear Panel

9-36V DC Input

Connector type: 2P Phoenix Contact 5.08mm Power Connector

Connector location: CON2



| Pin | Definition |
|-----|------------|
| 1 | GND |
| 2 | VIN(9~36V) |

Remote Power On/Off Switch

Connector type: 3-pin switch

Connector location: J5




| Pin | Definition |
|-----|------------|
| 1 | GND |
| 2 | PWR_ON |
| 3 | PS_ON |

VGA Port

Connector type: DB-15 port, 15-pin D-Sub

Connector location: VGA1

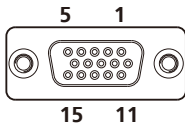


| Pin | Definition | Pin | Definition |
|-----|------------|-----|-------------|
| 1 | RED_VGA | 9 | VGA_VCC(5V) |
| 2 | GREEN_VGA | 10 | GND |
| 3 | BLUE_VGA | 11 | NC |
| 4 | NC | 12 | DDCDATA_VGA |
| 5 | GND | 13 | HSYNC_VGA |
| 6 | VGADET | 14 | VSYNC_VGA |
| 7 | GND | 15 | DDCLK_VGA |
| 8 | GND | | |

Speaker-out Jack

Connector type: 6-pin jack

Connector location: CN3




| Pin | Definition |
|-----|----------------|
| 1 | Speak Out - R |
| 2 | Speak Out - JD |
| 3 | NC |
| 4 | Speak Out - L |
| 5 | GND |
| 6 | GND |

LAN1 and LAN2 Ports

Connector type: RJ45 port with LEDs

Connector location: LAN1

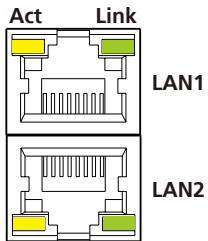

| Act | Status |
|-----------------|---------------|
| Yellow Blinking | Data Activity |
| Off | No Activity |

| Link | Status |
|----------------------|---------|
| Green Always Lighted | Linked |
| Off | No Link |

LAN1

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| B1 | LAN1M0P | B7 | LAN1M3P |
| B2 | LAN1M0N | B8 | LAN1M3N |
| B3 | LAN1M1P | B9 | LAN1LINK |
| B4 | LAN1M2P | B10 | LAN1ACTP |
| B5 | LAN1M2N | B11 | LAN1ACT# |
| B6 | LAN1M1N | B12 | LAN1LINKP |


LAN2

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| A1 | LAN2M0P | A7 | LAN2M3P |
| A2 | LAN2M0N | A8 | LAN2M3N |
| A3 | LAN2M1P | A9 | LAN2LINK |
| A4 | LAN2M2P | A10 | LAN2ACTP |
| A5 | LAN2M2N | A11 | LAN2ACT# |
| A6 | LAN2M1N | A12 | LAN2LINKP |

LAN3 (NISE 2100/2110 only) and Dual USB Ports

Connector size: RJ45 and Dual USB

Connector location: CON3

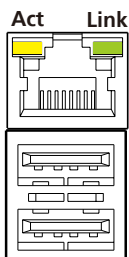

LAN3

| Pin | Definition | Pin | Definition |
|-----|------------|-----|--------------|
| 9 | LAN3M0P | 17 | LAN3ACTP |
| 10 | LAN3M0N | 18 | LAN3_LEDACT# |
| 11 | LAN3M1P | 19 | LAN3LINKP |
| 12 | LAN3M2P | 20 | LAN3_LEDLINK |
| 13 | LAN3M2N | 21 | GND |
| 14 | LAN3M1N | 24 | GND |
| 15 | LAN3M3P | 25 | GND |
| 16 | LAN3M3N | 28 | GND |


USB

| Pin | Definition | Pin | Definition |
|-----|-------------|-----|-------------|
| 1 | USB_VCC(5V) | 5 | USB_VCC(5V) |
| 2 | DATA_N | 6 | DATA_N |
| 3 | DATA_P | 7 | DATA_P |
| 4 | GND | 8 | GND |
| 23 | GND | 22 | GND |
| 27 | GND | 28 | GND |

COM1 and COM2 Ports

Connector size: DB-9 port

Connector location: COM3

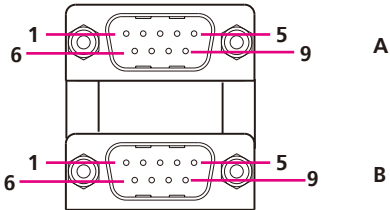

COM1A

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | COM1_DCD | 6 | COM1_DSR |
| 2 | COM1_RXD | 7 | COM1_RTS |
| 3 | COM1_TXD | 8 | COM1_CTS |
| 4 | COM1_DTR | 9 | COM1_RI |
| 5 | GND | | |

COM2B

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | COM2_DCD | 6 | COM2_DSR |
| 2 | COM2_RXD | 7 | COM2_RTS |
| 3 | COM2_TXD | 8 | COM2_CTS |
| 4 | COM2_DTR | 9 | COM2_RI |
| 5 | GND | | |

RS485

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | TXD- | 6 | Reserved |
| 2 | TXD+ | 7 | Reserved |
| 3 | Reserved | 8 | Reserved |
| 4 | Reserved | 9 | Reserved |
| 5 | Reserved | | |


RS422

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | TXD- | 6 | RTS- |
| 2 | TXD+ | 7 | RTS+ |
| 3 | RXD+ | 8 | CTS+ |
| 4 | RXD- | 9 | CTS- |
| 5 | GND | | |

COM3 and COM4 Ports

Connector size: DB-9 port

Connector location: COM4

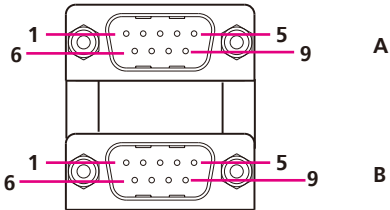

COM3A

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | COM3_DCD | 6 | COM3_DSR |
| 2 | COM3_RXD | 7 | COM3_RTS |
| 3 | COM3_TXD | 8 | COM3_CTS |
| 4 | COM3_DTR | 9 | COM3_RI |
| 5 | GND | | |

COM4B

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | COM4_DCD | 6 | COM4_DSR |
| 2 | COM4_RXD | 7 | COM4_RTS |
| 3 | COM4_TXD | 8 | COM4_CTS |
| 4 | COM4_DTR | 9 | COM4_RI |
| 5 | GND | | |

USB 8-9 Connector

Connector size: 1x6 6-pin JST wafer, 2.5 mm pitch

Connector location: J7



| Pin | Definition |
|-----|------------|
| 1 | USB_VCC45 |
| 2 | USB_8N |
| 3 | USB_8P |
| 4 | USB_9N |
| 5 | USB_9P |
| 6 | USB_GND |

Internal Connectors

COM5 Connector

Connector type: 2x5 10-pin boxed header, 1.0mm

Connector location: J14



| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | SIO_DCD#5 | 2 | SIO_RXD5 |
| 3 | SIO_TXD5 | 4 | SIO_DTR#5 |
| 5 | IO_GND | 6 | SIO_DSR#5 |
| 7 | SIO_RTS#5 | 8 | SIO_CTS#5 |
| 9 | SIO_RI#5 | 10 | IO_GND |

COM6 Connector

Connector type: 2x5 10-pin boxed header, 1.0mm

Connector location: J15



| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | SIO_DCD#6 | 2 | SIO_RXD6 |
| 3 | SIO_TXD6 | 4 | SIO_DTR#6 |
| 5 | IO_GND | 6 | SIO_DSR#6 |
| 7 | SIO_RTS#6 | 8 | SIO_CTS#6 |
| 9 | SIO_RI#6 | 10 | IO_GND |

Remote Power On/Off Switch

Connector type: 1x2 2-pin header, JST 2.0mm

Connector location: J3




| Pin | Definition |
|-----|------------|
| 1 | PSON# |
| 2 | GND |

CPU Fan Connector

Connector type: 1x4, 4-pin Wafer, 2.54mm-M-180

Connector location: J2





| Pin | Definition |
|-----|----------------|
| 1 | GND |
| 2 | VCC_12 |
| 3 | CPU1_FAN_SPEED |
| 4 | CPU1_FANPWM |

Internal Power/HDD/LAN Power/LAN Active LED (RTC Connector)

Connector type: 2x7 14-pin header 2.54mm-M-180

Connector location: J4

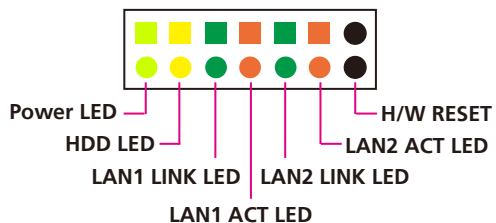

| Pin | Description | Pin | Description |
|-----|-------------|-----|-------------------|
| 1 | POWER_OK | 2 | VCC_LEDPOWER |
| 3 | HDD_LED# | 4 | HDD_LEDPOWER |
| 5 | LAN1_LINK# | 6 | LAN1LINK_LEDPOWER |
| 7 | LAN1_ACT# | 8 | LAN1ACT_LEDPOWER |
| 9 | LAN2_LINK# | 10 | LAN2LINK_LEDPOWER |
| 11 | LAN2_ACT# | 12 | LAN2ACT_LEDPOWER |
| 13 | H/W RESET | 14 | GND |

SMBus Pin Header

Connector type: 1x3 3-pin header 2.54mm-M-180

Connector location: JP4



| Pin | Definition |
|-----|------------|
| 1 | SMbus_CLK |
| 2 | SMbus_data |
| 3 | GND |

Mic-in Connector

Connector type: 1x4 4-pin header 2.54mm-M-180

Connector location: JP2




| Pin | Definition |
|-----|------------|
| 1 | Mic-in L |
| 2 | Mic JD |
| 3 | GND |
| 4 | Mic-in R |

Power Output Connector

Connector type: 2x2 4-pin AUX 3.5mm

Connector location: CON1




| Pin | Definition |
|-----|------------|
| 1 | GND |
| 2 | GND |
| 3 | VIN Power |
| 4 | VIN Power |

LVDS Connector

Connector type: 20-pin DF13-20DP 1.25mm

Connector location: CN1

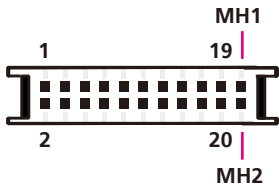


| Pin | Definition | Pin | Definition |
|-----|--------------------|-----|--------------------|
| 1 | LVDS_DDCCLK | 2 | LVDS_DDCDATA |
| 3 | VCC_LCD(5V Or3.3V) | 4 | LVDS_A0P |
| 5 | NC | 6 | LVDS_A0N |
| 7 | NC | 8 | VCC_LCD(5V Or3.3V) |
| 9 | GND | 10 | LVDS_A1P |
| 11 | LVDS_ACLKP | 12 | LVDS_A1N |
| 13 | LVDS_ACLKN | 14 | GND |
| 15 | GND | 16 | V_INV (12V) |
| 17 | LVDS_A2P | 18 | V_INV (12V) |
| 19 | LVDS_A2N | 20 | GND |

Panel CCFL Connector

Connector type: 1x7 7-pin header JST-2.5mm-M-180

Connector location: J1




| Pin | Definition |
|-----|--------------|
| 1 | Vcc5 |
| 2 | V_INV (12V) |
| 3 | V_INV (12V) |
| 4 | CCFLBKLTCTRL |
| 5 | GND |
| 6 | GND |
| 7 | M_BKLTEN |

CompactFlash

Connector type: CompactFlash Type III H:6.3mm SMD

Connector location: IDE1

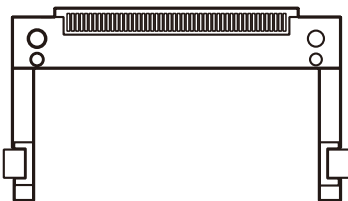


| Pin | Description | Pin | Description |
|-----|-------------|-----|-------------|
| 1 | GND | 2 | SDD3A |
| 3 | SDD4A | 4 | SDD5A |
| 5 | SDD6A | 6 | SDD7A |
| 7 | SDCS#1 | 8 | GND |
| 9 | GND | 10 | GND |
| 11 | GND | 12 | GND |
| 13 | VCC | 14 | GND |
| 15 | GND | 16 | GND |
| 17 | GND | 18 | SDA2A |
| 19 | SDA1A | 20 | SDA0A |
| 21 | SDD0A | 22 | SDD1A |
| 23 | SDD2A | 24 | NC |
| 25 | CF_CD2# | 26 | CF_CD1# |
| 27 | SDD11A | 28 | SDD12A |

| Pin | Description | Pin | Description |
|-----|-------------|-----|-------------|
| 29 | SDD13A | 30 | SDD14A |
| 31 | SDD15A | 32 | SDCS#3 |
| 33 | NC | 34 | SDIOR# |
| 35 | SDIOW# | 36 | VCC |
| 37 | HDIRQ14 | 38 | VCC |
| 39 | CF_SEL# | 40 | NC |
| 41 | IDERST# | 42 | SIORDY |
| 43 | SDREQ | 44 | SDDACK# |
| 45 | IDEACTP# | 46 | DIAG# |
| 47 | SDD8A | 48 | SDD9A |
| 49 | SDD10A | 50 | GND |

Mini-PCle Slot

Connector location: CN5

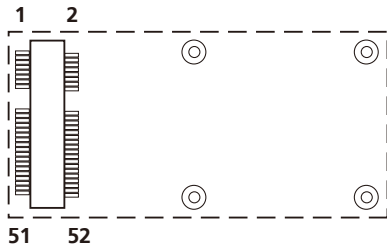


| Pin | Definition | Pin | Definition |
|-----|--------------------|-----|----------------|
| 1 | PCIE_WAKE# | 2 | +V3.3A_MINI |
| 3 | NC | 4 | GND |
| 5 | NC | 6 | +V1.5S_MINI |
| 7 | PCIE_MINI_CLKREQ#1 | 8 | SIM_PWER |
| 9 | GND | 10 | SIM_DATA |
| 11 | CLK_N | 12 | SIM_CLK |
| 13 | CLK_P | 14 | SIM_REST |
| 15 | GND | 16 | SIM_VCCP |
| 17 | NC | 18 | GND |
| 19 | NC | 20 | MINICARD1_DIS# |
| 21 | GND | 22 | PCI_RST |
| 23 | PCleRX_N | 24 | +V3.3A_MINI |
| 25 | PCleRX_P | 26 | GND |
| 27 | GND | 28 | +V1.5S_MINI |
| 29 | GND | 30 | SMB_CLK |

| Pin | Definition | Pin | Definition |
|-----|-------------|-----|-------------|
| 31 | PCleTX_N | 32 | SMB_DATA |
| 33 | PCleTX_P | 34 | GND |
| 35 | GND | 36 | USB_DATA_N |
| 37 | GND | 38 | USB_DATA_P |
| 39 | +V3.3A_MINI | 40 | GND |
| 41 | +V3.3A_MINI | 42 | NC |
| 43 | GND | 44 | LED_WLAN_N |
| 45 | NC | 46 | NC |
| 47 | NC | 48 | +V1.5S_MINI |
| 49 | NC | 50 | GND |
| 51 | NC | 52 | +V3.3A_MINI |
| MH1 | GND | MH2 | GND |
| MH3 | GND | MH4 | GND |
| MH6 | GND | | |

PCI Slot (Low Profile)

Connector type: 120-pin H:9.6mm 180D GOLD FLASH DIP 5V

Connector location: CN6



| Definition | | | | | |
|------------|----------|---------|---------------|--------|---------|
| Pin | A | B | Pin | A | B |
| 1 | TRST# | -12V | 32 | AD16 | AD17 |
| 2 | +12V | TCK | 33 | +3.3V | C/BE2# |
| 3 | TMS | GND | 34 | FRAME# | GND |
| 4 | TDI | TDO | 35 | GND | IRDY# |
| 5 | +5V | +5V | 36 | TRDY# | +3.3V |
| 6 | INTA# | +5V | 37 | GND | DEVSEL# |
| 7 | INTC# | INTB# | 38 | STOP# | GND |
| 8 | +5V | INTD# | 39 | +3.3V | LOCK# |
| 9 | RSV1 | PRSNT1# | 40 | SMBCLK | PERR# |
| 10 | +5V | RSV5 | 41 | SMBDAT | +3.3V |
| 11 | RSV2 | PRSNT2# | 42 | GND | SERR# |
| 12 | GND | GND | 43 | PAR | +3.3V |
| 13 | GND | GND | 44 | AD15 | C/BE1# |
| 14 | +3.3Vaux | RSV6 | 45 | +3.3V | AD14 |
| 15 | RST# | GRPIMD | 46 | AD13 | GND |
| 16 | +5V | CLK | 47 | AD11 | AD12 |
| 17 | GNT# | GND | 48 | GND | AD10 |
| 18 | GND | REQ# | 49 | AD9 | GND |
| 19 | PME# | +5V | CONNECTOR KEY | | |
| 20 | AD30 | AD31 | | | |
| 21 | +3.3V | AD29 | 52 | C/BE0# | AD8 |
| 22 | AD28 | GND | 53 | +3.3V | AD7 |
| 23 | AD26 | AD27 | 54 | AD6 | +3.3V |
| 24 | GND | AD25 | 55 | AD4 | AD5 |
| 25 | AD24 | +3.3V | 56 | GND | AD3 |
| 26 | IDSEL | C/BE3# | 57 | AD2 | GND |
| 27 | +3.3V | AD23 | 58 | AD0 | AD1 |

| | | | | | |
|----|------|-------|----|--------|--------|
| 28 | AD22 | GND | 59 | +5V | +5V |
| 29 | AD20 | AD21 | 60 | REQ64# | ACK64# |
| 30 | GND | AD19 | 61 | +5V | +5V |
| 31 | AD18 | +3.3V | 62 | +5V | +5V |

Chapter 3: System Setup

Removing the Chassis Cover




Prior to removing the chassis cover, make sure the unit's power is off and disconnected from the power sources to prevent electric shock or system damage.

1. The screws on the top cover are used to secure the cover to the chassis.
2. Remove these screws and then put them in a safe place for later use.




The dots denote the locations of the screws.

3. The SODIMM, Mini-PCIe and CompactFlash sockets are readily accessible upon removing the cover.

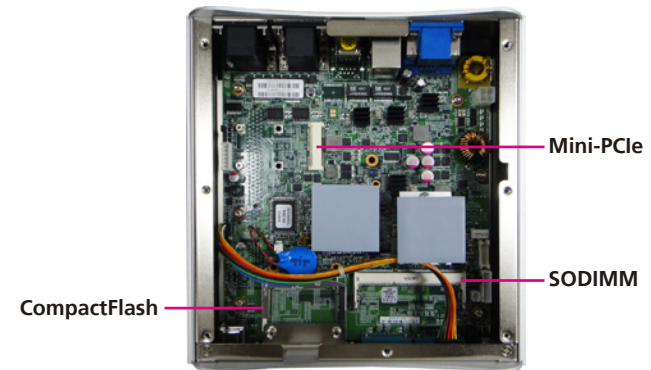


Installing a SODIMM


1. Locate the SODIMM socket on the board.

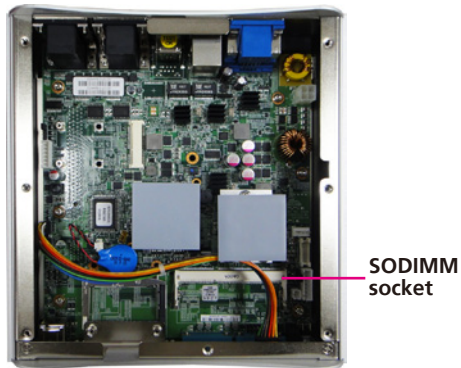

2. Insert the module into the socket at an approximately 30 degrees angle. Apply firm even pressure to each end of the module until it slips into the socket. The gold-plated connector on the edge of the module will almost completely disappear inside the socket.

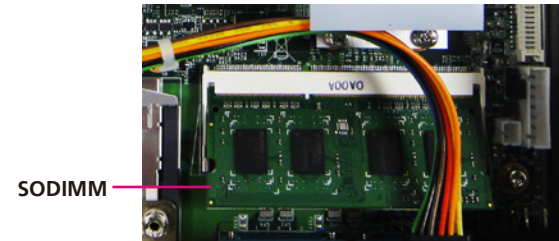

3. Push the module down until the clips on both sides of the socket lock into position. You will hear a distinctive “click”, indicating the module is correctly locked into position.

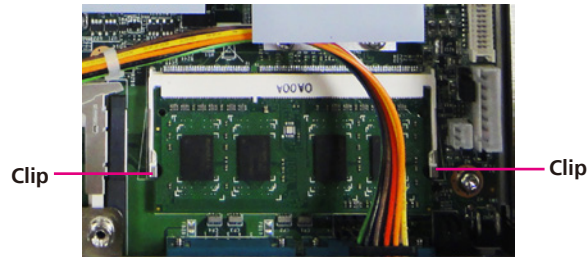


Installing a Wireless LAN Module

1. Locate the Mini PCI Express slot on the board.



Mini PCI Express slot


2. Insert the wireless LAN module into the Mini PCI Express slot at a 45 degrees angle until the gold-plated connector on the edge of the module completely disappears inside the slot.

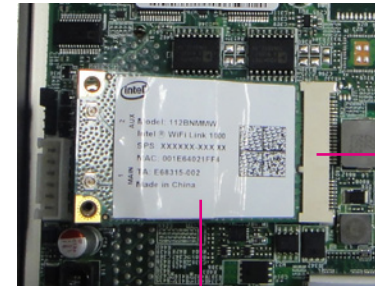

Mini PCI Express slot



Wireless LAN module

3. Push the module down and then secure it with mounting screws.

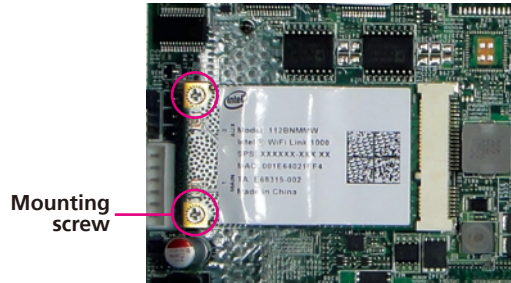


Installing a SATA Hard Drive (NISE 2100/2100A)


1. With the bottom side of the chassis facing up, remove the mounting screws of the bottom cover and then remove the cover.
2. Remove the 4 mounting screws that secure the drive bay to the chassis.

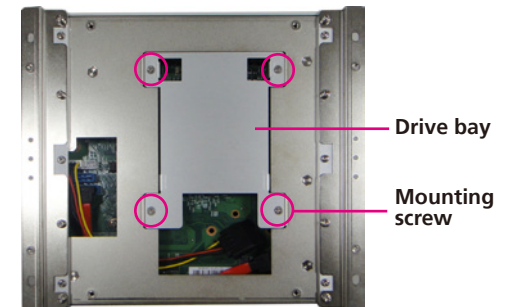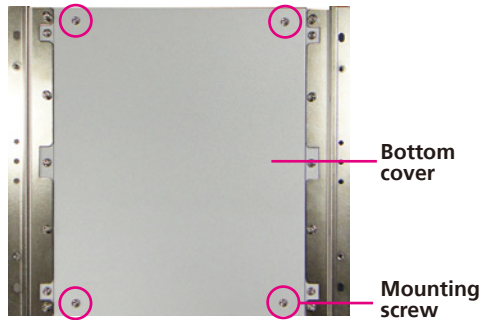

3. Noticeable are 2 cables upon removing the drive bay. These are the SATA data cable and the SATA power cable.

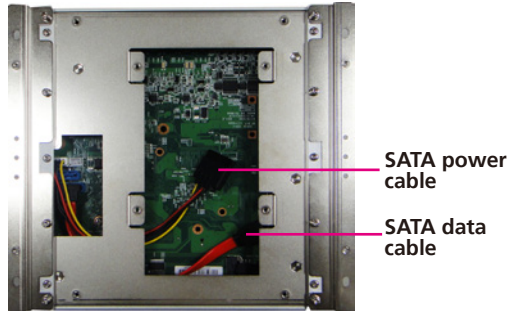


4. The drive bay is used to hold a SATA hard drive.

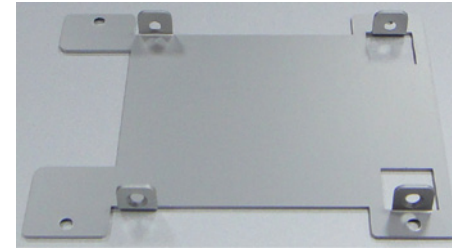


5. Place the SATA hard drive on the drive bay.

Align the mounting holes that are on the sides of the SATA drive with the mounting holes on the drive bay and then use the provided mounting screws to secure the drive in place.


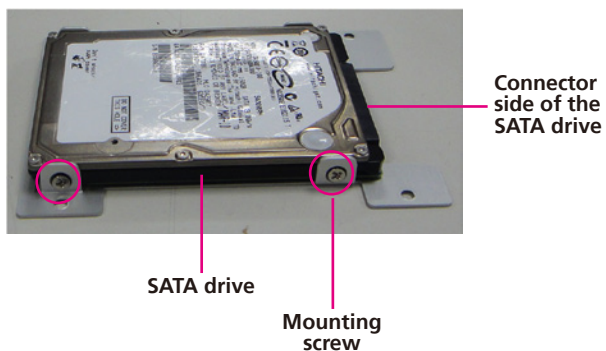


6. Mount the drive bay back into the chassis and then secure it with mounting screws.
7. Connect the SATA data cable and SATA power cable to the connectors on the SATA drive.

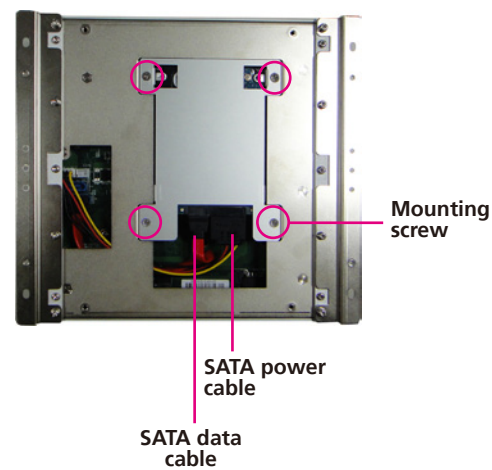

Installing a SATA Hard Drive (NISE 2110/2110A)


1. With the bottom side of the chassis facing up, remove the mounting screws of the bottom cover and then remove the cover.
2. Remove the 4 mounting screws that secure the drive bay to the chassis and then remove the drive bay.

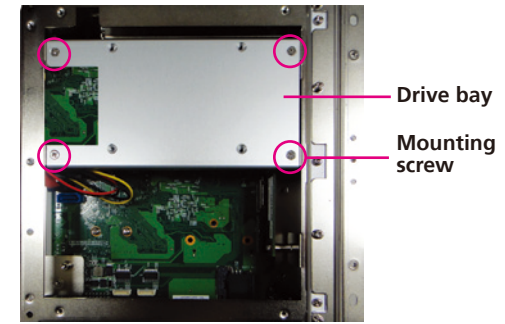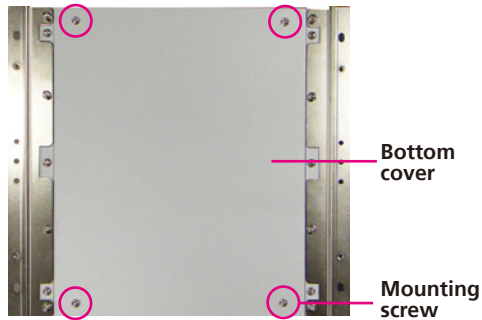


3. The drive bay is used to hold a SATA hard drive.




4. Place the SATA hard drive on the drive bay. Align the mounting holes that are on the SATA drive with the mounting holes on the drive bay.

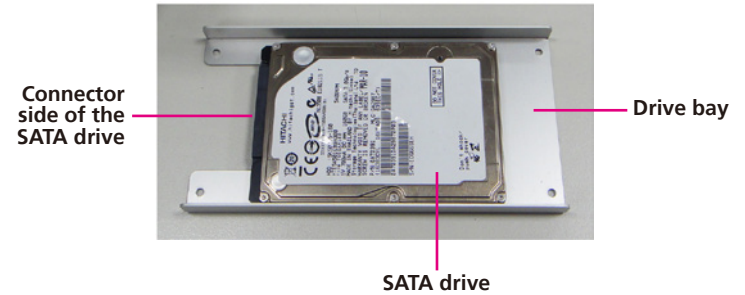


5. Turn to the other side of the bay and then use the provided mounting screws to secure the SATA drive to the drive bay.

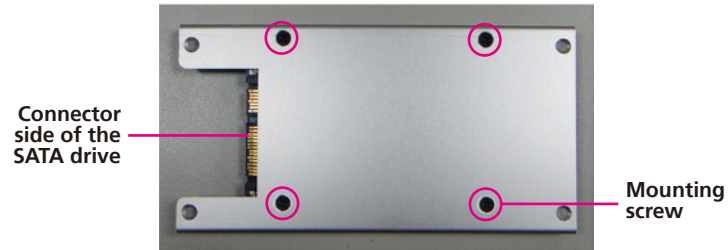

6. Connect the SATA data cable and SATA power cable to the connectors on the SATA drive.

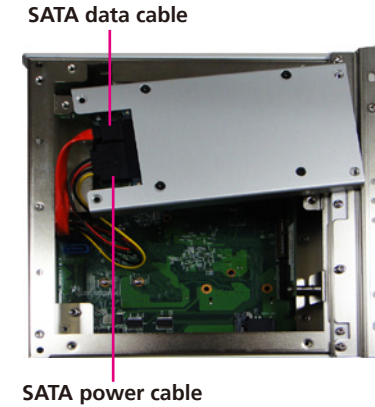


7. Mount the drive bay back into the chassis and then secure it with mounting screws.


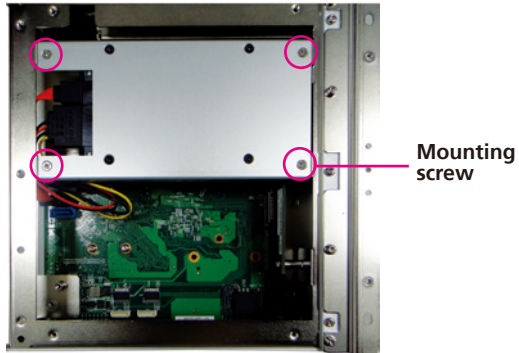


Installing a SATA DOM

1. Locate the SATA connector on the board.

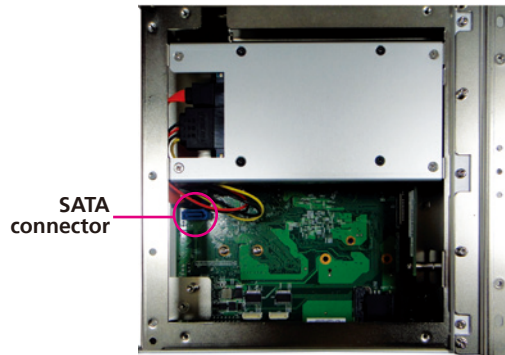

2. Align the SATA connector located on the solder side of the SATA DOM to the SATA connector that is on the board and then press it down firmly. Secure the SATA DOM with the provided mounting screw.

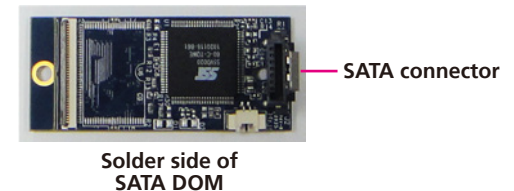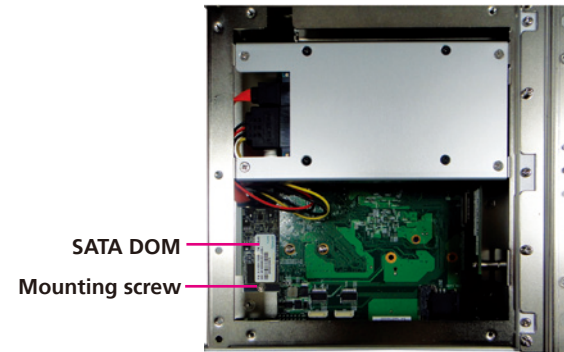


Installing a CompactFlash Card



The installation instructions in this section apply to both the NISE 2100/2100A and NISE 2110/2110A systems. Illustrations used are that of the NISE 2100/2100A.

1. The CompactFlash card must be inserted from the front side of the chassis.

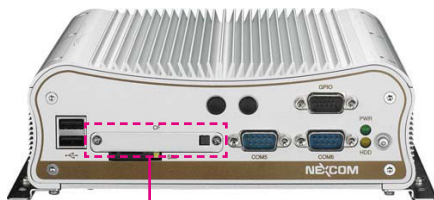

CompactFlash
socket cover

2. Remove the mounting screws of the CompactFlash socket's cover.




3. Remove the socket's cover to access the CompactFlash socket.



CompactFlash socket


4. With the CompactFlash card's label facing up, insert the card into the socket.

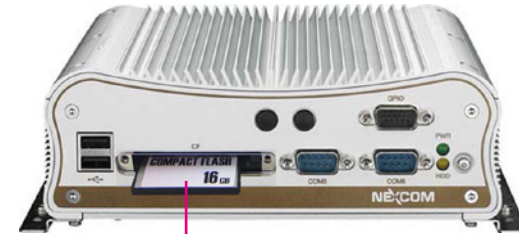

CompactFlash card



5. Push the eject button to take out the card.

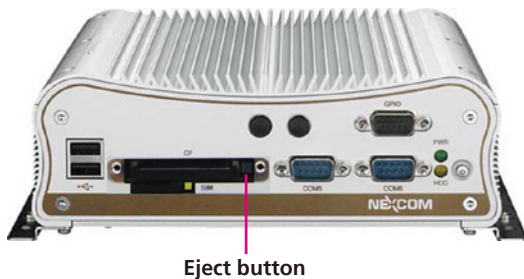

Chapter 4: BIOS Setup

This chapter describes how to use the BIOS setup program for the NISE 2100/2110 Series. The BIOS screens provided in this chapter are for reference only and may change if the BIOS is updated in the future.

To check for the latest updates and revisions, visit the NEXCOM Web site at www.nexcom.com.tw.

About BIOS Setup

The BIOS (Basic Input and Output System) Setup program is a menu driven utility that enables you to make changes to the system configuration and tailor your system to suit your individual work needs. It is a ROM-based configuration utility that displays the system's configuration status and provides you with a tool to set system parameters.

These parameters are stored in non-volatile battery-backed-up CMOS RAM that saves this information even when the power is turned off. When the system is turned back on, the system is configured with the values found in CMOS.

With easy-to-use pull down menus, you can configure such items as:

- Hard drives, diskette drives, and peripherals
- Video display type and display options
- Password protection from unauthorized use
- Power management features

The settings made in the setup program affect how the computer performs. It is important, therefore, first to try to understand all the Setup options, and second, to make settings appropriate for the way you use the computer.

When to Configure the BIOS

This program should be executed under the following conditions:

- When changing the system configuration
- When a configuration error is detected by the system and you are prompted to make changes to the Setup program
- When resetting the system clock
- When redefining the communication ports to prevent any conflicts
- When making changes to the Power Management configuration
- When changing the password or making other changes to the security setup

Normally, CMOS setup is needed when the system hardware is not consistent with the information contained in the CMOS RAM, whenever the CMOS RAM has lost power, or the system features need to be changed.

Default Configuration

Most of the configuration settings are either predefined according to the Load Optimal Defaults settings which are stored in the BIOS or are automatically detected and configured without requiring any actions. There are a few settings that you may need to change depending on your system configuration.

Entering Setup

When the system is powered on, the BIOS will enter the Power-On Self Test (POST) routines. These routines perform various diagnostic checks; if an error is encountered, the error will be reported in one of two different ways:

- If the error occurs before the display device is initialized, a series of beeps will be transmitted.
- If the error occurs after the display device is initialized, the screen will display the error message.

Powering on the computer and immediately pressing allows you to enter Setup. Another way to enter Setup is to power on the computer and wait for the following message during the POST:

```
TO ENTER SETUP BEFORE BOOT
PRESS <CTRL-ALT-ESC>
Press the <Del> key to enter Setup:
```

Legends

| Key | Function |
|-----------------------|--|
| Right and Left arrows | Moves the highlight left or right to select a menu. |
| Up and Down arrows | Moves the highlight up or down between sub-menus or fields. |
| <Esc> | Exits to the BIOS Setup Utility. |
| + (plus key) | Scrolls forward through the values or options of the highlighted field. |
| - (minus key) | Scrolls backward through the values or options of the highlighted field. |
| Tab | Selects a field. |
| <F1> | Displays General Help. |
| <F10> | Saves and exits the Setup program. |
| <Enter> | Press <Enter> to enter the highlighted submenu. |

Scroll Bar

When a scroll bar appears to the right of the setup screen, it indicates that there are more available fields not shown on the screen. Use the up and down arrow keys to scroll through all the available fields.

Submenu


When “▶” appears on the left of a particular field, it indicates that a submenu which contains additional options are available for that field. To display the submenu, move the highlight to that field and press <Enter>.

BIOS Setup Utility

Once you enter the AMI BIOS Setup Utility, the Main Menu will appear on the screen. The main menu allows you to select from six setup functions and one exit choices. Use arrow keys to select among the items and press <Enter> to accept or enter the submenu.

Main

The Main menu is the first screen that you will see when you enter the BIOS Setup Utility.

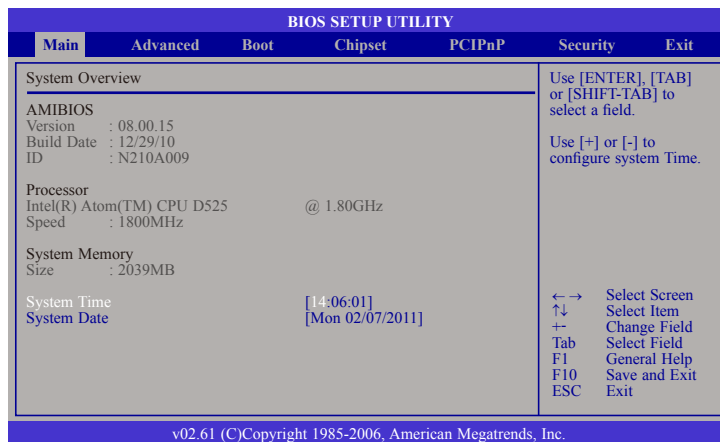

AMI BIOS

Displays the detected BIOS information.

Processor

Displays the detected processor information.

System Memory

Displays the detected system memory information.

System Time

The time format is <hour>, <minute>, <second>. The time is based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00. Hour displays hours from 00 to 23. Minute displays minutes from 00 to 59. Second displays seconds from 00 to 59.

System Date


The date format is <day>, <month>, <date>, <year>. Day displays a day, from Sunday to Saturday. Month displays the month, from January to December. Date displays the date, from 1 to 31. Year displays the year, from 1999 to 2099.

Advanced

The Advanced menu allows you to configure your system for basic operation. Some entries are defaults required by the system board, while others, if enabled, will improve the performance of your system or let you set some features according to your preference.



Setting incorrect field values may cause the system to malfunction.

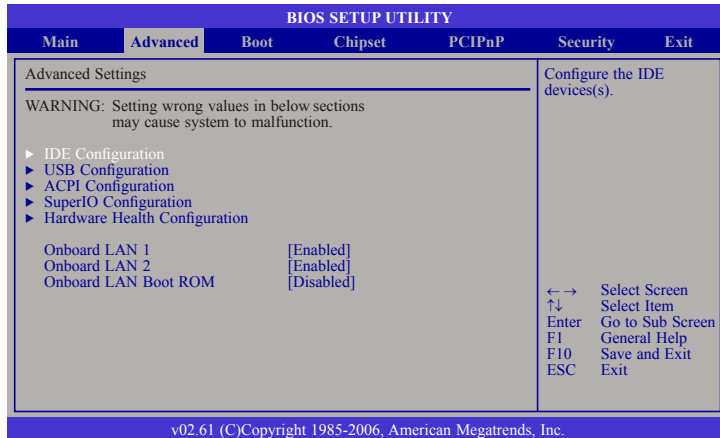

IDE Configuration

This section is used to configure the IDE drives.

USB Configuration

This section is used to configure USB devices.

ACPI Configuration

This section is used to configure the Advanced ACPI configuration.

Super IO Configuration

This section is used to configure the I/O functions supported by the on-board Super I/O chip.

Hardware Health Configuration

This section is used to configure the hardware monitoring events such as temperature, fan speed and voltages.

Onboard LAN 1 and Onboard LAN 2

This section is used to enable or disable the onboard LAN.


Onboard LAN Boot ROM

Enable this field if you wish to use the boot ROM (instead of a disk drive) to boot-up the system and access the local area network directly.

If you wish to change the boot ROM's settings, type the <Shift> and <F10> keys simultaneously when prompted during boot-up. Take note: you will be able to access the boot ROM's program (by typing <Shift> + <F10>) only when this field is enabled.

IDE Configuration

This section is used to configure the IDE drives.

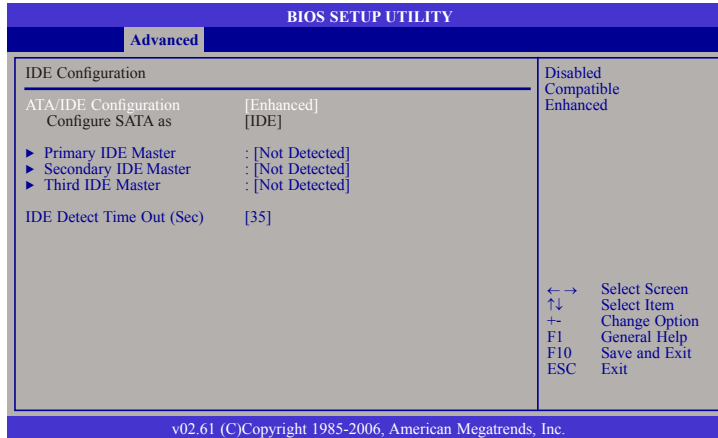

Primary IDE Master to Third IDE Master

When you enter the BIOS Setup Utility, the BIOS will auto detect the existing IDE devices then displays the status of the detected devices. To configure an IDE drive, move the cursor to a field then press <Enter>.

IDE Detect Time Out (Sec)

Selects the time out value for detecting ATA/ATAPI devices.

ATA/IDE Configuration

This field is used to configure the IDE drives. The options are Disabled, Compatible and Enhanced.


Configure SATA As

IDE This option configures the Serial ATA drives as Parallel ATA physical storage device.

AHCI This option configures the Serial ATA drives to use AHCI (Advanced Host Controller Interface). AHCI allows the storage driver to enable the advanced Serial ATA features which will increase storage performance.

USB Configuration

This section is used to configure USB devices.

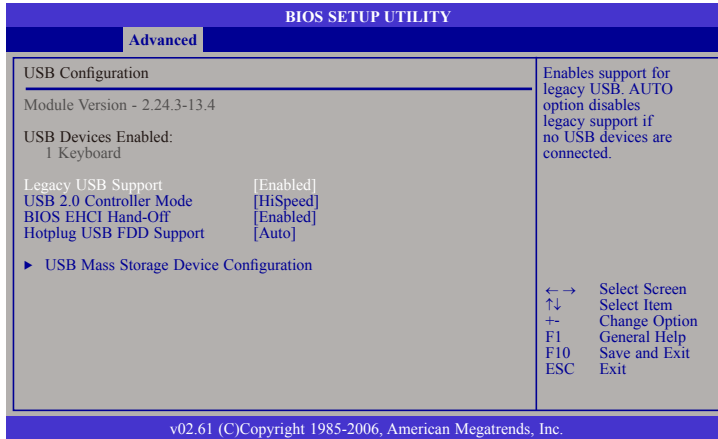

Legacy USB Support

Due to the limited space of the BIOS ROM, the support for legacy USB keyboard (in DOS mode) is by default set to Disabled. With more BIOS ROM space available, it will be able to support more advanced features as well as provide compatibility to a wide variety of peripheral devices.

If a PS/2 keyboard is not available and you need to use a USB keyboard to install Windows (installation is performed in DOS mode) or run any program under DOS, set this field to Enabled.

USB 2.0 Controller Mode

Sets the USB 2.0 controller mode to HiSpeed (480 Mbps) or FullSpeed (12 Mbps).

BIOS EHCI Hand-Off


Enable this field when using operating systems without the EHCI hand-off support.

Hotplug USB FDD Support

Enables support for USB FDD hot plug.

Super IO Configuration

This section is used to configure the I/O functions supported by the on-board Super I/O chip.

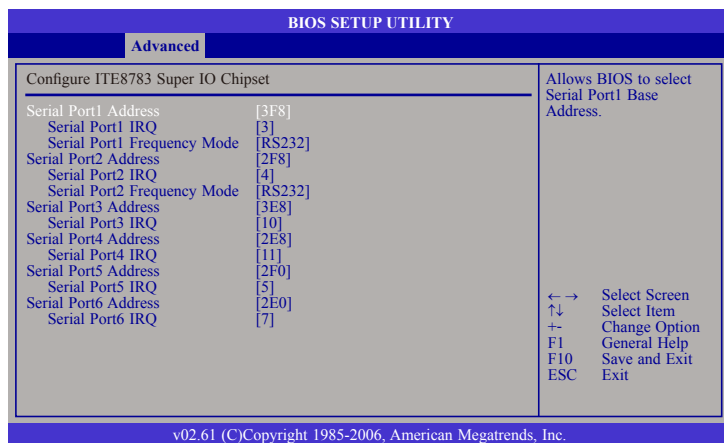

Serial Port1 Address to Serial Port6 Address

Auto The system will automatically select an I/O address for the on-board serial port.


3F8, 2F8, 3E8, 2E8, 2F0, 2E0 Allows you to manually select an I/O address for the onboard serial port.

Disabled Disables the onboard serial port.

Serial Port1 IRQ to Serial Port6 IRQ


These fields are used to select an IRQ for the onboard serial port 1, 2, 3, 4, 5 or 6.

Serial Port1 Frequency Mode

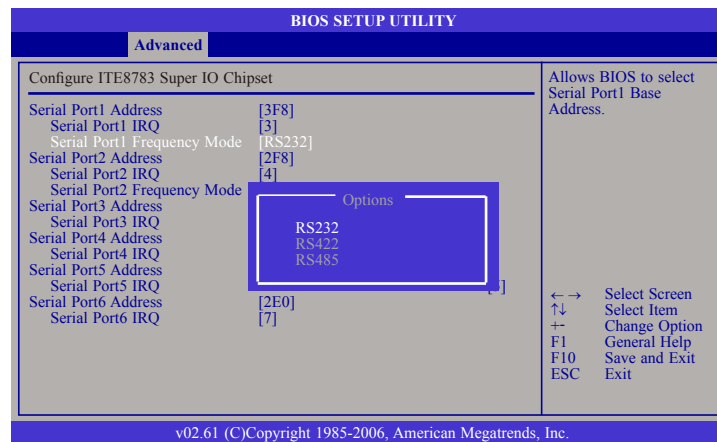


This field is used to select the frequency mode of serial port 1. The options are RS232, RS422 and RS485.

Serial Port2 Frequency Mode

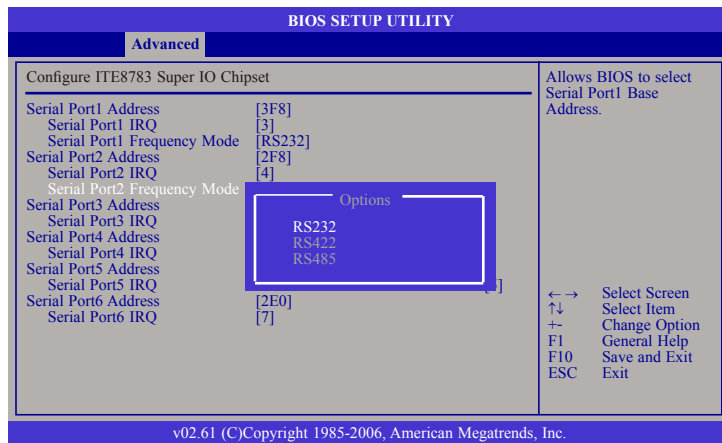


This field is used to select the frequency mode of serial port 2. The options are RS232, RS422 and RS485.

If you selected RS422 or RS485 in the "Serial Port1 Frequency Mode" and/or "Serial Port2 Frequency Mode" field, the "Serial Port1 Frequency Select" and/or "Serial Port2 Frequency Select" field will appear prompting you to select the frequency setting. The options are 115200 bps and 921600 bps.

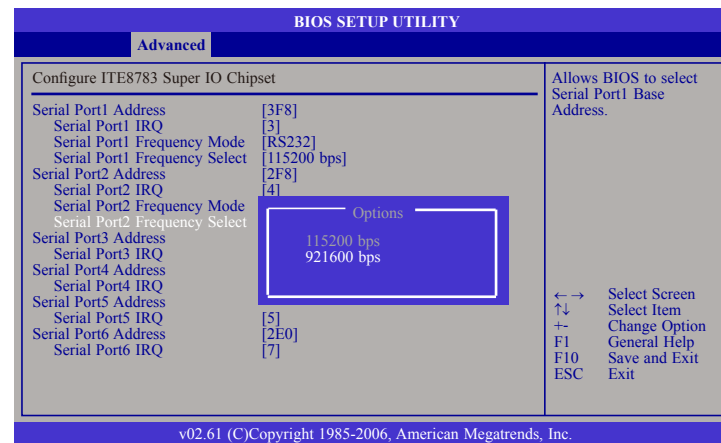

Hardware Health Configuration

This section is used to configure the hardware monitoring events such as temperature, fan speed and voltages.

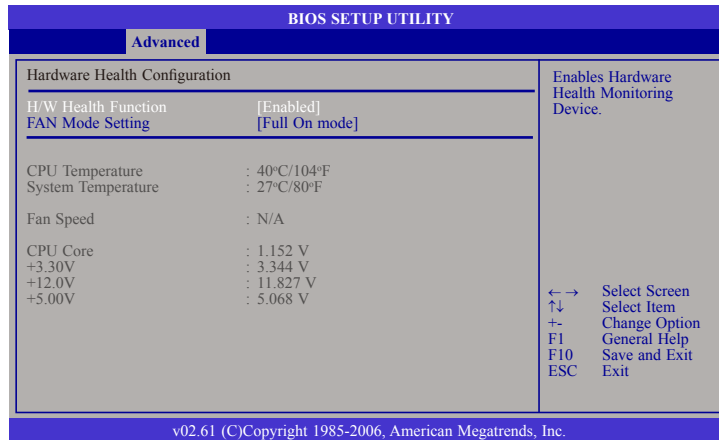

CPU Core to +5.00V

Detects and displays the output voltages.


H/W Health Function

Enables or disables the hardware monitoring function.

CPU Temperature and System Temperature

Detects and displays the current temperature of the CPU and the internal temperature of the system.

Boot

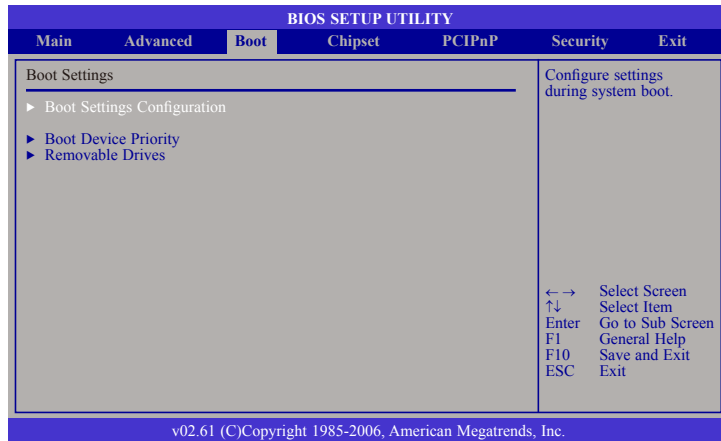

Boot Settings Configuration

This section is used to configure settings during system boot.

Boot Device Priority


This section is used to select the boot priority sequence of the devices.

Removable Drives

This section is used to select the boot priority sequence of the removable drives.

Boot Settings Configuration

This section is used to configure settings during system boot.

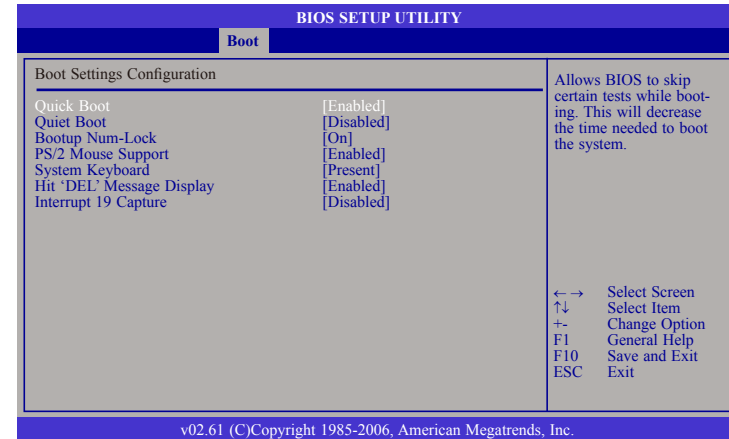

Quick Boot

When Enabled, the BIOS will shorten or skip some check items during POST. This will decrease the time needed to boot the system.

Quiet Boot

Enabled Displays OEM logo instead of the POST messages.
 Disabled Displays normal POST messages.

Bootup Num-Lock

This allows you to determine the default state of the numeric keypad. By default, the system boots up with NumLock on wherein the function of the numeric keypad is the number keys. When set to Off, the function of the numeric keypad is the arrow keys.

PS/2 Mouse Support

The options are Auto, Enabled and Disabled.

System Keyboard

Detects the system keyboard.

Hit 'DEL' Message Display


When enabled, the system displays the "Press DEL to run Setup" message during POST.

Interrupt 19 Capture

When enabled, it allows the optional ROM to trap interrupt 19.

Boot Device Priority

This section is used to select the boot priority sequence of the devices.

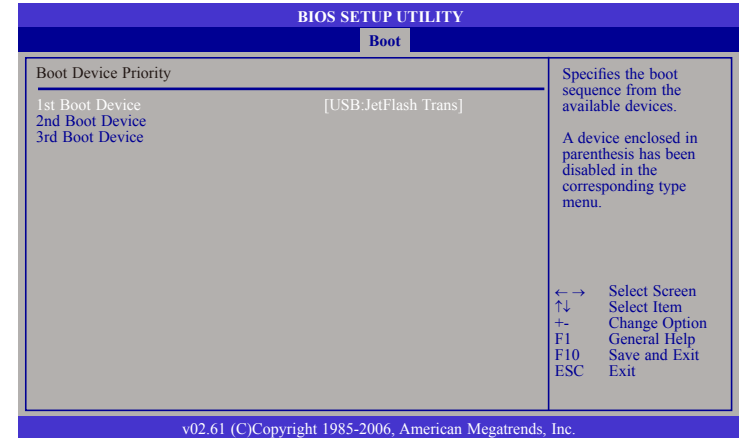

1st Boot Device to 3rd Boot Device


Selects the drive to boot first, second and third in the "1st Boot Device", "2nd Boot Device" and "3rd Boot Device" fields respectively. The BIOS will boot the operating system according to the sequence of the drive selected.

Chipset

This section is used to configure the system based on the specific features of the chipset.




Setting incorrect field values may cause the system to malfunction.

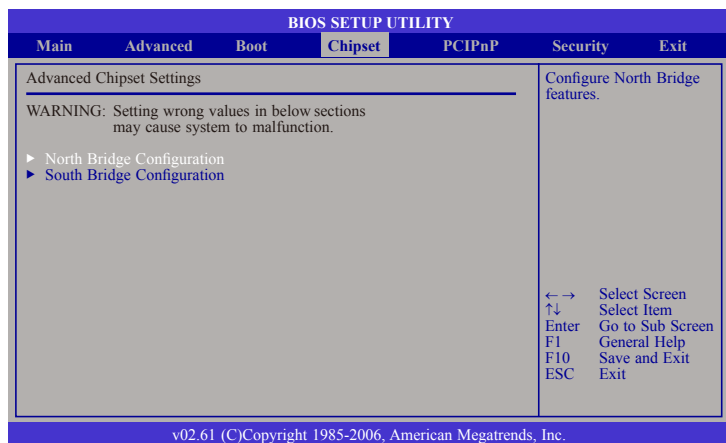

North Bridge Configuration

This section is used to configure the north bridge features.

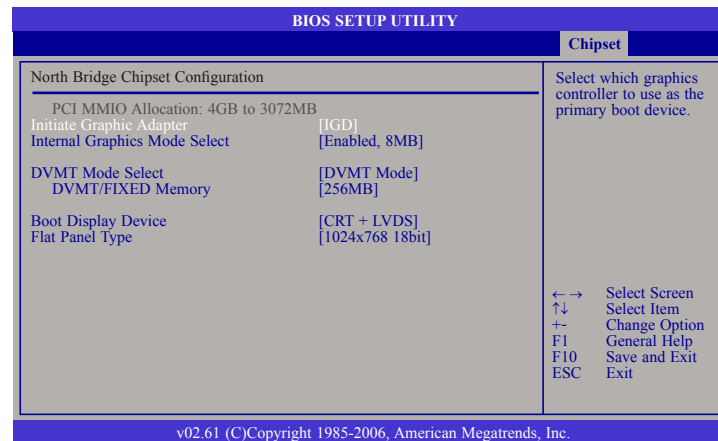

Initiate Graphic Adapter

Selects the graphics controller to use as the primary boot device.

Internal Graphics Mode Select

Selects the amount of system memory used by the internal graphics device.

DVMT Mode Select

The options are Fixed mode and DVMT mode.


DVMT/Fixed Memory

This field is used to select the graphics memory size used by DVMT/Fixed mode.

Boot Display Device

This field is used to select the type of display to use when the system boots.


Flat Panel Type

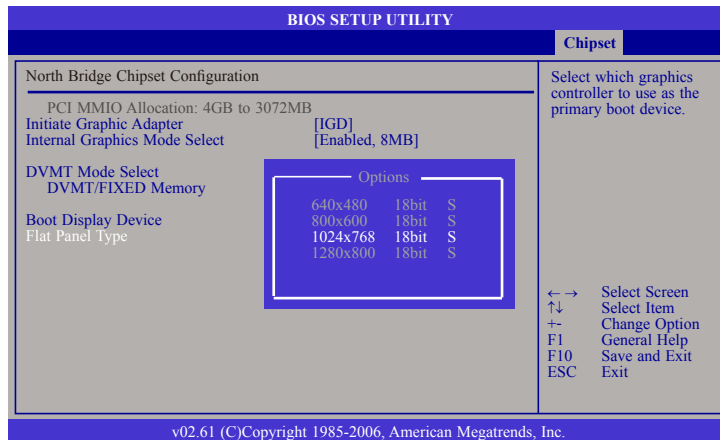

Selects the type of flat panel connected to the system. The supported LVDS are 640x480 18bit, 800x600 18bit, 1024x768 18bit and 1280x800 18bit.

South Bridge Configuration

This section is used to configure the south bridge features.

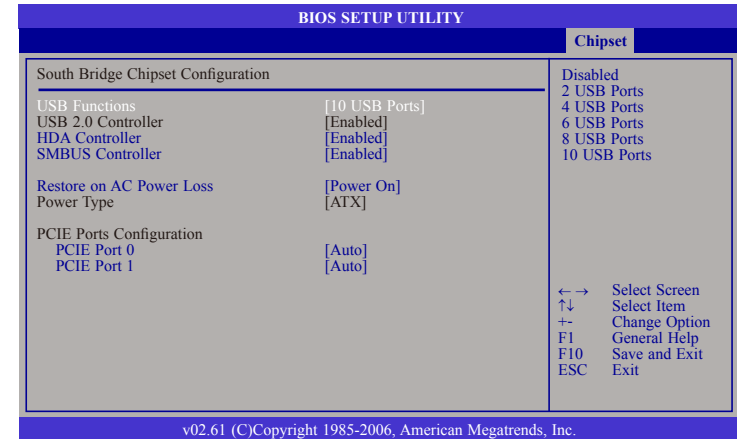

USB Functions

Enables or disables USB devices.

USB 2.0 Controller

This field is used to enable or disable the Enhanced Host Controller Interface (USB 2.0).


HDA Controller

Enables or disables the onboard audio.

SMBUS Controller

Enables or disables the SMBUS.

Restore On AC Power Loss

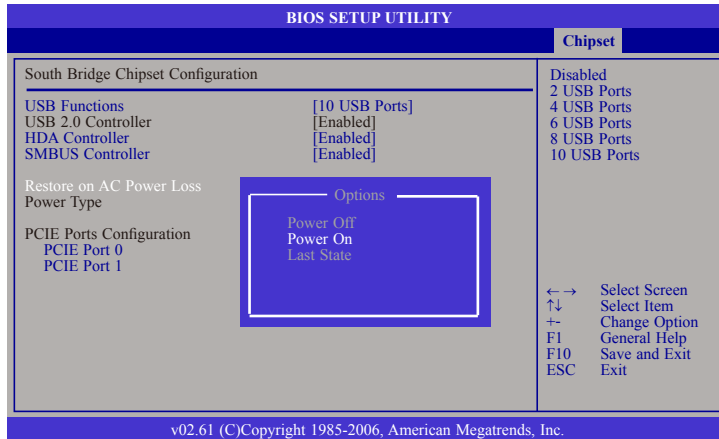

Power Off When power returns after an AC power failure, the system's power is off. You must press the Power button to power-on the system.

Power On When power returns after an AC power failure, the system will automatically power-on.

Last State When power returns after an AC power failure, the system will return to the state where you left off before power failure occurs. If the system's power is off when AC power failure occurs, it will remain off when power returns. If the system's power is on when AC power failure occurs, the system will power-on when power returns.

Power Type

Selects the type of power used.

PCIE Port 0 and PCIE port 1


Configures the PCIE ports.

PCIPnP

This section is used to configure settings for PCI/PnP devices.



Setting incorrect field values may cause the system to malfunction.

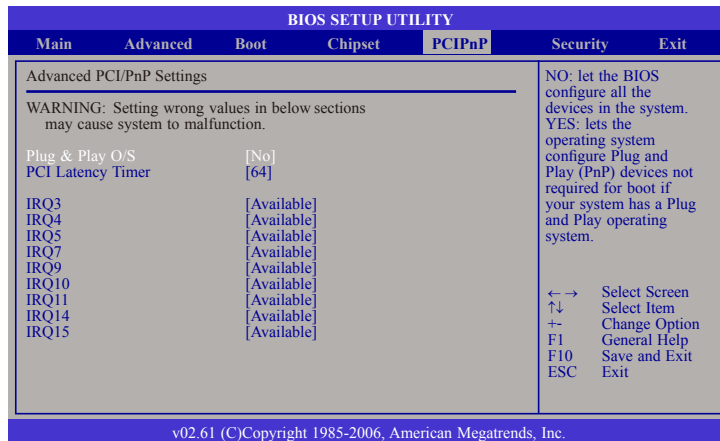

Plug & Play O/S

Yes Configures Plug and Play (PnP) devices that are not required to boot in a Plug and Play supported operating system.

No The BIOS configures all the devices in the system.

PCI Latency Timer


This feature is used to select the length of time each PCI device will control the bus before another takes over. The larger the value, the longer the PCI device can retain control of the bus. Since each access to the bus comes with an initial delay before any transaction can be made, low values for the PCI Latency Timer will reduce the effectiveness of the PCI bandwidth while higher values will improve it.

IRQ3 to IRQ15

Available The specified IRQ is available for PCI/PnP devices.

Reserved The specified IRQ is reserved for Legacy ISA devices.

Security

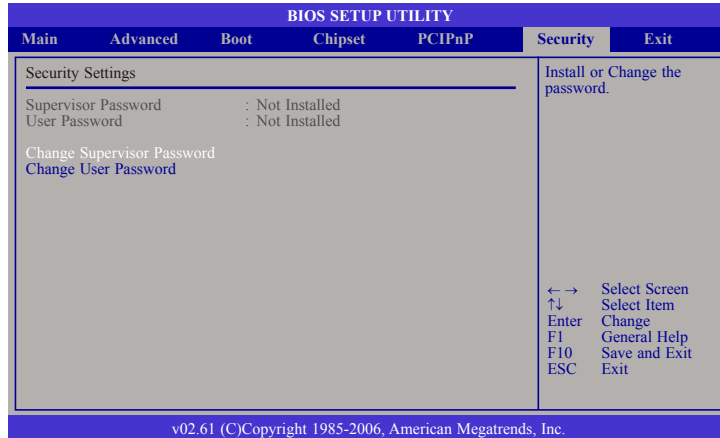

Change Supervisor Password

This field is used to set or change the supervisor password.

To set a new password:

1. Select the Change Supervisor Password field then press <Enter>.
2. Type your password in the dialog box then press <Enter>. You are limited to eight letters/numbers.
3. Press <Enter> to confirm the new password.
4. When the Password Installed dialog box appears, select OK.

To change the password, repeat the same steps above.

To clear the password, select Change Supervisor Password then press <Enter>. The Password Uninstalled dialog box will appear.

If you forgot the password, you can clear the password by erasing the CMOS RTC (Real Time Clock) RAM using the RTC Clear jumper. Refer to chapter 2 for more information.

Change User Password


This field is used to set or change the user password.

To set a new password:

1. Select the Change User Password field then press <Enter>.
2. Type your password in the dialog box then press <Enter>. You are limited to eight letters/numbers.
3. Press <Enter> to confirm the new password.
4. When the Password Installed dialog box appears, select OK.

To change the password, repeat the same steps above.

Exit

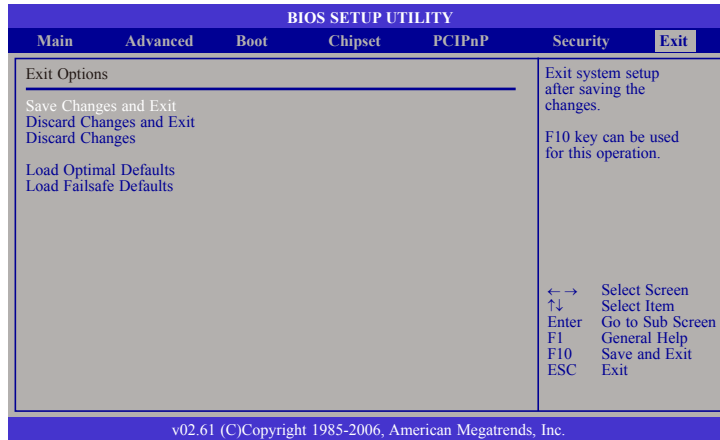

Save Changes and Exit

To save the changes and exit the Setup utility, select this field then press <Enter>. A dialog box will appear. Confirm by selecting Yes. You can also press <F10> to save and exit Setup.

Discard Changes and Exit

To exit the Setup utility without saving the changes, select this field then press <Enter>. You may be prompted to confirm again before exiting. You can also press <ESC> to exit without saving the changes.

Discard Changes

To discard the changes, select this field then press <Enter>. A dialog box will appear. Confirm by selecting Yes to discard all changes made and restore the previously saved settings.

Load Optimal Defaults

Loads the optimal default values from the BIOS ROM.

Load Failsafe Defaults

Loads the fail-safe default values from the BIOS ROM.

Appendix A: Power Consumption

Test Configuration

| System Configuration | Sys#1 |
|----------------------|--|
| Chassis | CHASSIS NISE 2110 Ver. A |
| CPU | Intel® Atom™ processor D525 (1M Cache, 1.80 GHz) |
| Memory | Apacer 1GB SOD PC3-10600 (industrial) |
| HDD | N/A |
| FDD | N/A |
| CD-ROM | N/A |
| CompactFlash device | Apacer 8G (industrial) |
| Power Supply | POWER ADAPTER SPI:G.P FSP65-AAB(N091) |
| Add-on Card | N/A |
| CPU Cooler | NISE 2100 HEATSINK |
| System Fan | N/A |
| Keyboard | LEMEL B-5201-P |
| Mouse | GENIVS EASY MOUSE PS/2 |

Power Consumption Measurement

Purpose

The purpose of the power consumption test is to verify the power dissipation of the system and the load of the power supply.

Test Equipment

PROVA CM-07 AC/DC CLAMP METER

Device Under Test

DUT: Sys #1

Test Procedure

1. Power up the DUT and then boot Windows XP.
2. Enter the standby mode (HDD power down).
3. Measure the power consumption and record it.
4. Run the Burn-in test program to apply 100% full loading.
5. Run the Intel Kpower program.
5. Run the LAN Packet Counter and Receive program.

Test Data

| | Sys #1 |
|-------------------|--------|
| | +12V |
| Full-Loading Mode | 2.18A |
| Total | 26.16W |
| Standby Mode | 0.9A |
| Total | 10.8W |

Appendix B: GPIO Programming guide

GPIO (General Purpose Input/Output) pins are provided for custom system design. This appendix provides definitions and its default setting for the ten GPIO pins in the NISE 2100/2110 Series. The pin definition is shown in the following table:

| Pin | GPIO Mode | Power On Default | Address | Pin | GPIO Mode | Power On Default | Address |
|-----|-----------|------------------|-------------|-----|-----------|------------------|-------------|
| 1 | VCC | - | - | 2 | GND | - | - |
| 3 | GPO | Low | 284h (Bit4) | 4 | GPI | High | 284h (Bit0) |
| 5 | GPO | Low | 284h (Bit5) | 6 | GPI | High | 284h (Bit1) |
| 7 | GPO | Low | 284h (Bit6) | 8 | GPI | High | 284h (Bit2) |
| 9 | GPO | Low | 284h (Bit7) | 10 | GPI | High | 284h (Bit3) |

J8 - GPIO connector


Control the GPO pin (3/5/7/9) level from I/O port 284h bit (4/5/6/7). The bit Set/Clear indicated output High/Low.

GPIO Programming Sample Code

```
#define GPIO_PORT 0x284
#define GPO3 (0x01 << 4)
#define GPO5 (0x01 << 5)
#define GPO7 (0x01 << 6)
#define GPO9 (0x01 << 7)
#define GPO3_HI outputb(GPIO_PORT, 0x10)
#define GPO3_LO outputb(GPIO_PORT, 0x00)
#define GPO5_HI outputb(GPIO_PORT, 0x20)
#define GPO5_LO outputb(GPIO_PORT, 0x00)
#define GPO7_HI outputb(GPIO_PORT, 0x40)
#define GPO7_LO outputb(GPIO_PORT, 0x00)
#define GPO9_HI outputb(GPIO_PORT, 0x80)
#define GPO9_LO outputb(GPIO_PORT, 0x00)
void main(void)
```

```
{  
GPO3_HI;  
GPO5_LO;  
GPO7_HI;  
GPO9_LO;  
}
```

Appendix C: Watchdog Timer Setting

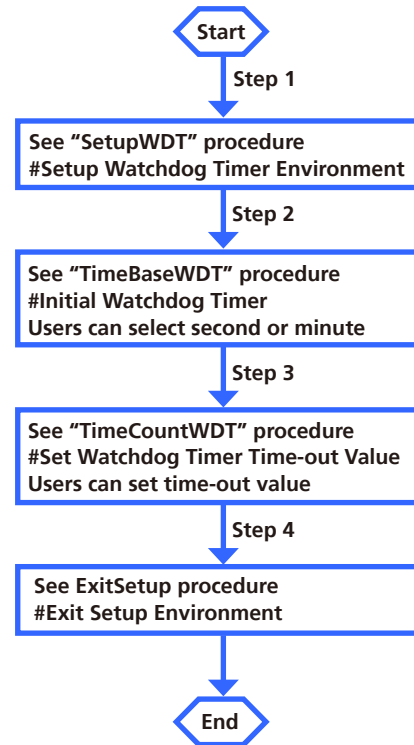

ITE8783 WatchDog Programming Guide

```
#define SUPERIO_PORT  0x2E
#define WDT_SET      0x72
#define WDT_VALUE    0x73

void main(void)
{
    #Enter SuperIO Configuration
    outputb(SUPERIO_PORT, 0x87);
    outputb(SUPERIO_PORT, 0x01);
    outputb(SUPERIO_PORT, 0x55);
    outputb(SUPERIO_PORT, 0x55);

    # Set LDN
    outputb(SUPERIO_PORT,0x07);
    outputb(SUPERIO_PORT+1 ,0x07);

    # Set WDT setting
    outputb(SUPERIO_PORT, WDT_SET);
    outputb(SUPERIO_PORT+1 , 0xC0);
    # Use the Second to come down
    # If choose the Minute, change value to 0x40

    # Set WDT sec/min
    outputb(SUPERIO_PORT, WDT_VALUE);
    outputb(SUPERIO_PORT+1 , 0x05);      #Set 5 seconds
}
```