



NEXCOM International Co., Ltd.

## Industrial Computing Solutions

### Video Intelligent Surveillance

**NViS 3540/3540H/3540P4/3540P8**

**NViS 3542/3542H/3542P4/3542P8**

User Manual

# Contents

## Preface

Copyright .....	v
Disclaimer .....	v
Acknowledgements .....	v
Regulatory Compliance Statements .....	v
Declaration of Conformity.....	v
RoHS Compliance .....	vi
Warranty and RMA .....	vii
Safety Information .....	viii
Installation Recommendations .....	viii
Safety Precautions.....	ix
Technical Support and Assistance.....	x
Conventions Used in this Manual.....	x
Global Service Contact Information.....	xi
Package Contents.....	xiv
Ordering Information.....	xvi

## Chapter 1: Product Introduction

Overview .....	1
Hardware Specifications.....	9
Hardware Specifications.....	11
Getting to Know NViS 3540 Series.....	13
Getting to Know NViS 3542 Series.....	18
Mechanical Dimensions.....	26

## Chapter 2: Jumpers and Connectors

Before You Begin .....	31
Precautions .....	31
Jumper Settings.....	32
Locations of the Jumpers and Connectors.....	33
Jumpers.....	35
Clear CMOS .....	35
Connector Pin Definitions .....	36
External I/O Interface - Front Panel.....	36
USB Ports.....	36
eSATA Ports .....	36
Status Indicators .....	37
LAN1/LAN2 Link/Active LED .....	37
ATX Power On/Off Switch.....	38
External I/O Interface - Rear Panel.....	39
Remote Power On/Off Switch .....	39
PS/2 Keyboard/Mouse Port .....	39
9V-30V DC Input .....	40
GPIO Connector .....	40
Serial Interface (COM 1 - COM 4) .....	41
LAN Ports .....	43
USB Ports.....	44
VGA Port .....	44
DVI-I Port .....	45
Speaker-out Jack .....	45
Mic-in Jack .....	46

Internal Connectors.....	47
Reset Connector .....	47
SMBus DATA/CLK Pin Header .....	48
LVDS Backlight Power Select .....	48
LVDS Channel A Connector .....	49
LVDS Channel B Connector.....	49
LVDS Backlight Connector.....	50
SATA Ports .....	51
SATA Power Connectors .....	51
SATA DOM Power Connectors .....	52
USB Port Connector.....	52
COM4 RI Pin Header.....	53
GPIO LED Connector.....	53
Line-in Connector .....	54
Internal Power/HDD/LAN Power/LAN Active LED .....	54
Smart Fan Connectors.....	55
COM5 Connector .....	55
Parallel Connector .....	56

### Chapter 3: System Setup

Removing the Chassis Cover .....	57
Installing a DIMM.....	58
Installing the CPU .....	60
Installing a SATA Hard Drive .....	63
Installing a Half Length SATA DOM with SATA HD .....	66
Installing a Full Length SATA DOM .....	68
Installing a Wireless LAN Module (NVIS 3542 Series Only) .....	70
Installing a GPS Module (NVIS 3542 Series Only) .....	73
Connecting to the Power Ignition Module (NISKIG120).....	74

### Chapter 4: BIOS Setup

About BIOS Setup .....	77
When to Configure the BIOS .....	77
Default Configuration .....	58
Entering Setup .....	58
Key .....	58
Function .....	58
BIOS Setup Utility .....	59
Main .....	59
Advanced.....	60
Chipset .....	68
Boot.....	71
Security.....	72
Save & Exit .....	72

### Chapter 5: AMT Settings

Enable Intel® AMT in the AMI BIOS .....	73
Configure the Intel® ME Setup .....	74
Unconfigure AMT/ME .....	92

### Appendix A: Power Consumption.....94

### Appendix B: GPI/O Programming guide.....96

### Appendix C: Watchdog Timer Setting.....97

### Appendix D: Intel Embedded AMT Management Express KVM.....99

---

■ ■ ■

<b>Appendix E: Intel Manageability Command Tool - KVM.....</b>	<b>106</b>
<b>Appendix F: PoE Device Setup.....</b>	<b>112</b>
<b>Appendix G: Voltage Low Shut-down Setting (NISKIG120).....</b>	<b>119</b>
<b>Appendix H: DC Input &amp; Output Setting (NISKIG120).....</b>	<b>120</b>
<b>Appendix I: Power On/Off Delay Timer Setting (NISKIG120).....</b>	<b>121</b>
<b>Appendix J: MCU Programming (NISKIG120).....</b>	<b>122</b>

# Preface

## Copyright

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written consent from NEXCOM International Co., Ltd.

## Disclaimer

The information in this document is subject to change without prior notice and does not represent commitment from NEXCOM International Co., Ltd. However, users may update their knowledge of any product in use by constantly checking its manual posted on our website: <http://www.nexcom.com>. NEXCOM shall not be liable for direct, indirect, special, incidental, or consequential damages arising out of the use of any product, nor for any infringements upon the rights of third parties, which may result from such use. Any implied warranties of merchantability or fitness for any particular purpose is also disclaimed.

## Acknowledgements

NViS 3540/3540H/3540P4/3540P8 and NViS 3542/3542H/3542P4/3542P8 is a trademark of NEXCOM International Co., Ltd. All other product names mentioned herein are registered trademarks of their respective owners.

## Regulatory Compliance Statements

This section provides the FCC compliance statement for Class B devices and describes how to keep the system CE compliant.

## Declaration of Conformity

### FCC

This equipment has been tested and verified to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area (domestic environment) is likely to cause harmful interference, in which case the user will be required to correct the interference (take adequate measures) at their own expense.

### CE

The product(s) described in this manual complies with all applicable European Union (CE) directives if it has a CE marking. For computer systems to remain CE compliant, only CE-compliant parts may be used. Maintaining CE compliance also requires proper cable and cabling techniques.

## RoHS Compliance



### **NEXCOM RoHS Environmental Policy and Status Update**

NEXCOM is a global citizen for building the digital infrastructure. We are committed to providing green products and services, which are compliant with European Union

RoHS (Restriction on Use of Hazardous Substance in Electronic Equipment) directive 2002/95/EU, to be your trusted green partner and to protect our environment.

RoHS restricts the use of Lead (Pb) < 0.1% or 1,000ppm, Mercury (Hg) < 0.1% or 1,000ppm, Cadmium (Cd) < 0.01% or 100ppm, Hexavalent Chromium (Cr6+) < 0.1% or 1,000ppm, Polybrominated biphenyls (PBB) < 0.1% or 1,000ppm, and Polybrominated diphenyl Ethers (PBDE) < 0.1% or 1,000ppm.

In order to meet the RoHS compliant directives, NEXCOM has established an engineering and manufacturing task force in to implement the introduction of green products. The task force will ensure that we follow the standard NEXCOM development procedure and that all the new RoHS components and new manufacturing processes maintain the highest industry quality levels for which NEXCOM are renowned.

The model selection criteria will be based on market demand. Vendors and suppliers will ensure that all designed components will be RoHS compliant.

### **How to recognize NEXCOM RoHS Products?**

For existing products where there are non-RoHS and RoHS versions, the suffix “(LF)” will be added to the compliant product name.

All new product models launched after January 2006 will be RoHS compliant. They will use the usual NEXCOM naming convention.

# Warranty and RMA

## NEXCOM Warranty Period

NEXCOM manufactures products that are new or equivalent to new in accordance with industry standard. NEXCOM warrants that products will be free from defect in material and workmanship for 2 years, beginning on the date of invoice by NEXCOM. HCP series products (Blade Server) which are manufactured by NEXCOM are covered by a three year warranty period.

## NEXCOM Return Merchandise Authorization (RMA)

- ❌ Customers shall enclose the “NEXCOM RMA Service Form” with the returned packages.
- ❌ Customers must collect all the information about the problems encountered and note anything abnormal or, print out any on-screen messages, and describe the problems on the “NEXCOM RMA Service Form” for the RMA number apply process.
- ❌ Customers can send back the faulty products with or without accessories (manuals, cable, etc.) and any components from the card, such as CPU and RAM. If the components were suspected as part of the problems, please note clearly which components are included. Otherwise, NEXCOM is not responsible for the devices/parts.
- ❌ Customers are responsible for the safe packaging of defective products, making sure it is durable enough to be resistant against further damage and deterioration during transportation. In case of damages occurred during transportation, the repair is treated as “Out of Warranty.”

- ❌ Any products returned by NEXCOM to other locations besides the customers’ site will bear an extra charge and will be billed to the customer.

## Repair Service Charges for Out-of-Warranty Products

NEXCOM will charge for out-of-warranty products in two categories, one is basic diagnostic fee and another is component (product) fee.

### System Level

- ❌ Component fee: NEXCOM will only charge for main components such as SMD chip, BGA chip, etc. Passive components will be repaired for free, ex: resistor, capacitor.
- ❌ Items will be replaced with NEXCOM products if the original one cannot be repaired. Ex: motherboard, power supply, etc.
- ❌ Replace with 3rd party products if needed.
- ❌ If RMA goods can not be repaired, NEXCOM will return it to the customer without any charge.

### Board Level

- ❌ Component fee: NEXCOM will only charge for main components, such as SMD chip, BGA chip, etc. Passive components will be repaired for free, ex: resistors, capacitors.
- ❌ If RMA goods can not be repaired, NEXCOM will return it to the customer without any charge.

## Warnings

Read and adhere to all warnings, cautions, and notices in this guide and the documentation supplied with the chassis, power supply, and accessory modules. If the instructions for the chassis and power supply are inconsistent with these instructions or the instructions for accessory modules, contact the supplier to find out how you can ensure that your computer meets safety and regulatory requirements.

## Cautions

Electrostatic discharge (ESD) can damage system components. Do the described procedures only at an ESD workstation. If no such station is available, you can provide some ESD protection by wearing an antistatic wrist strap and attaching it to a metal part of the computer chassis.

## Safety Information

Before installing and using the device, note the following precautions:

- Read all instructions carefully.
- Do not place the unit on an unstable surface, cart, or stand.
- Follow all warnings and cautions in this manual.
- When replacing parts, ensure that your service technician uses parts specified by the manufacturer.
- Avoid using the system near water, in direct sunlight, or near a heating device.
- The load of the system unit does not solely rely for support from the rackmounts located on the sides. Firm support from the bottom is highly necessary in order to provide balance stability.
- The computer is provided with a battery-powered real-time clock circuit. There is a danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

## Installation Recommendations

Ensure you have a stable, clean working environment. Dust and dirt can get into components and cause a malfunction. Use containers to keep small components separated.

Adequate lighting and proper tools can prevent you from accidentally damaging the internal components. Most of the procedures that follow require only a few simple tools, including the following:

- A Philips screwdriver
- A flat-tipped screwdriver
- A grounding strap
- An anti-static pad

Using your fingers can disconnect most of the connections. It is recommended that you do not use needlenose pliers to disconnect connections as these can damage the soft metal or plastic parts of the connectors.



## Safety Precautions

1. Read these safety instructions carefully.
2. Keep this User Manual for later reference.
3. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a stable surface during installation. Dropping it or letting it fall may cause damage.
7. Do not leave this equipment in either an unconditioned environment or in a above 40°C storage temperature as this may damage the equipment.
8. The openings on the enclosure are for air convection to protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
9. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
10. Place the power cord in a way so that people will not step on it. Do not place anything on top of the power cord. Use a power cord that has been approved for use with the product and that it matches the voltage and current marked on the product's electrical range label. The voltage and current rating of the cord must be greater than the voltage and current rating marked on the product.
11. All cautions and warnings on the equipment should be noted.
12. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
13. Never pour any liquid into an opening. This may cause fire or electrical shock.
14. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
15. If one of the following situations arises, get the equipment checked by service personnel:
  - a. The power cord or plug is damaged.
  - b. Liquid has penetrated into the equipment.
  - c. The equipment has been exposed to moisture.
  - d. The equipment does not work well, or you cannot get it to work according to the user's manual.
  - e. The equipment has been dropped and damaged.
  - f. The equipment has obvious signs of breakage.
16. Do not place heavy objects on the equipment.
17. The unit uses a three-wire ground cable which is equipped with a third pin to ground the unit and prevent electric shock. Do not defeat the purpose of this pin. If your outlet does not support this kind of plug, contact your electrician to replace your obsolete outlet.
18. **CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER. DISCARD USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.**
19. The computer is provided with CD drives that comply with the appropriate safety standards including IEC 60825.

## Technical Support and Assistance

1. For the most updated information of NEXCOM products, visit NEXCOM's website at [www.nexcom.com](http://www.nexcom.com).
2. For technical issues that require contacting our technical support team or sales representative, please have the following information ready before calling:
  - Product name and serial number
  - Detailed information of the peripheral devices
  - Detailed information of the installed software (operating system, version, application software, etc.)
  - A complete description of the problem
  - The exact wordings of the error messages

### Warning!

1. Handling the unit: carry the unit with both hands and handle it with care.
2. Maintenance: to keep the unit clean, use only approved cleaning products or clean with a dry cloth.
3. CompactFlash: Turn off the unit's power before inserting or removing a CompactFlash storage card.

## Conventions Used in this Manual



**Warning:** Information about certain situations, which if not observed, can cause personal injury. This will prevent injury to yourself when performing a task.



**Caution:** Information to avoid damaging components or losing data.



**Note:** Provides additional information to complete a task easily.

# Global Service Contact Information

## Headquarters

### Taiwan

15F, No. 920, Chung-Cheng Rd., ZhongHe District,  
New Taipei City, 23586, Taiwan, R.O.C.  
Tel: +886-2-8226-7786  
Fax: +886-2-8226-7782  
<http://www.nexcom.com.tw>

### USA

3758 Spinnaker Court,  
Fremont, CA 94538, USA  
Tel: +1-510-656-2248  
Fax: +1-510-656-2158  
<http://www.nexcom.com>

### France

#### NEXCOM France

La Grande Arche-Paroi Nord,  
92044 Paris La Défense, France  
Tel: +33 (0)1 40 90 33 35  
Fax: +33 (0)1 40 90 31 01  
<http://www.nexcom.eu>

### Germany

Leopoldstraße Business Centre, Leopoldstraße 244  
80807 Munich, Germany  
Tel: +49-89-208039-278  
Fax: +49-89-208039-279  
<http://www.nexcom.eu>

### Italy

Via Gaudenzio Ferrari 29,  
21047 Saronno (VA), Italia  
Tel: +39 02 9628 0333  
Fax: +39 02 9619 8846  
<http://www.nexcom.eu>

### United Kingdom

10 Vincent Avenue, Crownhill Business Centre,  
Milton Keynes, Buckinghamshire  
MK8 0AB, United Kingdom  
Tel: +44-1908-267121  
Fax: +44-1908-262042  
<http://www.nexcom.eu>

## China

### NEXCOM China

2F, Block 4, Venus Plaza, Building 21,  
ZhongGuanCun Software Park, No. 8,  
Dongbeiwang West Road, Haidian District,  
Beijing, 100193, China  
Tel: +86-10-8282-5880  
Fax: +86-10-8282-5955  
<http://www.nexcom.cn>

### China-Shanghai Office

Room 1505, Greenland He Chuang Building,  
No. 450 Caoyang Rd.,  
Shanghai, 200062, China  
Tel: +86-21-6150-8008  
Fax: +86-21-3251-6358  
<http://www.nexcom.cn>

### China-Nanjing Office

Hall C, Block 17, Tian Xing Cui Lang Building,  
No. 49 Yunnan North Rd.,  
Nanjing, 210018, China  
Tel: +86-25-8315-3486  
Fax: +86-25-8315-3489  
<http://www.nexcom.cn>

### China-Wuhan Office

1-C1804/1805, Mingze Liwan,  
No. 519 South Luoshi Rd., Hongshan District,  
Wuhan, 430070, China  
Tel: +86-27-8722-7400  
Fax: +86-27-8722-7400  
<http://www.nexcom.cn>

### China-Shenzhen Office

Western Room 708, Block 210,  
Tairan Industry & Trading Place, Futian Area,  
Shenzhen, 518040, China  
TEL: +86-755-833 7203  
FAX: +86-755-833 7213  
<http://www.nexcom.cn>

### China-Chengdu Office

9F, Shuxiangxie, Xuefu Garden,  
No.12 Section 1, South Yihuan Rd.,  
Chengdu, 610061, China  
Tel: +86-28-8523-0186  
Fax: +86-28-8523-0186  
<http://www.nexcom.cn>

## Japan


9F, Tamachi Hara Bldg.,  
4-11-5, Shiba Minato-ku,  
Tokyo, 108-0014 Japan  
Tel: +81-3-5419-7830  
Fax: +81-3-5419-7832  
<http://www.nexcom-jp.com>



# Package Contents

## NViS 3540 Series

Before continuing, verify that the NViS 3540/3540H/3540P4/3540P8 package that you received is complete. Your package should have all the items listed in the following table.

Item	Part Number	Description		Qty
1	60233POW33X00	DC Power Cable		1
2	6023344361X00	DB44 to 4x DB9 COM port cable		1
3	6029900037X00	DOW CORNING 340 Silicone Heat Sink Compound (3g)		1
4	4NCPM00203X00	2 Pin Phoenix Contact: MC 1.5/2-ST-3.81(1803578), 3.81mm pitch		1
5	50311F0110X00	Flat Head Screw for HDD F3x5 ISO+NYLOK NIGP		4
6	602DCD0269X00	NISB3500 CD DRIVER VER:1.0		1
7	7800000014X00	DVI-I TO VGA Adapter		1
8	5060600087X00	Mylar for PCI bracket		1
9	60177A0205X00	NISB3500 Quick Reference Guide VER:A		1
10	50311P0001X00	Plastic Screw for PCI card use		1
11	60233MK202X00	PS/2 Y Cable for Keyboard / Mouse, L:150mm		1
12	50322P0001X00	Plastic Nut for PCI card use		1
13		1. D-Type integrated cable Video & Audio input x4 TV-out x2 2. Surveillance system user manual 3. Surveillance CD/driver Note: For NViS 3540H only.		1

## NViS 3542 Series

Before continuing, verify that the NViS 3542/3542H/3542P4/3542P8 package that you received is complete. Your package should have all the items listed in the following table.

Item	Part Number	Description	Qty
1	19C00354202X0	NViS3542 ASSY	1
2	60233POW33X00	DC Power Cable	1
3	6012200053X00	PE ZIPPER BAG #3	1
4	6012200052X00	PE ZIPPER BAG #8	1
5	6023344361X00	CABLE EDI:231441090251-RS	1
6	6029900037X00	DOW CORNING 340 Silicone Heat Sink Compound(3g)	1
7	7800000014X00	DVI-I to VGA adapter for PE260 XIAN YI:DA001-001 Note: For NViS 3542/3542P4 only.	1
8	60233MK202X00	CABLE EDI:281062060152-RS	1
9	60177B0065X00	NISE3500 Quick Reference Guide VER:B	1
10	602DCD0388X00	NISB3500 DVD Driver VER:2.0	1
11	50311F0110X00	(H)Flat Head Screw LONG FEI:F3x5ISO+NYLOK NIGP	8
12	4NCPM00203X00	2 Pin Phoenix Contact	2

# Ordering Information

The following provides ordering information for NViS 3540/3540H/3540P4/3540P8.

- **Barebone**

- **NViS 3540 (P/N: 10C0035400X0) RoHS Compliant**

- Mobile Surveillance with Intel® Core™ i7/ i5 System
    - 1 PCIe x1 expansion slot
    - 19V, 120W AC/DC power adapter w/o power cord (P/N: 7410120002X00)

- **NViS 3540H (P/N: 10C03540H00X0) RoHS Compliant**

- 4-channel Mobile Surveillance with Intel® Core™ i7/ i5 System
    - 19V, 120W AC/DC power adapter w/o power cord (P/N: 7410120002X00)

- **NViS 3540P4 (P/N: 10C0354P0X0) RoHS Compliant**

- Intel® Core™ i7/i5 system
    - 4 PoE ports
    - 2180 24V, 180W power adapter w/o power core (P/N:7400180002x00)

- **NViS 3540P8 (P/N:10C03540P01X0) RoHS Compliant**

- Mobile NVR Surveillance with Intel® Core™ i7/ i5 System
    - 8 PoE ports
    - 24V, 180W AC/DC power adapter w/o power cord (P/N:7400180002X00)



The following provides ordering information for NViS 3542/3542H/3542P4/3542P8

- **Barebone**

**NViS 3542 (P/N: 10C00354202X0) RoHS Compliant**

- ANPR/LPR Mobile NVR Surveillance System with Intel® Core™ i7/i5 processor, 1x PCIe slot, WWAN supported

**NViS 3542WP8 (P/N: 10C00354203X0) RoHS Compliant**

- In-vehicle Mobile NVR Surveillance System with Intel® Core™ i7/i5 and 8 PoE ports, WLAN supported

**NViS 3542W (P/N: 10C00354205X0) RoHS Compliant**

- ANPR/LPR Mobile NVR Surveillance System with Intel® Core™ i7/i5 processor, 1x PCIe slot, WLAN supported

**NViS3542H (P/N: 10C00354208X0) RoHS Compliant**

- Mobile Hybrid DVR Surveillance with Intel® Core™ i5/i7 processor, WWAN supported

**NViS3542HW (P/N: 10C00354209X0) RoHS Compliant**

- Mobile Hybrid DVR Surveillance with Intel® Core™ i5/i7 processor, WLAN supported

**NViS 3542P4 (P/N: 10C00354201X0) RoHS Compliant**

- In-vehicle Mobile NVR surveillance system with Intel® Core™ i7/i5 and 4 PoE ports, WWAN supported

**NViS 3542P8 (P/N: 10C00354200X0) RoHS Compliant**

- In-vehicle Mobile NVR surveillance system with Intel® Core™ i7/i5 and 8 PoE ports, WWAN supported

**NViS 3542WP4 (P/N: 10C00354204X0) RoHS Compliant**

- In-vehicle Mobile NVR Surveillance System with Intel® Core™ i7/i5 and 4 PoE ports, WLAN supported

# Chapter 1: Product Introduction

## Overview

### NViS 3540



Front



Rear

### Key Features

- Intel® Core™ i7/i5 socket processor
- Mobile Intel® QM57 PCH
- Dual Intel® Gigabit Ethernet ports
- Dual VGA or VGA/DVI Independent Display
- 3x RS232 and 1x RS232/422/485 with Auto Flow Control
- Fanless
- 1 PCI expansion slot
- Onboard DC to DC power design to support 9V to 30V DC power input

## NViS 3540H



Front



Rear

### Key Features

- Intel® Core™ i7/i5 socket processor
- Mobile Intel® QM57 PCH
- Dual Intel® Gigabit Ethernet ports
- Dual VGA or VGA/DVI Independent Display
- 3x RS232 and 1x RS232/422/485 with Auto Flow Control
- Fanless
- Onboard DC to DC power design to support 9V to 30V DC power input
- 4-Channel Full D1 (720x480 NTSC, 720x576 PAL) Display/Recording
- Total 120 FPS (NTSC), 1000 FPS (PAL)
- NViS Hybrid Software

## NViS 3540P4



Front



Rear

### Key Features

- Intel® Core™ i7/i5 socket processor
- Mobile Intel® QM57 PCH
- Dual Intel® Gigabit Ethernet ports
- Dual VGA or VGA/DVI Independent Display
- 3x RS232 and 1x RS232/422/485 with Auto Flow Control
- Smart fan
- 4 ports PoE switch
- Onboard DC to DC power design to support 9V to 30V DC power input

## NViS 3540P8



Front



Rear

### Key Features

- Intel® Core™ i7/i5 socket processor
- Mobile Intel® QM57 PCH
- Dual Intel® Gigabit Ethernet ports
- Dual VGA or VGA/DVI Independent Display
- 3x RS232 and 1x RS232/422/485 with Auto Flow Control
- Smart fan
- 8 ports PoE switch
- Onboard DC to DC power design to support 9V to 30V DC power input

## NViS 3542



### Key Features

- Support Intel® Core™ i7/i5 socket processor
- Mobile Intel® QM57 PCH
- Dual Intel® Gigabyte Ethernet ports
- Dual VGA/ DVI or VGA/ HDMI or DVI/ HDMI display
- 3x RS-232 and 1x RS-232/422/485 with auto flow control
- On-board DC to DC power design to support 9V to 30V DC power input
- Support ATX power mode and PXE/WoL
- Support 3G/ Wi-Fi/ GPS communications
- 1x PCIe x1 slot for ANPR / LPR video capture
- Optional Anti-Vibration kit for tough environment

## NViS 3542H



### Key Features

- Hybrid solution for 4PoE and optional video capture card
- Support Intel® Core™ i5/i7 socket processor
- Dual Intel® Gigabyte Ethernet
- Dual local display by VGA/DVI or VGA/HDMI or DVI/HDMI
- Support 3G/ Wi-Fi/ GPS communications
- Support ATX power mode and PXE/WoL
- Optional Anti-Vibration kit for tough environment

## NViS 3542P4



### Key Features

- Support Intel® Core™ i7/ i5 socket processor
- Mobile Intel® QM57 PCH
- Dual Intel® Gigabit Ethernet ports
- Dual VGA/ DVI or VGA/ HDMI or DVI/ HDMI display
- 3x RS-232 and 1x RS-232/422/485 with auto flow control
- On-board DC to DC power design to support 9V to 30V DC power input
- Support ATX power mode and PXE/WoL
- 4x PoE ports
- Support 3G/ Wi-Fi/ GPS communications
- Optional Anti-Vibration kit for tough environment



## NViS 3542P8



### Key Features

- Support Intel® Core™ i7/ i5 socket processor
- Mobile Intel® QM57 PCH
- Dual Intel® Gigabit Ethernet ports
- Dual VGA/ DVI or VGA/ HDMI or DVI/ HDMI display
- 3x RS-232 and 1x RS-232/422/485 with auto flow control
- On-board DC to DC power design to support 9V to 30V DC power input
- Support ATX power mode and PXE/WoL
- 8x PoE ports
- Support 3G/ Wi-Fi/ GPS communications
- Optional Anti-Vibration kit for tough environment

## Hardware Specifications

### NViS 3540 Series

#### Main Board

- NISB 3500
- Onboard Mobile Intel® QM57 Platform Controller Hub
- Supports Intel® Core™ i7-620M PGA Processor (2.66GHz, 4M Cache)
- Supports Intel® Core™ i5-520M PGA Processor (2.4GHz, 3M Cache)
- Supports Intel® P4500 PGA Processor (1.86GHz, 2M Cache)

#### Main Memory

- 2x 240-pin memory DIMM, up to 4GB DDR3 800/1066MHz SDRAM, unbuffered and non-ECC

Note: The actual memory size is dynamic. It is based on the OS I/O resource allocation.

#### I/O Interface - Front

- ATX power on/off switch
- HDD Access / Power status LEDs
- 2x USB 2.0 ports
- 2x eSATA ports
- 1x 2.5" HDD with Hot Swap (NViS 3540/3540H/3540P4 only)

#### I/O Interface - Rear

- 2-pin Remote Power on/off switch
- 9 ~ 30V DC input
- 1 x PS/2 for Keyboard/Mouse
- 1 x DB15 male connector for GPIO (4x digital-input and 4x digital-output)
- 1 x DB44 Serial Port for 4x RS232 (COM2: RS232/422/485 with Auto Flow Control)
- 2 x Gbe LAN ports
- 4 x USB 2.0 ports
- 1 x DB15 VGA port
- 1 x DVI-D Port
- 1 x Speaker-out
- 1 x Mic-in

#### Device

- 2x 2.5" HDD drive bays (NViS 3540P8 only)
- 1x 2.5" HDD drive bay and 1x 2.5" hot swappable drive bay (NViS 3540/3540H/3540P4 only)

#### Expansion

- 1 PCI expansion slot (NViS 3540 only)
- 1x 4-channel Hybrid capture card (NViS 3540H only)
- 4 ports PoE switch (NViS 3540P4 only)
- 8 ports PoE switch (NViS 3540P8 only)

### Power Requirements

- ATX power mode
- Onboard DC to DC power support from 9V to 30V DC
- Optional power adapter

### Dimensions

- 195mm (W) x 268mm (D) x 80mm (H) - NViS 3540/3540H only
- 235mm (W) x 268 mm (D) x 80mm (H) - NViS 3540P4/3540P8 only

### Construction

- Aluminum chassis
  - Fanless (NViS 3540/3540H only)
  - With Smart Fan (NViS 3540P4/3540P8 only)

### Environment

- Operating temperature:  
Ambient with airflow: -5°C to 55°C  
(According to IEC60068-2-1, IEC60068-2-2, IEC60068-2-14)
- Storage temperature: -20°C to 80°C
- Relative humidity: 10% to 93% (Non-Condensing)

### Certifications

- CE approval
- FCC Class B
- e13 Mark

## Hardware Specifications

### NViS 3542 Series

#### Main Board

- On-board Mobile Intel® QM57 Platform Controller Hub
- Support Intel® Core™ i7-620M PGA processor (2.66GHz, 4M cache)
- Support Intel® Core™ i5-520M PGA processor (2.4GHz, 3M cache)

#### Main Memory

- 2x 240-pin memory DIMM, up to 8GB DDR3 800/1066MHz SDRAM, un-buffered and non-ECC

#### I/O Interface - Front

- ATX power on/off switch
- HDD access/ power status LEDs
- Wireless active LEDs
- 2x antenna holes
- 2x USB2.0 ports
- 1x Line-out and 1 x Mic-in
- 1x HDMI
- 1x External SIM card holder

#### I/O Interface - Rear

- 2-Pin remote power on/off switch (support power ignition module)
- 9~30V DC input
- 1x PS/2 for keyboard/ mouse
- 1x DB15 male connector for GPIO (4 x input and 4 x output)
- 1 x DB44 serial port for 4 x RS232 (COM2: RS232/ 422/ 485 with auto flow control)
- 2x GbE LAN ports
- 4x USB2.0 ports
- 1x DB15 VGA port
- 1x DVI-D port
- 1x Speaker-out and 1x Mic-in

#### Storage

- 2x 2.5" HDD drive bays (NViS 3542 and 3542P4 support 1x hot-swappable)
- 2x 2.5" internal HDD drive bays (NViS 3542H and 3542P8)

#### Expansion

- 1x mini-PCIe socket for 3G/Wi-Fi (depend on SKU# selected)

#### Dimensions

- 235mm(W) x 268mm(D) x 101mm(H)

#### Power Input

- 9~30V DC power input

#### Construction

- Aluminum chassis

## Environment

- Operating temperature: -5 to 55°C (Ambient with air flow)
- Storage temperature: -20 to 80°C
- Relative humidity: 10% to 93% (non-condensing)
- Vibration (random, w/o Anti-vibration kit):  
SSD: 2G@5~500Hz  
HDD: 1G@5~500Hz
- Vibration (w/ Anti-vibration kit):  
SSD: STD-810F-514.5 Class3  
HDD: STD-810F-514.5 Class1


## Certifications

- CE approval
- FCC Class A
- e13 Mark



## Getting to Know NViS 3540 Series

### Front Panel

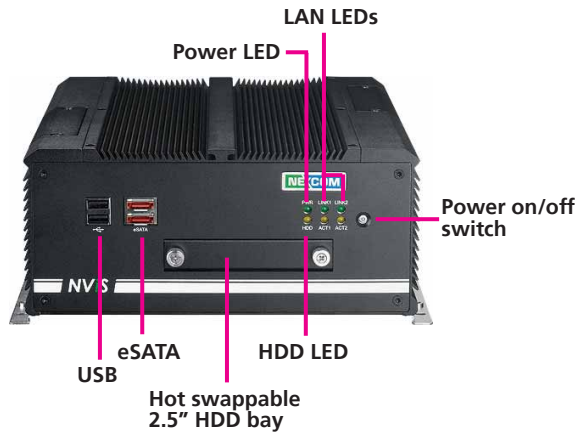

#### USB

Used to connect USB 2.0/1.1 devices.

#### eSATA

Used to connect eSATA devices.

#### Hot Swappable 2.5" HDD Bay (NViS 3540/3540H/3540P4 only)

Used to install a hot swappable 2.5" HDD drive.

#### Power LED

Indicates the power status of the system.

#### HDD LED

Indicates the status of the hard drive.


#### LAN LEDs

Indicate the status of the LAN ports.

#### Power On/Off Switch

Press to power-on or power-off the system.

## Rear Panel of NViS 3540

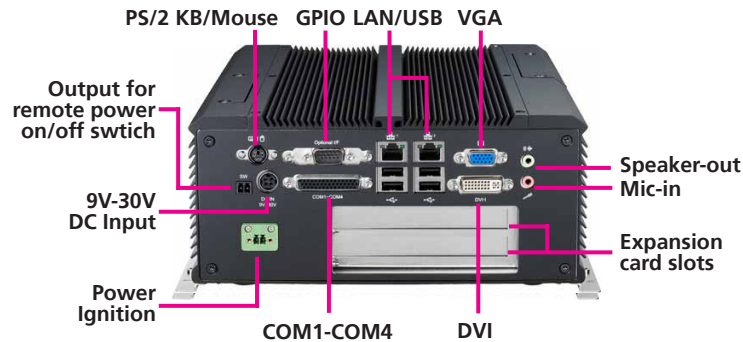

### Output for Remote Power On/Off Switch

Used to connect a remote to power on/off the system.

### PS/2 Keyboard/Mouse

Used to connect a PS/2 keyboard and PS/2 mouse via a cable.

### 9V-30V DC Input

Used to plug a DC power cord.

### GPIO

The GPIO connector supports 4 digital input and 4 digital output.

### COM1 to COM4

The DB44 port supports 3 RS232 and 1 RS232/422/485 compatible serial devices.

### LAN

Used to connect the system to a local area network.

### USB

Used to connect USB 2.0/1.1 devices.

### VGA

Used to connect an analog VGA monitor.

### DVI

Used to connect a digital LCD panel.

### Speaker-out

Used to connect a headphone or a speaker.

### Mic-in

Used to connect an external microphone.


### Expansion Slots

One PCIe1 expansion slot.

### Power Ignition

Used to connect to power ignition module (NISKIG120).

## Rear Panel of NViS 3540H

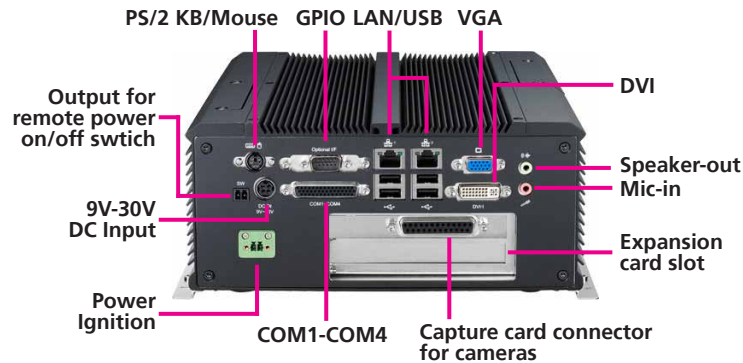

### Output for Remote Power On/Off Switch

Used to connect a remote to power on/off the system.

### PS/2 Keyboard/Mouse

Used to connect a PS/2 keyboard and PS/2 mouse via a cable.

### 9V-30V DC Input

Used to plug a DC power cord.

### GPIO

The GPIO connector supports 4 digital input and 4 digital output.

### COM1 to COM4

The DB44 port supports 3 RS232 and 1 RS232/422/485 compatible serial devices.

### LAN

Used to connect the system to a local area network.

### USB

Used to connect USB 2.0/1.1 devices.

### VGA

Used to connect an analog VGA monitor.

### DVI

Used to connect a digital LCD panel.

### Speaker-out

Used to connect a headphone or a speaker.

### Mic-in

Used to connect an external microphone.

### Capture Card


Supports 4-channel full-D1 SD feature.

### Power Ignition

Used to connect to power ignition module (NISKIG120).



## Rear Panel of NViS 3540P4

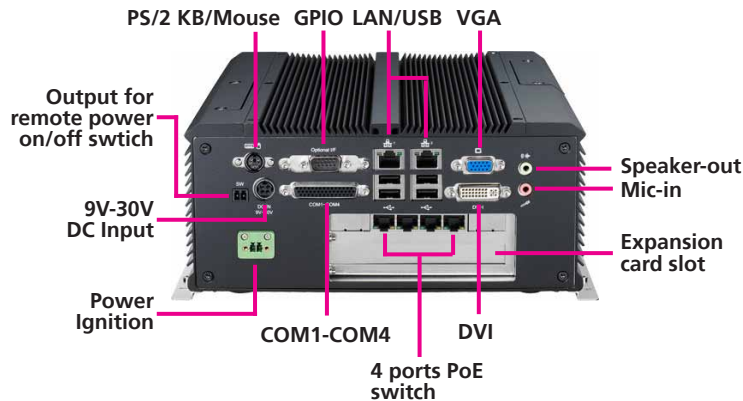

### Output for Remote Power On/Off Switch

Used to connect a remote to power on/off the system.

### PS/2 Keyboard/Mouse

Used to connect a PS/2 keyboard and PS/2 mouse via a cable.

### 9V-30V DC Input

Used to plug a DC power cord.

### GPIO

The GPIO connector supports 4 digital input and 4 digital output.

### COM1 to COM4

The DB44 port supports 3 RS232 and 1 RS232/422/485 compatible serial devices.

### LAN

Used to connect the system to a local area network.

### USB

Used to connect USB 2.0/1.1 devices.

### VGA

Used to connect an analog VGA monitor.

### DVI

Used to connect a digital LCD panel.

### Speaker-out

Used to connect a headphone or a speaker.

### Mic-in

Used to connect an external microphone.


### 4 Ports PoE Switch

Allows connecting 4 IP security cameras.

### Power Ignition

Used to connect to power ignition module (NISKIG120).

## Rear Panel of NViS 3540P8

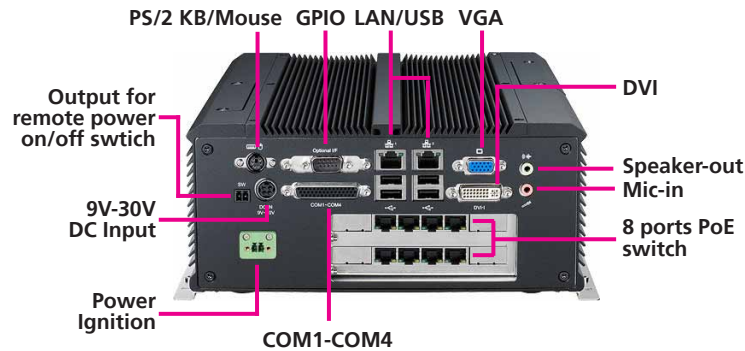

### Output for Remote Power On/Off Switch

Used to connect a remote to power on/off the system.

### PS/2 Keyboard/Mouse

Used to connect a PS/2 keyboard and PS/2 mouse via a cable.

### 9V-30V DC Input

Used to plug a DC power cord.

### GPIO

The GPIO connector supports 4 digital input and 4 digital output.

### COM1 to COM4

The DB44 port supports 3 RS232 and 1 RS232/422/485 compatible serial devices.

### LAN

Used to connect the system to a local area network.

### USB

Used to connect USB 2.0/1.1 devices.

### VGA

Used to connect an analog VGA monitor.

### DVI

Used to connect a digital LCD panel.

### Speaker-out

Used to connect a headphone or a speaker.

### Mic-in

Used to connect an external microphone.

### 8 Ports PoE Switch


Allows connecting 8 IP security cameras.

### Power Ignition

Used to connect to power ignition module (NISKIG120).

## Getting to Know NViS 3542 Series

### Front Panel of NViS 3542

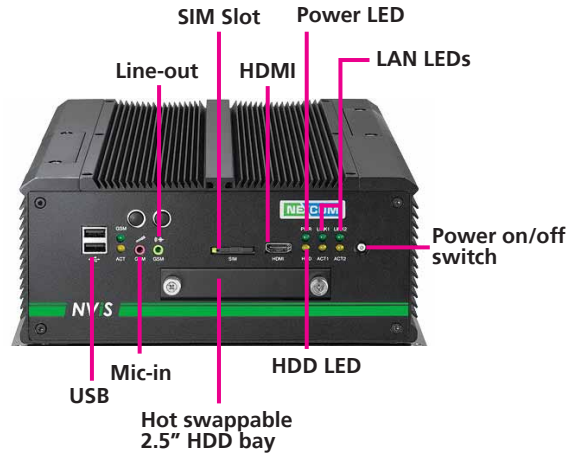

#### USB

Used to connect USB 2.0/1.1 devices.

#### Mic-in

Used to connect an external microphone.

#### Line-out

Used to connect a headphone or a speaker.

#### Hot Swappable 2.5" HDD Bay (NViS 3542/3542P4 only)

Used to install a hot swappable 2.5" HDD drive.

#### SIM Slot

Used to insert a SIM card.

#### HDMI

Used to connect a high-definition display.

#### Power LED

Indicates the power status of the system.

#### HDD LED

Indicates the status of the hard drive.


#### LAN LEDs

Indicate the status of the LAN ports.

#### Power On/Off Switch

Press to power-on or power-off the system.

## Rear Panel of NViS 3542

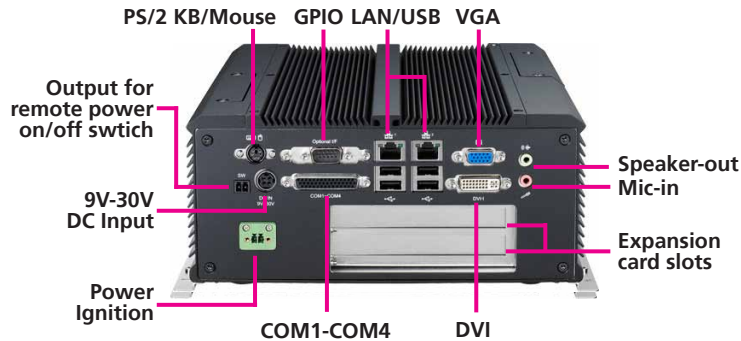

### Output for Remote Power On/Off Switch

Used to connect a remote to power on/off the system.

### PS/2 Keyboard/Mouse

Used to connect a PS/2 keyboard and PS/2 mouse via a cable.

### 9V-30V DC Input

Used to plug a DC power cord.

### GPIO

The GPIO connector supports 4 digital input and 4 digital output.

### COM1 to COM4

The DB44 port supports 3 RS232 and 1 RS232/422/485 compatible serial devices.

### LAN

Used to connect the system to a local area network.

### USB

Used to connect USB 2.0/1.1 devices.

### VGA

Used to connect an analog VGA monitor.

### DVI

Used to connect a digital LCD panel.

### Speaker-out

Used to connect a headphone or a speaker.

### Mic-in

Used to connect an external microphone.


### Expansion Slots

One PCI expansion slot.

### Power Ignition

Used to connect to power ignition module (NISKIG120).

## Front Panel of NViS 3542H

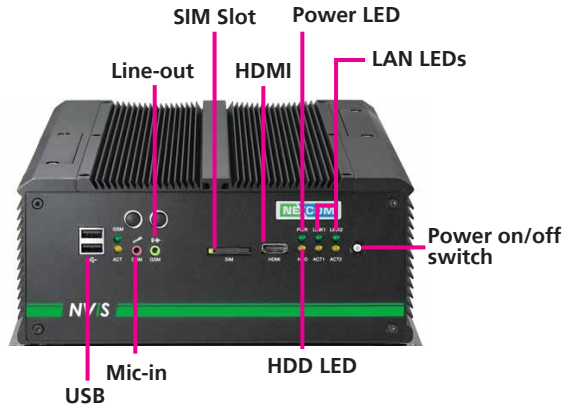

### USB

Used to connect USB 2.0/1.1 devices.

### Mic-in

Used to connect an external microphone.

### Line-out

Used to connect a headphone or a speaker.

### SIM Slot

Used to insert a SIM card.

### HDMI

Used to connect a high-definition display.

### Power LED

Indicates the power status of the system.

### HDD LED

Indicates the status of the hard drive.


### LAN LEDs

Indicate the status of the LAN ports.

### Power On/Off Switch

Press to power-on or power-off the system.

## Rear Panel of NViS 3542H

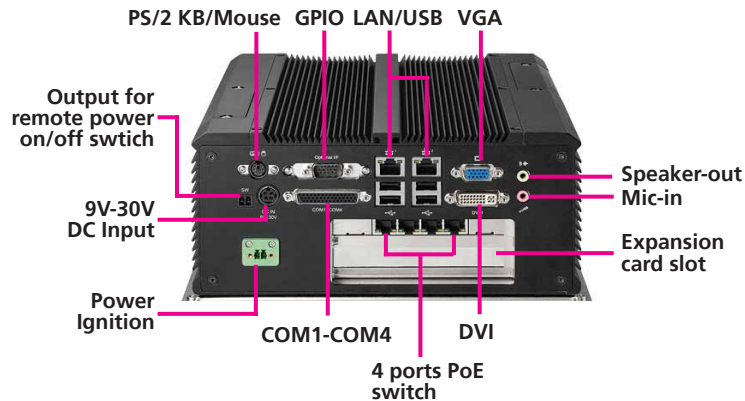

### Output for Remote Power On/Off Switch

Used to connect a remote to power on/off the system.

### PS/2 Keyboard/Mouse

Used to connect a PS/2 keyboard and PS/2 mouse via a cable.

### 9V-30V DC Input

Used to plug a DC power cord.

### GPIO

The GPIO connector supports 4 digital input and 4 digital output.

### COM1 to COM4

The DB44 port supports 3 RS232 and 1 RS232/422/485 compatible serial devices.

### LAN

Used to connect the system to a local area network.

### USB

Used to connect USB 2.0/1.1 devices.

### VGA

Used to connect an analog VGA monitor.

### DVI

Used to connect a digital LCD panel.

### Speaker-out

Used to connect a headphone or a speaker.

### Mic-in

Used to connect an external microphone.

### 4 Ports PoE Switch

Allows connecting 4 IP security cameras.


### Expansion Slots

One PCIe4 expansion slot.

### Power Ignition

Used to connect to power ignition module (NISKIG120).

## Front Panel of NViS 3542P4

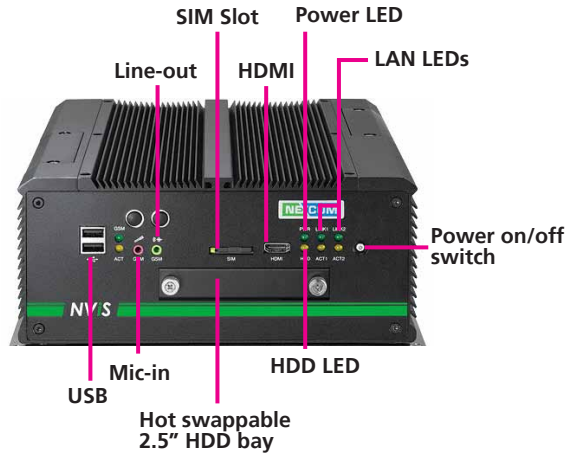

### USB

Used to connect USB 2.0/1.1 devices.

### Mic-in

Used to connect an external microphone.

### Line-out

Used to connect a headphone or a speaker.

### Hot Swappable 2.5" HDD Bay (NViS 3542/3542P4 only)

Used to install a hot swappable 2.5" HDD drive.

### SIM Slot

Used to insert a SIM card.

### HDMI

Used to connect a high-definition display.

### Power LED

Indicates the power status of the system.

### HDD LED

Indicates the status of the hard drive.


### LAN LEDs

Indicate the status of the LAN ports.

### Power On/Off Switch

Press to power-on or power-off the system.

## Rear Panel of NViS 3542P4

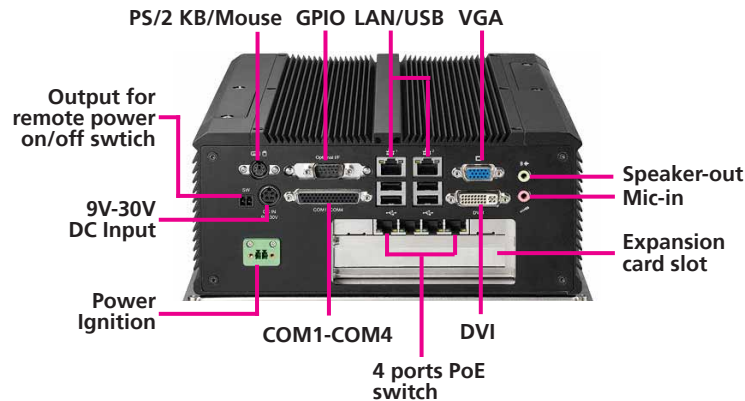

### Output for Remote Power On/Off Switch

Used to connect a remote to power on/off the system.

### PS/2 Keyboard/Mouse

Used to connect a PS/2 keyboard and PS/2 mouse via a cable.

### 9V-30V DC Input

Used to plug a DC power cord.

### GPIO

The GPIO connector supports 4 digital input and 4 digital output.

### COM1 to COM4

The DB44 port supports 3 RS232 and 1 RS232/422/485 compatible serial devices.

### LAN

Used to connect the system to a local area network.

### USB

Used to connect USB 2.0/1.1 devices.

### VGA

Used to connect an analog VGA monitor.

### DVI

Used to connect a digital LCD panel.

### Speaker-out

Used to connect a headphone or a speaker.

### Mic-in

Used to connect an external microphone.

### 4 Ports PoE Switch


Allows connecting 4 IP security cameras.

### Power Ignition

Used to connect to power ignition module (NISKIG120).



## Front Panel of NViS 3542P8

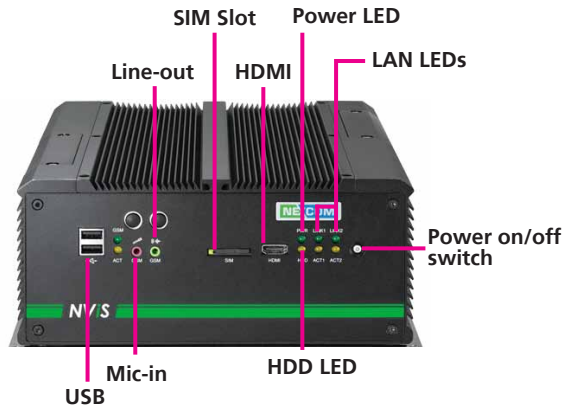

### HDMI

Used to connect a high-definition display.

### Power LED

Indicates the power status of the system.

### HDD LED

Indicates the status of the hard drive.

### LAN LEDs

Indicate the status of the LAN ports.

### Power On/Off Switch

Press to power-on or power-off the system.

### USB

Used to connect USB 2.0/1.1 devices.

### Mic-in

Used to connect an external microphone.


### Line-out

Used to connect a headphone or a speaker.

### SIM Slot

Used to insert a SIM card.

## Rear Panel of NViS 3542P8

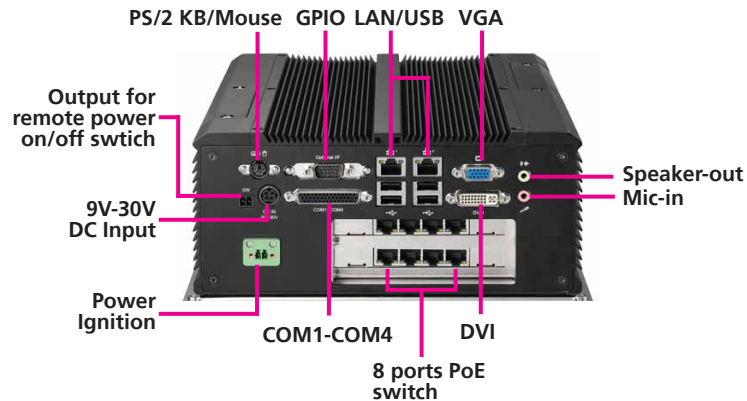

### Output for Remote Power On/Off Switch

Used to connect a remote to power on/off the system.

### PS/2 Keyboard/Mouse

Used to connect a PS/2 keyboard and PS/2 mouse via a cable.

### 9V-30V DC Input

Used to plug a DC power cord.

### GPIO

The GPIO connector supports 4 digital input and 4 digital output.

### COM1 to COM4

The DB44 port supports 3 RS232 and 1 RS232/422/485 compatible serial devices.

### LAN

Used to connect the system to a local area network.

### USB

Used to connect USB 2.0/1.1 devices.

### VGA

Used to connect an analog VGA monitor.

### DVI

Used to connect a digital LCD panel.

### Speaker-out

Used to connect a headphone or a speaker.

### Mic-in

Used to connect an external microphone.

### 8 Ports PoE Switch


Allows connecting 8 IP security cameras.

### Power Ignition







Used to connect to power ignition module (NISKIG120).

# Mechanical Dimensions







## NViS 3540/3540H

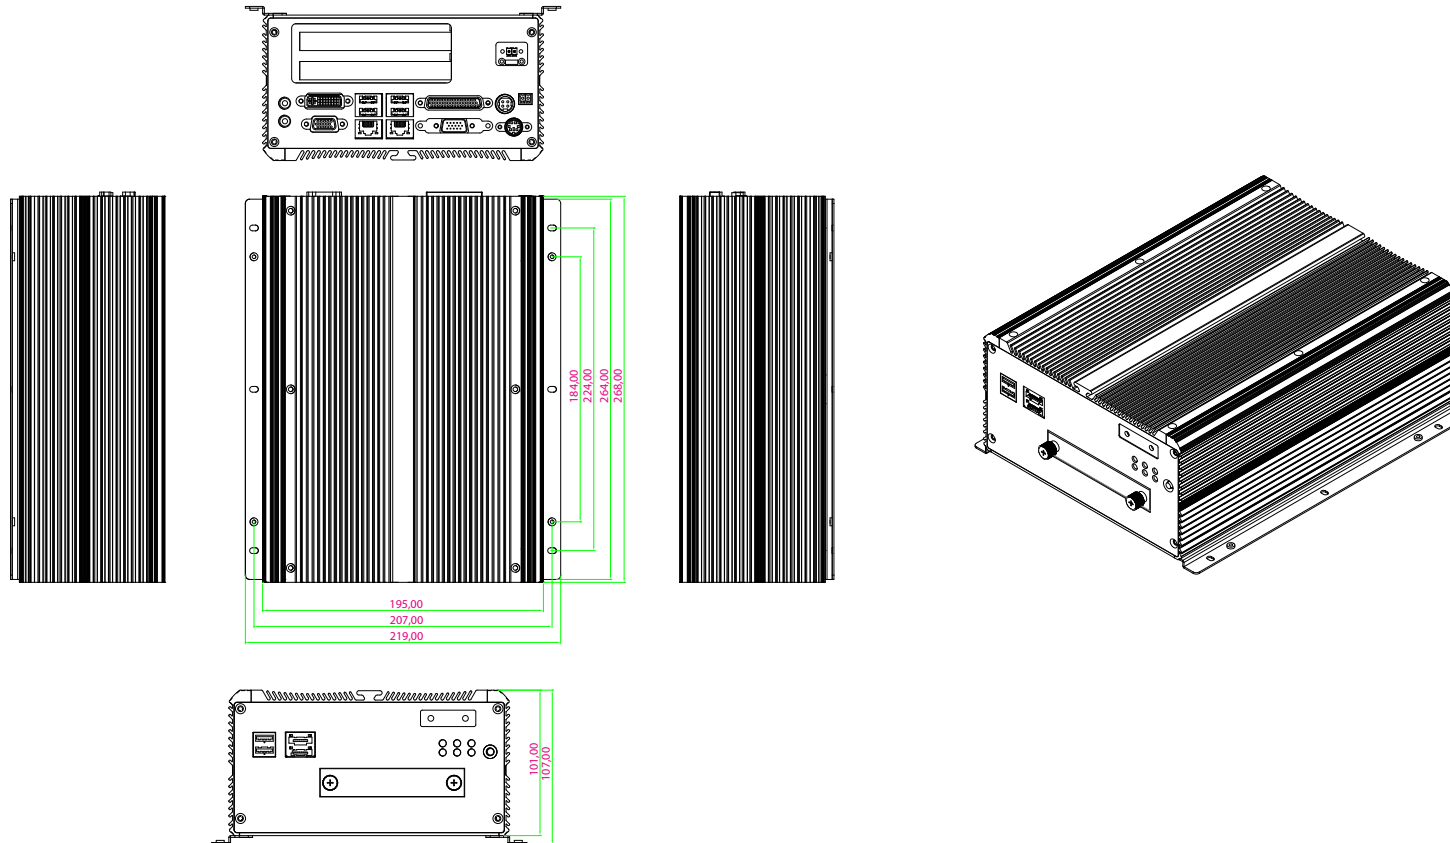






## NViS 3540P4

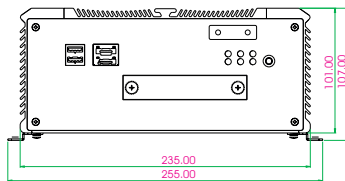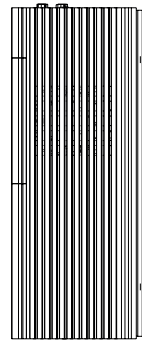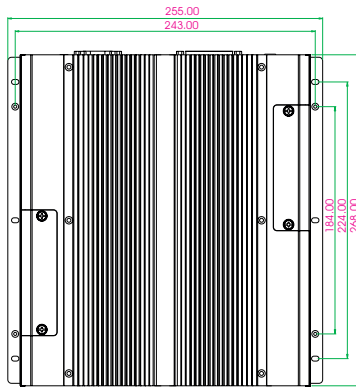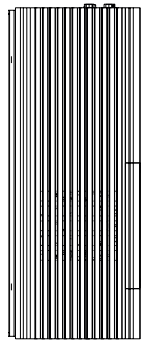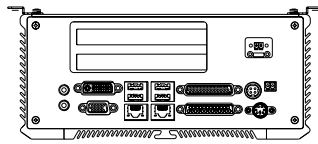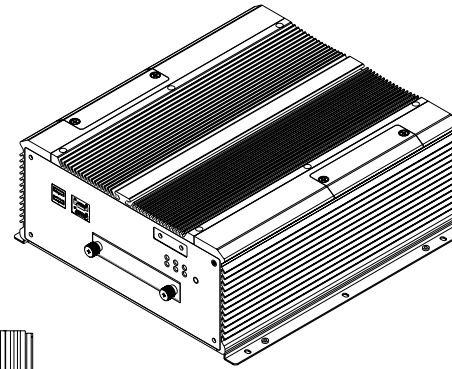






## NViS 3540P8

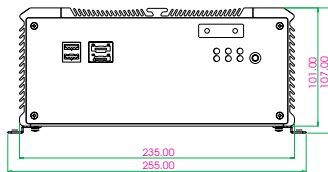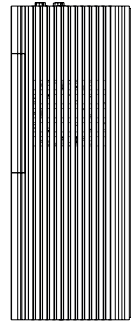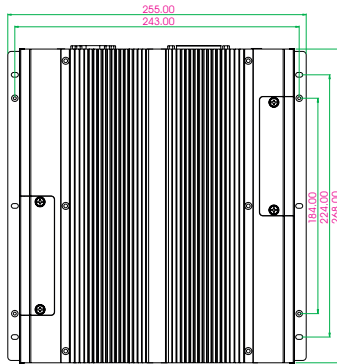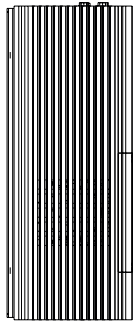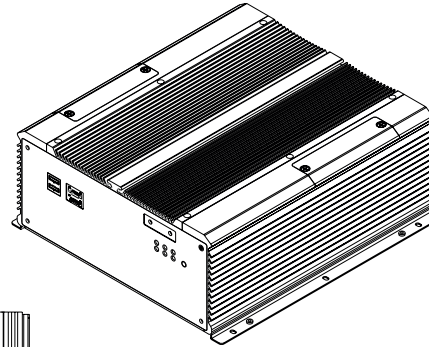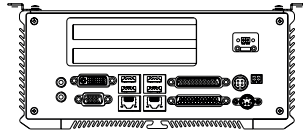

## NViS 3542 and NViS 3542P4

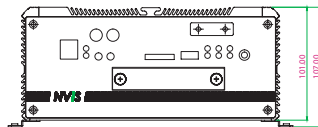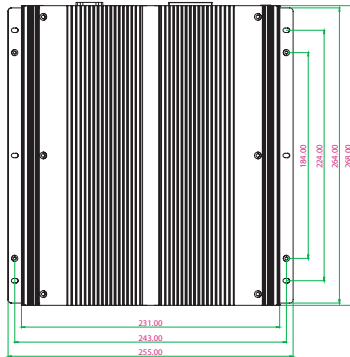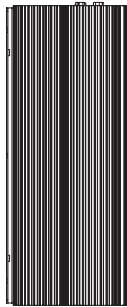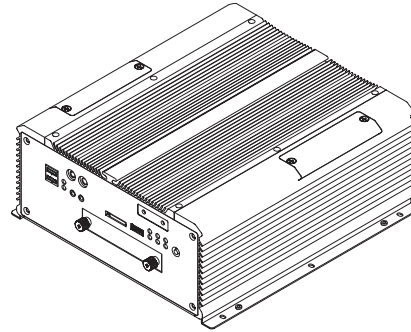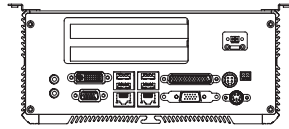

## NViS 3542H and NViS 3542P8

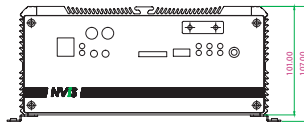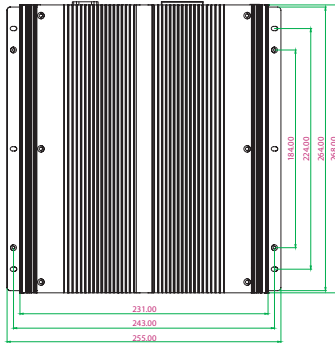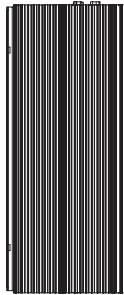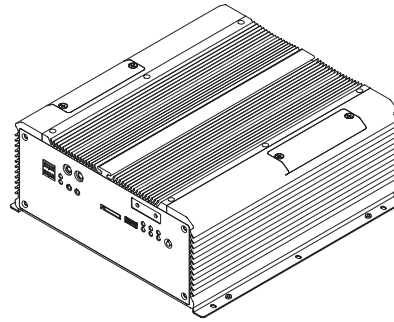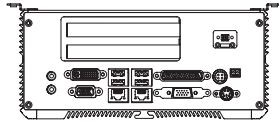

# Chapter 2: Jumpers and Connectors

This chapter describes how to set the jumpers on the motherboard. Note that the following procedures are generic for all NViS 3540 series.

## Before You Begin

- Ensure you have a stable, clean working environment. Dust and dirt can get into components and cause a malfunction. Use containers to keep small components separated.
- Adequate lighting and proper tools can prevent you from accidentally damaging the internal components. Most of the procedures that follow require only a few simple tools, including the following:
  - A Philips screwdriver
  - A flat-tipped screwdriver
  - A set of jewelers Screwdrivers
  - A grounding strap
  - An anti-static pad
- Using your fingers can disconnect most of the connections. It is recommended that you do not use needle-nosed pliers to disconnect connections as these can damage the soft metal or plastic parts of the connectors.
- Before working on internal components, make sure that the power is off. Ground yourself before touching any internal components, by touching a metal object. Static electricity can damage many of the elec-

tronic components. Humid environment tend to have less static electricity than dry environments. A grounding strap is warranted whenever danger of static electricity exists.

## Precautions

Computer components and electronic circuit boards can be damaged by discharges of static electricity. Working on the computers that are still connected to a power supply can be extremely dangerous.

Follow the guidelines below to avoid damage to your computer or yourself:

- Always disconnect the unit from the power outlet whenever you are working inside the case.
- If possible, wear a grounded wrist strap when you are working inside the computer case. Alternatively, discharge any static electricity by touching the bare metal chassis of the unit case, or the bare metal body of any other grounded appliance.
- Hold electronic circuit boards by the edges only. Do not touch the components on the board unless it is necessary to do so. Don't flex or stress the circuit board.
- Leave all components inside the static-proof packaging that they shipped with until they are ready for installation.
- Use correct screws and do not over tighten screws.




## Jumper Settings


A jumper is the simplest kind of electric switch. It consists of two metal pins and a cap. When setting the jumpers, ensure that the jumper caps are placed on the correct pins. When the jumper cap is placed on both pins, the jumper is **short**. If you remove the jumper cap, or place the jumper cap on just one pin, the jumper is **open**.

Refer to the illustrations below for examples of what the 2-pin and 3-pin jumpers look like when they are short (on) and open (off).

Two-Pin Jumpers: Open (Left) and Short (Right)

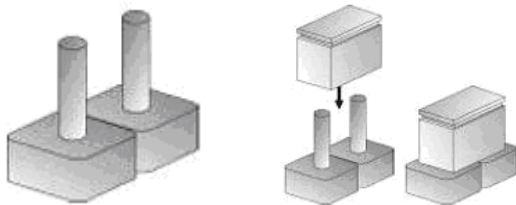


Three-Pin Jumpers: Pins 1 and 2 Are Short

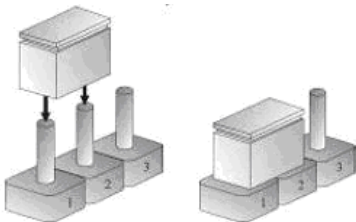


## Locations of the Jumpers and Connectors

### NISB 3500

The figure below is the top view of the NISB 3500 main board which is the main board used in the NVIS 3540 Series system. It shows the locations of the jumpers and connectors.

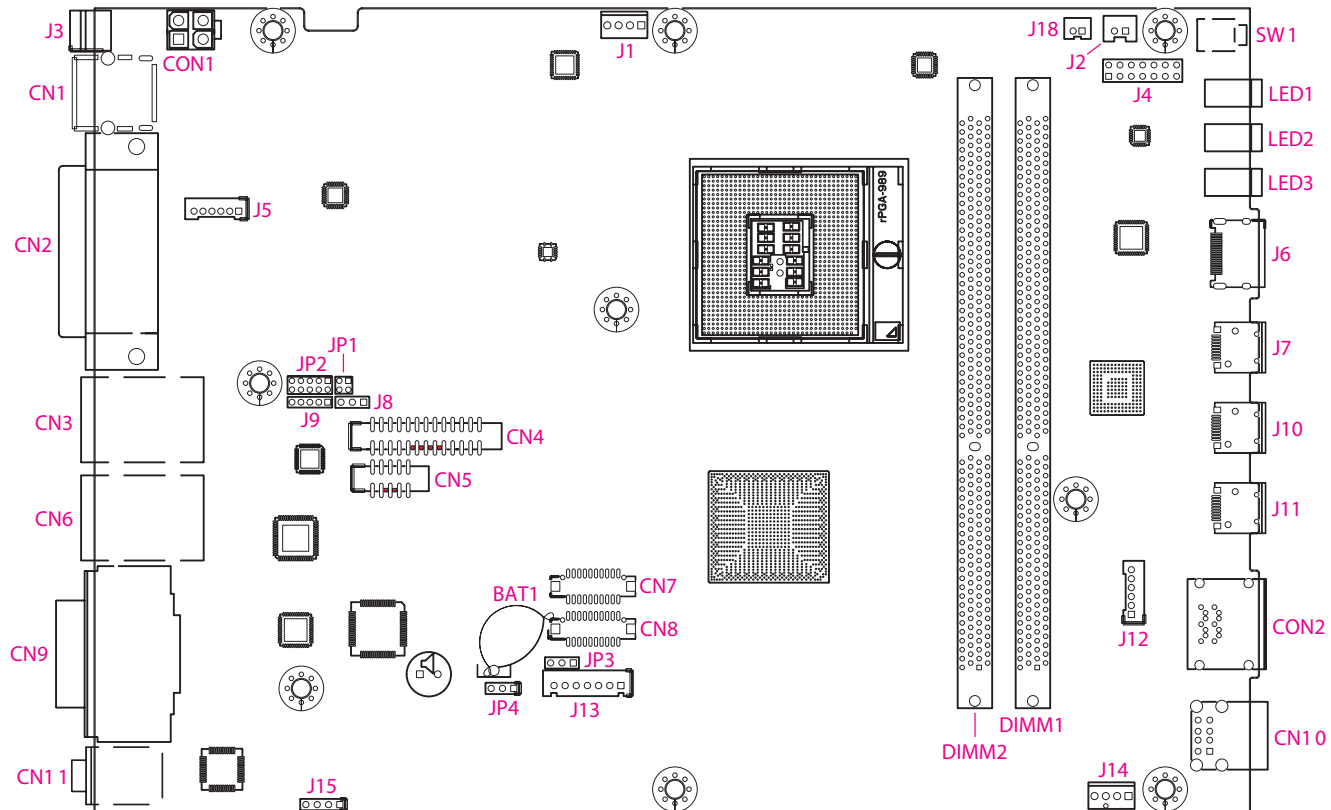

The figure below is the bottom view of the NISB 3500 main board.

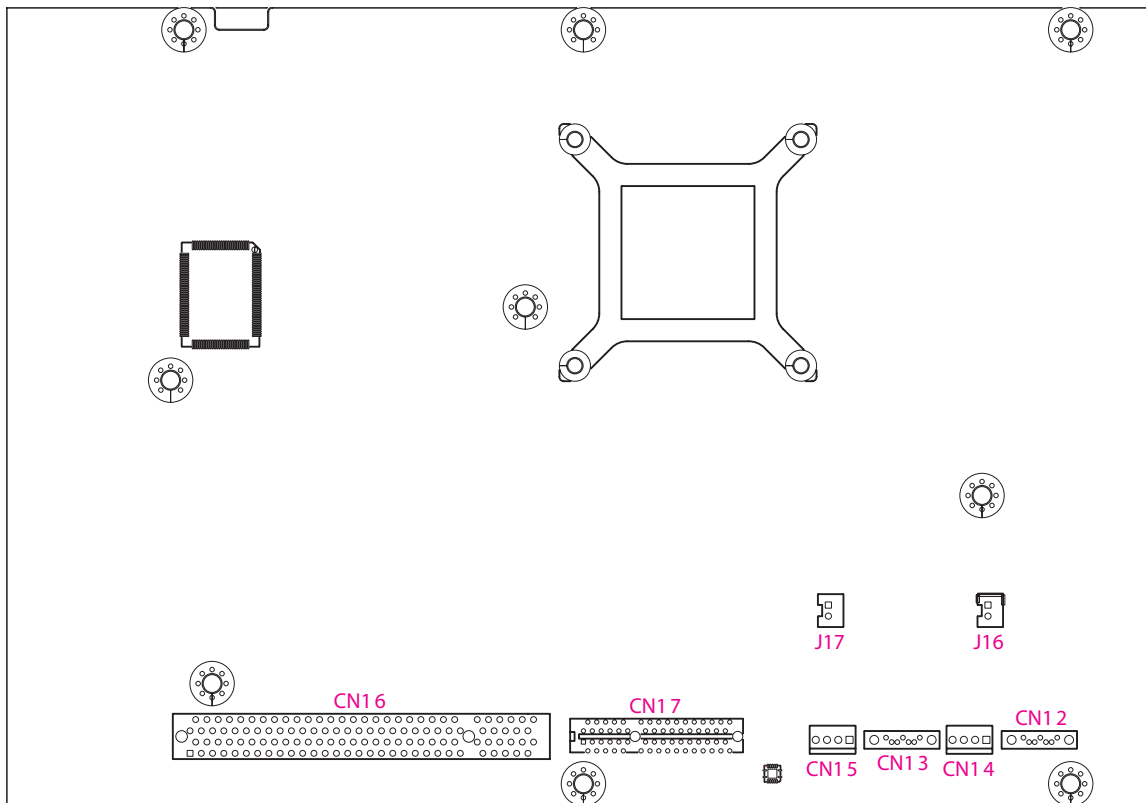

## Jumpers

### Clear CMOS

Connector size: 1x3 3-pin header, 2.54 mm pitch

Connector location: JP4

1  3

Pin	Settings
1-2 On	*Normal
2-3 On	CMOS Clear

1-2 On: default

Pin	Definition
1	RTCRST#_PU
2	RTCRST#
3	CLR_CMOS


## Connector Pin Definitions

### External I/O Interface - Front Panel

#### USB Ports

Connector type: Dual USB port

Connector location: CN10

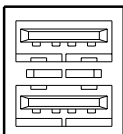


Pin	Definition	Pin	Definition
1	+5V	7	USB1+
2	USB0-	8	GND
3	USB0+	22	GND
4	GND	23	GND
5	+5V	26	GND
6	USB1-	27	GND

#### eSATA Ports

Connector type: eSATA port

Connector location: CON2A and CON2B



Pin	Definition	Pin	Definition
1	GND	5	SATA_RXN4
2	SATA_TXP4	6	SATA_RXP4
3	SATA_TXN4	7	GND
4	GND		

## Status Indicators

PWR



HDD

Status	LED Color
PWR	Green
HDD	Yellow

## LAN1/LAN2 Link/Active LED

Connector location: LED1 and LED2

LINK1



LINK2



ACT1

ACT2

Pin	Definition
C1	LAN2_LINK_N
C2	LAN2_ACT_N
A1	LAN2_LINK_P
A2	LAN2_ACT_P

## ATX Power On/Off Switch

Connector location: SW1



Pin	Definition
On	Blue light
Off	Red light

Pin	Definition	Pin	Definition
1	GND	2	PBT_PU
3	PBT_PU	4	GND
A1	PWRLED_N	C1	PWRLED_P

## External I/O Interface - Rear Panel

### Remote Power On/Off Switch

Connector type: 2-pin switch

Connector location: J3




Pin	Definition
1	GND
2	PBT_PU

### PS/2 Keyboard/Mouse Port

Connector type: PS/2, Mini-DIN-6, JST-2.0mm-M-180

Connector location: J5

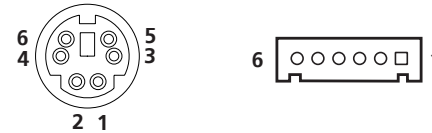


Pin	Definition	Pin	Definition
1	5VSB	2	KDAT
3	KCLK	4	MDAT
5	MCLK	6	GND



### 9V-30V DC Input

Connector type: POWER-F-90

Connector location: CN1




Pin	Definition	Pin	Definition
1	VIN	2	VIN
3	GND	4	GND
5	GND		

### GPIO Connector

(4 digital input and 4 digital output)

Connector type: DB-15 port, 2x5 10-pin header, 2.0 mm-M-180

Connector location: JP2

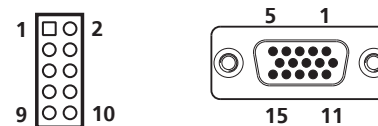


Pin	Definition	Pin	Definition
1	VCC5	2	GND
3	SIO_GPO24	4	SIO_GPI20
5	SIO_GPO25	6	SIO_GPI21
7	SIO_GPO26	8	SIO_GPI22
9	SIO_GPO27	10	SIO_GPI23


### Serial Interface (COM 1 - COM 4)

Connector type: 44-pin D-Sub, 2x22 (12.55mm x 53.04mm)

Connector location: CN4



The 44-pin D-Sub connector is used to connect 4 external serial devices. Use the COM ports on the provided “DB44 to 4x DB9 COM port cable” (included in the package) to connect the devices.



Pin	Definition	Pin	Definition
1	CN10_1	2	CN10_2
3	CN10_3	4	CN10_4
5	GND	6	CN10_6
7	CN10_7	8	CN10_8
9	CN10_9	10	GND
11	CN10_11	12	CN10_12
13	CN10_13	14	CN10_14
15	GND	16	CN10_16
17	CN10_17	18	CN10_18
19	CN10_19	20	GND
21	CN10_21	22	CN10_22
23	CN10_23	24	CN10_24
25	GND	26	CN10_26
27	CN10_27	28	CN10_28
29	CN10_29	30	GND
31	CN10_31	32	CN10_32
33	CN10_33	34	CN10_34
35	GND	36	CN10_36
37	CN10_37	38	CN10_38
39	SP4_RI_TI	40	GND
41	NC	42	NC
43	NC	44	NC

COM1 (RS232) labelled "A" on DB9 Cable Connector					
DB44 Pin #	DB9 Pin #	Def.	DB44 Pin #	DB9 Pin #	Def.
1	1	DCD1	2	2	RXD1
3	3	TXD1	4	4	DTR1
5	5	GND	6	6	DSR1
7	7	RTS1	8	8	CTS1
9	9	RI1	10		GND

COM2 (RS232) labelled "B" on DB9 Cable Connector					
DB44 Pin #	DB9 Pin #	Def.	DB44 Pin #	DB9 Pin #	Def.
11	1	DCD2	12	2	RXD2
13	3	TXD2	14	4	DTR2
15	5	GND	16	6	DSR2
17	7	RTS2	18	8	CTS2
19	9	RI2	20		GND

COM3 (RS232) labelled "C" on DB9 Cable Connector					
DB44 Pin #	DB9 Pin #	Def.	DB44 Pin #	DB9 Pin #	Def.
21	1	DCD3	22	2	RXD3
23	3	TXD3	24	4	DTR3
25	5	GND	26	6	DSR3
27	7	RTS3	28	8	CTS3
29	9	RI3	30		GND

COM1 (RS232) labelled "D" on DB9 Cable Connector					
DB44 Pin #	DB9 Pin #	Def.	DB44 Pin #	DB9 Pin #	Def.
31	1	DCD1	32	2	RXD1
33	3	TXD1	34	4	DTR1
35	5	GND	36	6	DSR1
37	7	RTS1	38	8	CTS1
39	9	RI1	40		GND


Note: Pin 39 is defined as an external power source, which can be selected for 5V or 12V using JP10.

COM2 (RS422) labelled "B" on DB9 Cable Connector					
DB44 Pin #	DB9 Pin #	Def.	DB44 Pin #	DB9 Pin #	Def.
11	1	TXD-	12	2	TXD+
13	3	RXD+	14	4	RXD-
15	5	GND	16	6	RTS-
17	7	RTS#	18	8	CTS+
19	9	CTS-	20		GND

COM2 (RS485) labelled "B" on DB9 Cable Connector					
DB44 Pin #	DB9 Pin #	Def.	DB44 Pin #	DB9 Pin #	Def.
11	1	TXD-	12	2	TXD+
		RXD-			RXD+
13	3	Reserved	14	4	Reserved
15	5	Reserved	16	6	Reserved
17	7	Reserved	18	8	Reserved
19	9	Reserved	20		Reserved

## LAN Ports

Connector type: RJ45 port with LEDs  
Connector location: CN3B and CN6B

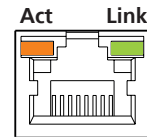

Act	Status
Orange Blinking	Data Activity
Off	No Activity


Link	Status
Green Always Lighted	Linked
Off	No Link

Pin	Definition	Pin	Definition
09	LAN1_M0P	10	LAN1_M0N
11	LAN1_M1P	12	LAN1_M2P
13	LAN1_M2N	14	LAN1_M1N
15	LAN1_M3P	16	LAN1_M3N
17	LAN1_LED1P	18	LAN1_LED_ACT#
19	LAN1_LED2P	20	LAN1_LINK#
21	GND	24	GND
25	GND	28	GND

## USB Ports

Connector type: Dual USB port

Connector location: CN3A and CN6A

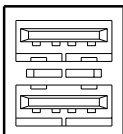


Pin	Definition	Pin	Definition
1	+5V	7	USB1+
2	USB0-	8	GND
3	USB0+	22	GND
4	GND	23	GND
5	+5V	26	GND
6	USB1-	27	GND

## VGA Port

Connector type: DB-15 port, 15-pin D-Sub

Connector location: CN9B

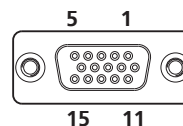


Pin	Definition	Pin	Definition
25	RED_VGA	26	GREEN_VGA
27	BLUE_VGA	28	GND
29	GND	30	GND
31	GND	32	GND
33	VGA_+5V	34	GND
35	GND	36	DATA_V
37	HS_VGA	38	VS_VGA
39	CLK_V		

### DVI-I Port

Connector type: 30-pin D-Sub, 2.0mm-M-180

Connector location: CN9A

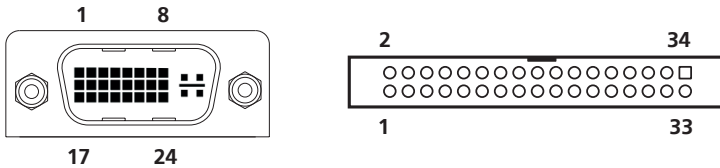


Pin	Function	Pin	Function
01	HDMI_DATA2_N	2	HDMI_DATA2_P
03	DVI_GND	4	NC
05	NC	6	HDMI_CTL_CLK
07	HDMI_CTL_SDA	8	DC_VSYNC_VGA
09	HDMI_DATA1_N	10	HDMI_DATA1_P
11	DVI_GND	12	NC
13	NC	14	HDMIC_PWR_S
15	DVI_GND	16	HDMIC_HPDET
17	HDMI_DATA0_N	18	HDMI_DATA0_P
19	DVI_GND	20	DC_DATA_VGA
21	DC_CLK_VGA	22	NC
23	HDMI_LKP	24	HDMI_LKN
C1	DC_RED_VGA	C2	DC_GREEN_VGA
C3	DC_BLUE_VGA	C4	DC_HSYNC_VGA
C5A	DVI_GND	C5B	DVI_GND

### Speaker-out Jack

Connector type: 5-pin jack

Connector location: CN11B




Pin	Definition
1	GND
2	SPK_Out_R
3	NC
4	NC
5	SPK_Out_L

### Mic-in Jack

Connector size: 5-pin jack, 25.9x12.6x17.0mm

Connector location: CN11A




Pin	Definition
1	AU_GND
2	MIC_OUT-L
3	AU_GND
4	MIC_JD1
5	MIC_OUT-R

## Internal Connectors

### ATX Power Output Connector

Connector type: 2x2 Aux power connector

Connector location: CON1



Pin	Definition
1	GND
2	GND
3	VIN
4	VIN

### Reset Connector

Connector type: 1x2 2-pin header, JST 2.5mm-M-90

Connector location: J2



Pin	Definition
1	RESET#
2	GND



### SMBus DATA/CLK Pin Header

Connector type: 1x3 3-pin header 2.54mm-M-180

Connector location: J8



Pin	Definition
1	SMB_CLK
2	SMB_DATA
3	GND

### LVDS Backlight Power Select

Connector type: 1x3 3-pin header 2.54mm-M-180

Connector location: JP3




Pin	Definition
1	VCC5
2	PANEL1_VDD
3	VCC3

### LVDS Channel A Connector

Connector type: LCD-1.25mm-M-180

Connector location: CN7

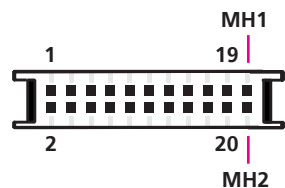


Pin	Definition	Pin	Definition
1	L_DDC_CLK	2	L_DDC_DATA
3	VDD	4	LA_DATAP0
5	LA_DATAP3	6	LA_DATAN0
7	LA_DATAN3	8	VDD
9	GND_LVDS	10	LA_DATAP1
11	LA_CLKP	12	LA_DATAN1
13	LA_CLKN	14	GND_LVDS
15	GND_LVDS	16	PANEL1_BACKLIGHT
17	LA_DATAP2	18	PANEL1_BACKLIGHT
19	LA_DATAN2	20	GND_LVDS

### LVDS Channel B Connector

Connector type: LCD-1.25mm-M-180

Connector location: CN8

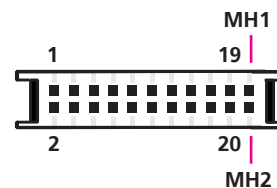

Pin	Definition	Pin	Definition
1	L_DDC_CLK	2	L_DDC_DATA
3	VDD	4	LB_DATAP0
5	LB_DATAP3	6	LB_DATAN0
7	LB_DATAN3	8	VDD
9	GND_LVDS	10	LB_DATAP1
11	LB_CLKP	12	LB_DATAN1
13	LB_CLKN	14	GND_LVDS
15	GND_LVDS	16	PANEL1_BACKLIGHT
17	LB_DATAP2	18	PANEL1_BACKLIGHT
19	LB_DATAN2	20	GND_LVDS

### LVDS Backlight Connector

Connector type: 1x7 7-pin header JST-2.5mm-M-180

Connector location: J13



Pin	Definition
1	VCC5
2	PANEL1_BACKLIGHT
3	PANEL1_BACKLIGHT
4	L_BKLTCTL_R
5	GND
6	GND
7	L_BKLTEN

### SATA Ports

Connector type: Standard Serial ATAII 7P (1.27mm, SATA-M-180)

Connector location: CN12 and CN13




Pin	Definition
1	GND
2	SATA_TXP1
3	SATA_TXN1
4	GND
5	SATA_RXN1
6	SATA_RXP1
7	GND

### SATA Power Connectors

Connector type: 4-pin Wafer, 2.54mm-M-180

Connector location: CN14 and CN15



Pin	Definition
1	+12V
2	GND
3	GND
4	VCC5

### SATA DOM Power Connectors

Connector type: 1x2 2-pin JST wafer, 2.54mm pitch

Connector location: J16 and J17




Pin	Definition
1	+12V
2	GND

### USB Port Connector

Connector type: 6-pin boxed header, JST-2.0mm-M-180

Connector location: J12



Pin	Definition
1	+5V
2	GND
3	USB10+
4	USB11-
5	USB11+
6	USB2_GND

### COM4 RI Pin Header

Connector type: 1x5 5-pin header 2.0mm -M-180

Connector location: J9



Pin	Definition
1	VCC5
2	SP4_RI_T
3	+12V
4	SP4_RI_T
5	SP4_R

### GPIO LED Connector

Connector type: 2x2 4-pin 2.0mm -M-180

Connector location: JP1



Pin	Definition
1	GPO_LED0
2	GND
3	GPO_LED1
4	GND

### Line-in Connector

Connector type: 1x4 4-pin header 2.5mm-M-180

Connector location: J15




Pin	Definition
1	LINE1-LP
2	GND
3	LINE1-JD
4	LINE1-RP

### Internal Power/HDD/LAN Power/LAN Active LED

Connector type: 2x7 14-pin header 2.54mm-M-180

Connector location: J4




Pin	Description	Pin	Description
1	LED_PWRN	2	LED_PWRP
3	HD_LEDN	4	LED_HDDP
5	LAN1_LINK#	6	LAN1_LINKP
7	LAN1_LED_ACT#	8	LAN1_ACTP
9	LAN2_LINK#	10	LAN2_LINKP
11	LAN2_LED_ACT#	12	LAN2_ACTP
13	NC	14	NC

### Smart Fan Connectors

Connector size: 4-pin Wafer, 2.54mm-M-180

Connector location: J1 and J14




Pin	Definition
1	GND
2	+12V
3	CPUFANIN_P
4	CPUFANOUT_R

### COM5 Connector

Connector type: 2x5 10-pin boxed header, 2.0mm-M-180

Connector location: CN5




Pin	Definition	Pin	Definition
1	SP5_DCD	2	SP5_RXD
3	SP5_TXD	4	SP5_DTR
5	GND	6	SP5_DSR
7	SP5_RTS	8	SP5_CTS
9	SP5_RI	10	GND



## Parallel Connector

Connector size: 2x13 26-pin box header, 2.0mm-M-180

Connector location: CN4



Pin	Definition	Pin	Definition
1	LPT_RP_STB#	14	LPT_AFD#R
2	LPT_RP_PRD0	15	LPT_ERR#
3	LPT_RP_PRD1	16	LPT_INIT#R
4	LPT_RP_PRD2	17	LPT_SLIN#R
5	LPT_RP_PRD3	18	GND_LPT
6	LPT_RP_PRD4	19	GND_LPT
7	LPT_RP_PRD5	20	GND_LPT
8	LPT_RP_PRD6	21	GND_LPT
9	LPT_RP_PRD7	22	GND_LPT
10	LPT_ACK#R	23	GND_LPT
11	LPT_BUSY	24	GND_LPT
12	LPT_PE	25	GND_LPT
13	LPT_SLCT	26	NC

# Chapter 3: System Setup

## Removing the Chassis Cover



Prior to removing the chassis cover, make sure the unit's power is off and disconnected from the power sources to prevent electric shock or system damage.

1. The screws on the cover are used to secure the cover to the chassis.
2. Remove these screws and then put them in a safe place for later use.


3. Lift up the cover and then remove it from the chassis.




The dots denote the locations of the screws.

## Installing a DIMM

1. Push the ejector tabs which are at the ends of the socket outward. This indicates that the socket is unlocked.

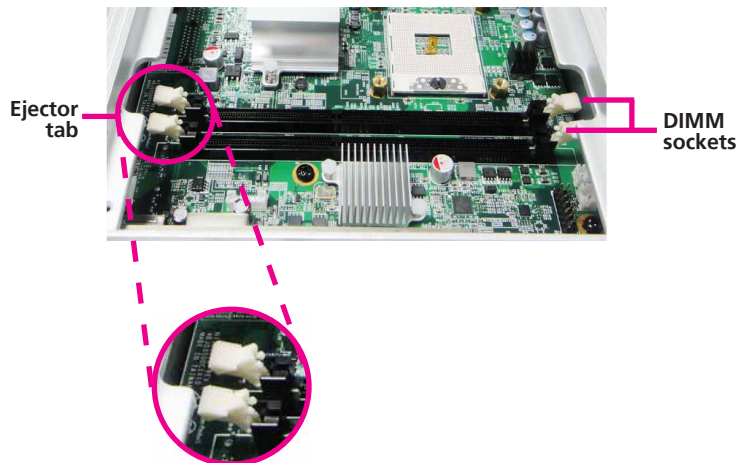

2. Note how the module is keyed to the socket. Grasping the module by its edges, align the module with the socket so that the “notch” on the module is aligned with the “key” on the socket. The key ensures the module can be plugged into the socket in only one direction.

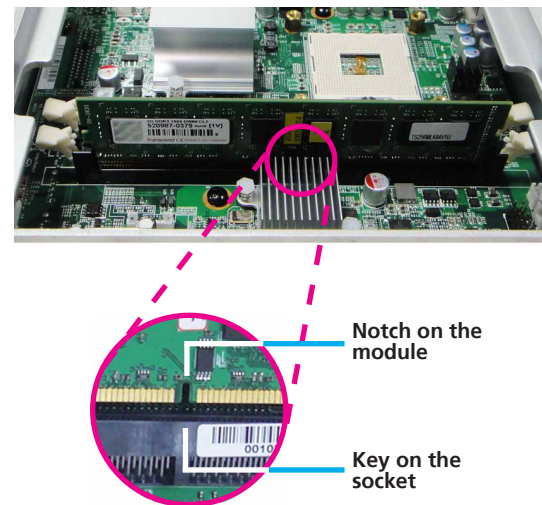


3. Seat the module vertically, pressing it down firmly until it is completely seated in the socket. The ejector tabs at the ends of the socket will automatically snap into the locked position to hold the module in place.




## Installing the CPU

1. The CPU socket is readily accessible after you have removed the chassis cover.

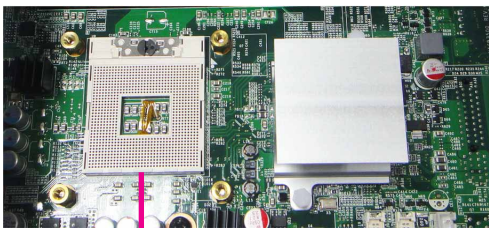

CPU socket

2. Make sure the screw is in its unlock position. If it's not, use a screwdriver to turn the screw to its unlock position.

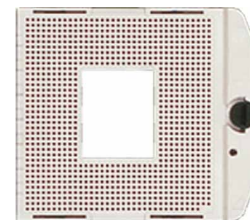


Screw in unlocked position




- Make sure all power cables are unplugged before you install the CPU.
- The CPU socket must not come in contact with anything other than the CPU. Avoid unnecessary exposure.

- Position the CPU above the socket. The gold triangular mark on the CPU must align with pin 1 of the CPU socket.

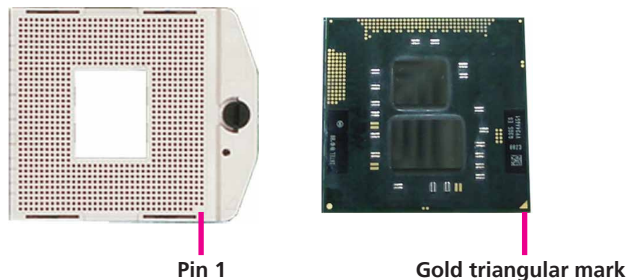


-  Handle the CPU by its edges and avoid touching the pins.

- Insert the CPU into the socket until it is seated in place. The CPU will fit in only one orientation and can easily be inserted without exerting any force. Use a screwdriver to turn the screw to its lock position.

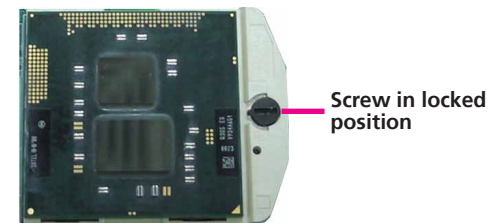

Do not force the CPU into the socket. Forcing the CPU into the socket may bend the pins and damage the CPU.

5. Before you install the heat sink, apply thermal paste onto the top of the CPU. Do not spread the paste all over the surface. When you later place the heat sink on top of the CPU, the compound will disperse evenly.
6. Align the mounting holes of the heat sink with the mounting studs on the board and then secure the heat sink with the provided screws.

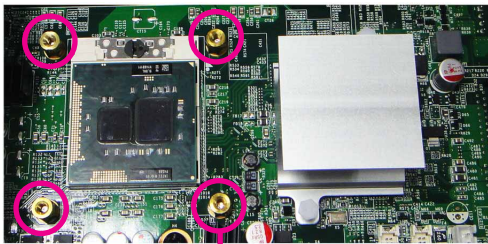

Mounting stud



## Installing a SATA Hard Drive

1. With the bottom side of the chassis facing up, remove the screws of the bottom cover.
2. Remove the 4 mounting screws that secure the drive bay to the chassis.



If you are installing one SATA drive only, the system will allow you to install an optional CompactFlash card, a half length SATA DOM or a full length SATA DOM.

3. Remove the drive bay. The drive bay is used to hold a SATA hard drive.

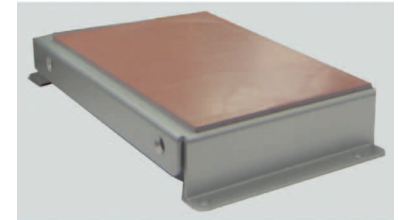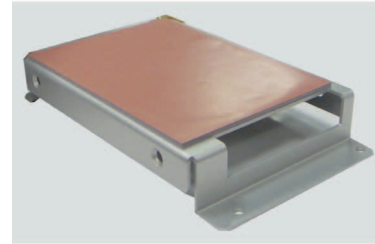




4. Place the SATA hard drive on the drive bay. Make sure the connector side of the SATA drive is facing the opening of the drive bay.
5. Align the mounting holes that are on the sides of the SATA drive with the mounting holes on the drive bay then use the provided mounting screws to secure the drive in place.




Connector side of the SATA drive

6. Connect the SATA data cable and SATA power cable to the connectors on the SATA drive.

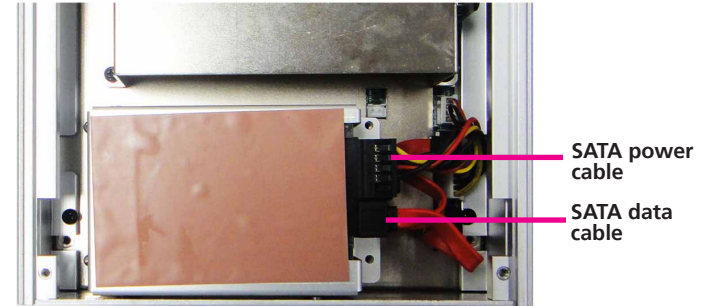

7. Use the provided mounting screws to secure the drive bay to the chassis.

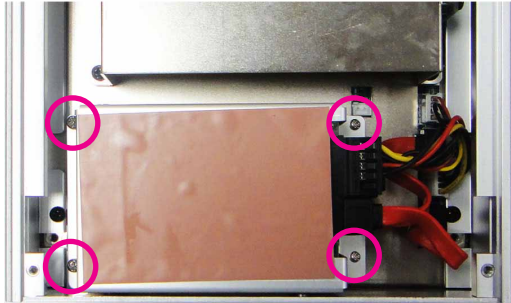


## Installing a Half Length SATA DOM with SATA HD




If you intend to install a half length SATA DOM, you may install one SATA hard drive only.

1. Prior to installing the SATA DOM, you must first place the drive bay shown below into the chassis.

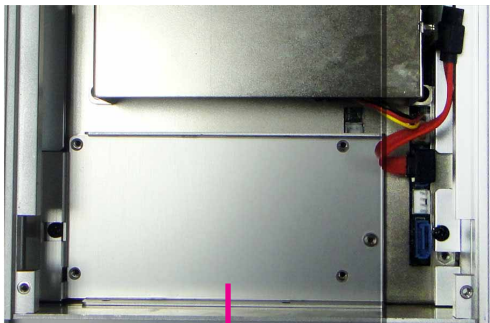



Drive bay

2. Locate for the SATA connector on the board.

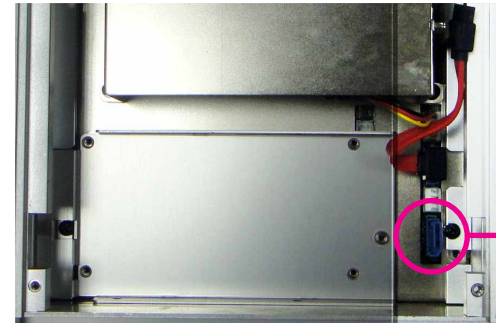

SATA connector

3. Align the SATA connector located on the solder side of the SATA DOM to the SATA connector that is on the board and then press it down firmly. Secure the SATA DOM with the provided mounting screw.

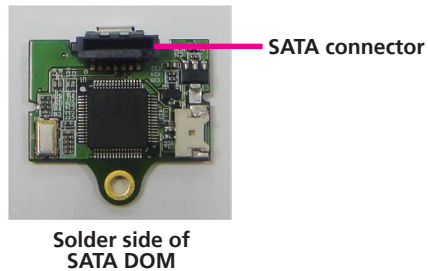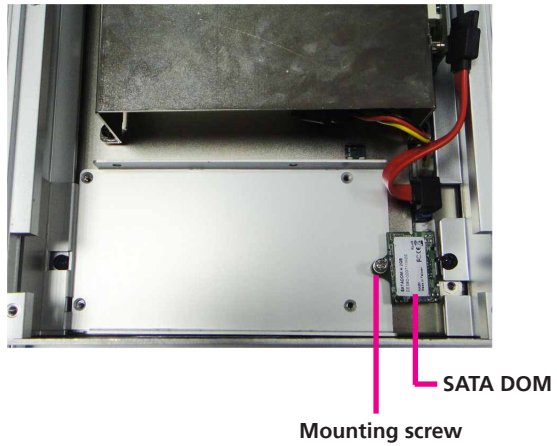


## Installing a Full Length SATA DOM



If you intend to install a full length SATA DOM, you may install one SATA hard drive only.

1. Prior to installing the full length SATA DOM, remove any drive bay that may have been previously installed.
2. Locate for the SATA connector on the board.
3. Align the SATA connector located on the solder side of the SATA DOM to the SATA connector that is on the board and then press it down firmly. Secure the SATA DOM with the provided mounting screw.

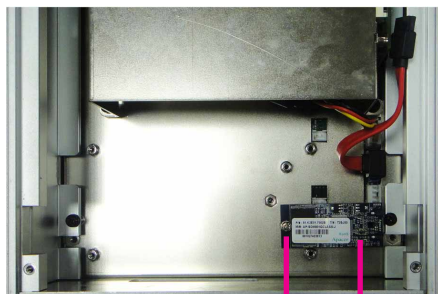

Mounting screw  
SATA DOM




Solder side of  
SATA DOM

SATA connector


4. Before installing the single drive bay back, you must first replace the 4 mounting studs.

Now place the single drive bay by aligning the mounting holes of the drive bay with the mounting studs.

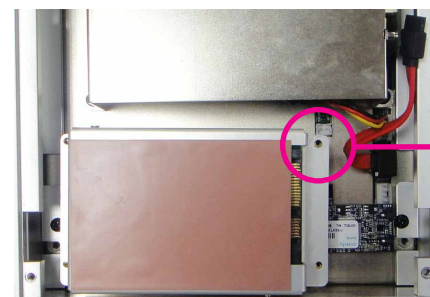


Mounting hole

5. Secure the drive bay with the provided mounting screws.

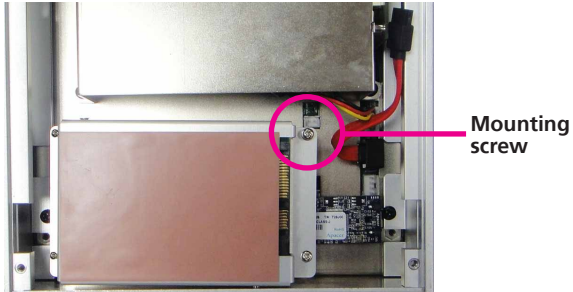


## Installing a Wireless LAN Module (NVIS 3542 Series Only)

1. Locate the Mini PCI Express slot on the board.

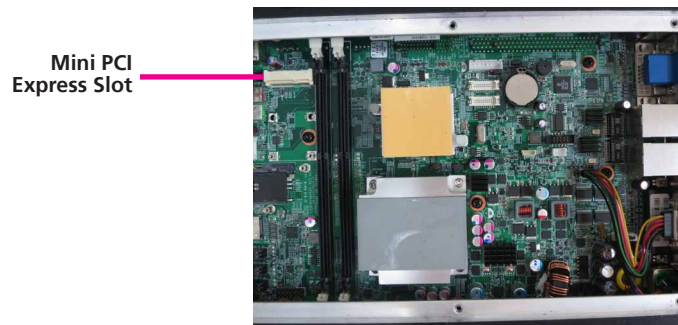


2. Insert the wireless LAN module into the Mini PCI Express slot at a 45 degrees angle until the gold-plated connector on the edge of the module completely disappears inside the slot.

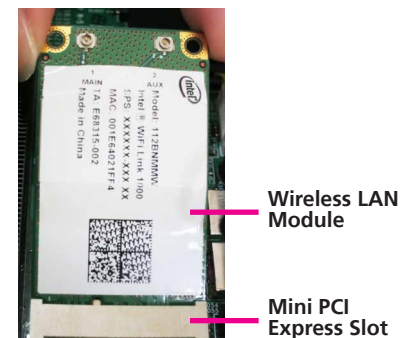


3. Push the module down and then secure it with mounting screws.  
Attach one end of the RF cable onto the module.

4. Remove the antenna hole covers that is located at the front panel of the chassis.

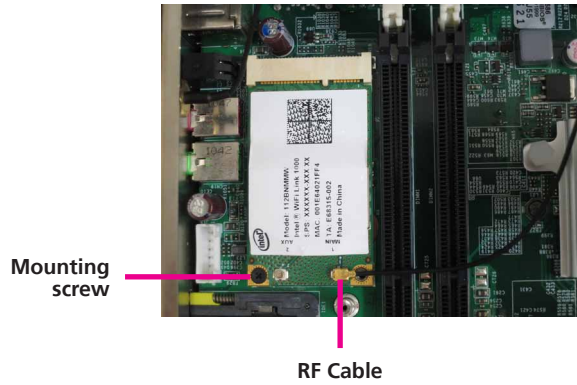




5. Insert the antenna jack end of the cable through the antenna hole. Insert the 2 rings (ring 1 and then ring 2) onto the antenna jack end of the cable.

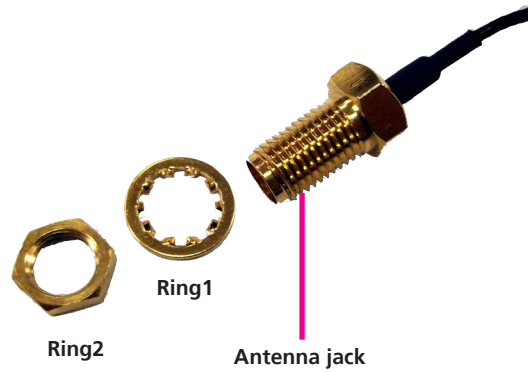


6. Connect an external antenna to the antenna jack.

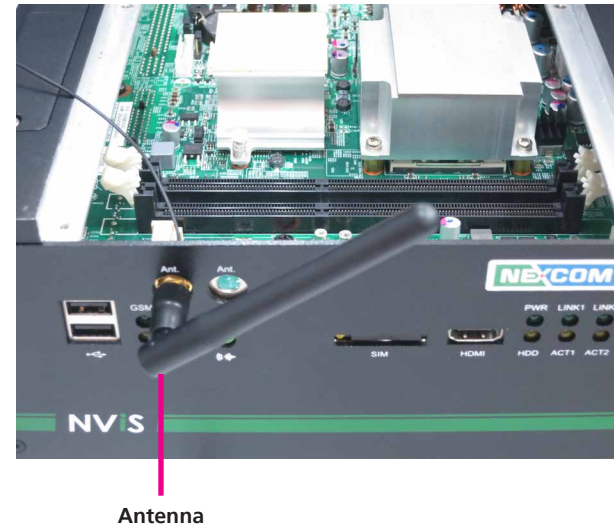

## Installing a GPS Module (NViS 3542 Series Only)

1. Locate the GPS module's mounting hole on the motherboard.

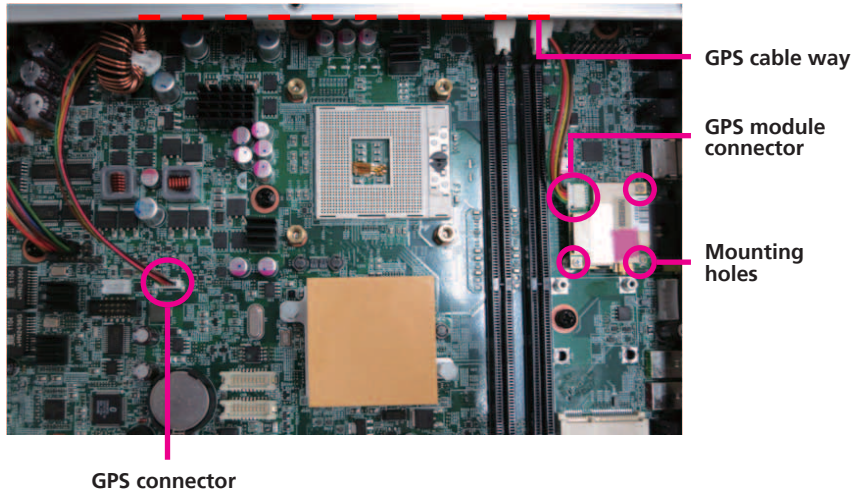

2. Place and align the mounting holes on the GPS module with the mounting holes on the chassis.
3. Tighten screws on the mounting holes to secure the module.
4. Connect the GPS module connector to the GPS connector on the motherboard.


# Connecting to the Power Ignition Module (NISKIG120)

## Introduction

The NISKIG120 is an external power ignition module that provides stable power to NVIS 3540 series. Using this module will ensure that the device is well shielded against premature failure at boot/shutdown phase. The following instructions will guide you on how to connect the NISKIG120 to the vehicle's battery/ignition and NVIS 3540 series.

The following instructions use NVIS 3540P8 as an example, but can be applied to all other NVIS 3540 series.

1. Connect the vehicle battery and ignition to the module's power input socket, refer to the pin/wiring definition table below:

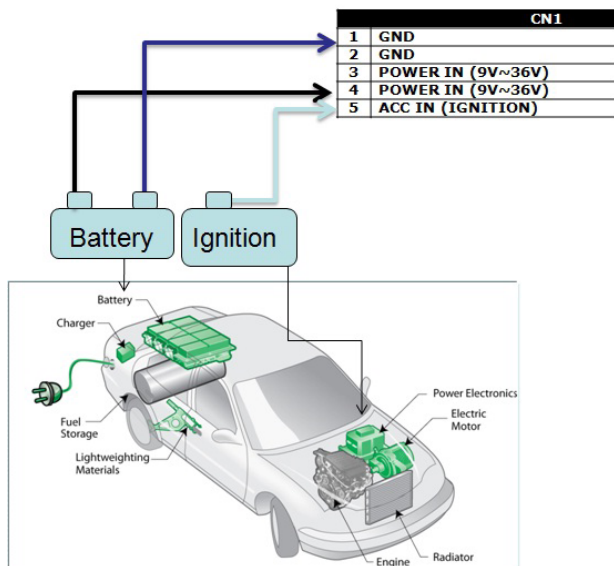

## Close-up view of the power input:



Recommended wire gauge range: minimum of 10 AWG or above, maximum length of 3 meters.


2. Connect the module's DC output to NVIS 3540's DC input, refer to the pin/wiring definition table below:



CON1: Power output port	
1	Main Power Out
2	Main Power Out
3	GND
4	GND
5	LVDS GND
6	LVDS POWER OUT (+12V/1A)




### Close-up view of the DC output:

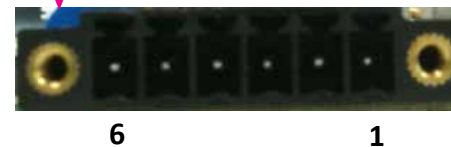

Recommended wire gauge range: minimum of 16 AWG or above, maximum length of 3 meters.

3. Connect the S3 control port to the Power Ignition port, refer to the pin/wiring definition table below:

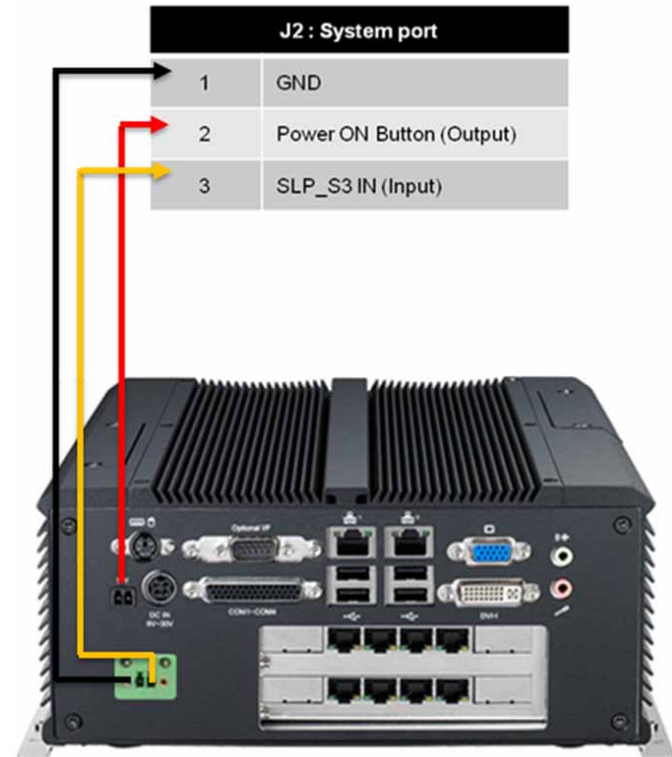

# Chapter 4: BIOS Setup

This chapter describes how to use the BIOS setup program for the NViS 3540 series. The BIOS screens provided in this chapter are for reference only and may change if the BIOS is updated in the future.

To check for the latest updates and revisions, visit the NEXCOM Web site at [www.nexcom.com.tw](http://www.nexcom.com.tw).

## About BIOS Setup

The BIOS (Basic Input and Output System) Setup program is a menu driven utility that enables you to make changes to the system configuration and tailor your system to suit your individual work needs. It is a ROM-based configuration utility that displays the system's configuration status and provides you with a tool to set system parameters.

These parameters are stored in non-volatile battery-backed-up CMOS RAM that saves this information even when the power is turned off. When the system is turned back on, the system is configured with the values found in CMOS.

With easy-to-use pull down menus, you can configure such items as:

- Hard drives, diskette drives, and peripherals
- Video display type and display options
- Password protection from unauthorized use
- Power management features

The settings made in the setup program affect how the computer performs. It is important, therefore, first to try to understand all the Setup options, and second, to make settings appropriate for the way you use the computer.

## When to Configure the BIOS

This program should be executed under the following conditions:

- When changing the system configuration
- When a configuration error is detected by the system and you are prompted to make changes to the Setup program
- When resetting the system clock
- When redefining the communication ports to prevent any conflicts
- When making changes to the Power Management configuration
- When changing the password or making other changes to the security setup

Normally, CMOS setup is needed when the system hardware is not consistent with the information contained in the CMOS RAM, whenever the CMOS RAM has lost power, or the system features need to be changed.

## Default Configuration

Most of the configuration settings are either predefined according to the Load Optimal Defaults settings which are stored in the BIOS or are automatically detected and configured without requiring any actions. There are a few settings that you may need to change depending on your system configuration.

## Entering Setup

When the system is powered on, the BIOS will enter the Power-On Self Test (POST) routines. These routines perform various diagnostic checks; if an error is encountered, the error will be reported in one of two different ways:

- If the error occurs before the display device is initialized, a series of beeps will be transmitted.
- If the error occurs after the display device is initialized, the screen will display the error message.

Powering on the computer and immediately pressing <Del> allows you to enter Setup. Another way to enter Setup is to power on the computer and wait for the following message during the POST:

```
TO ENTER SETUP BEFORE BOOT
```

```
PRESS <CTRL-ALT-ESC>
```

```
Press the <Del> key to enter Setup:
```

## Legends

Key	Function
Right and Left arrows	Moves the highlight left or right to select a menu.
Up and Down arrows	Moves the highlight up or down between sub-menus or fields.
<Esc>	Exits to the BIOS Setup Utility.
+ (plus key)	Scrolls forward through the values or options of the highlighted field.
- (minus key)	Scrolls backward through the values or options of the highlighted field.
Tab	Selects a field.
<F1>	Displays General Help.
<F10>	Saves and exits the Setup program.
<Enter>	Press <Enter> to enter the highlighted sub-menu.

### Scroll Bar

When a scroll bar appears to the right of the setup screen, it indicates that there are more available fields not shown on the screen. Use the up and down arrow keys to scroll through all the available fields.

### Submenu

When “▶” appears on the left of a particular field, it indicates that a submenu which contains additional options are available for that field. To display the submenu, move the highlight to that field and press <Enter>.

## BIOS Setup Utility

Once you enter the AMI BIOS Setup Utility, the Main Menu will appear on the screen. The main menu allows you to select from six setup functions and one exit choices. Use arrow keys to select among the items and press <Enter> to accept or enter the submenu.

### Main

The Main menu is the first screen that you will see when you enter the BIOS Setup Utility.

BIOS SETUP UTILITY						
Main	Advanced	PCIPnP	Boot	Security	Chipset	Exit
BIOS Information		American Megatrends		Use [ENTER], [TAB] or [SHIFT-TAB] to select a field.		
BIOS Vendor		4.6.3.7				
Core Version		N350-010 x64				
Project Version		07/28/2010 16:52:57		Use [+] or [-] to configure system Time.		
Build Date						
Memory Information		1024 MB (DDR3 1066)				
Total Memory						
System Date		[Wed 08/11/2010]				
System Time		[16:51:35]				
Access Level		Administrator		→ ←: Select Screen ↑: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save ESC: Exit		
Version 2.00.1201. Copyright (C) 2009 American Megatrends, Inc.						

### BIOS Information

Displays the detected BIOS information.

### Memory Information

Displays the detected system memory information.

### System Date

The date format is <day>, <month>, <date>, <year>. Day displays a day, from Sunday to Saturday. Month displays the month, from January to December. Date displays the date, from 1 to 31. Year displays the year, from 1999 to 2099.

### System Time

The time format is <hour>, <minute>, <second>. The time is based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00. Hour displays hours from 00 to 23. Minute displays minutes from 00 to 59. Second displays seconds from 00 to 59.




## Advanced

The Advanced menu allows you to configure your system for basic operation. Some entries are defaults required by the system board, while others, if enabled, will improve the performance of your system or let you set some features according to your preference.



Setting incorrect field values may cause the system to malfunction.

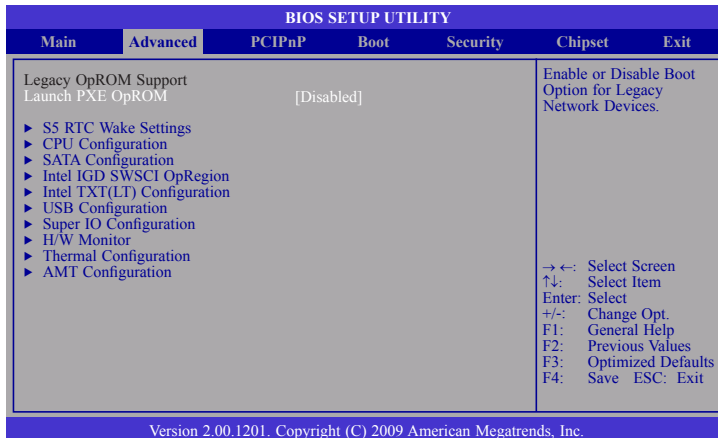

### Launch PXE OpROM

Enables or disables the boot option for legacy network devices.

### S5 RTC Wake Settings

Configures the S5 RTC wake up setting.

### CPU Configuration

This section is used to configure the CPU. It will also display detected CPU information.

### SATA Configuration

This section is used to configure the SATA drives.

### Intel IGD SWSCI OpRegion

Configures the Intel graphics display.

### Intel TXT(LT) Configuration

Configures the Intel Trusted Execution technology.

### USB Configuration

Configures the USB devices.

### Super IO Configuration

This section is used to configure the I/O functions supported by the on-board Super I/O chip.

### H/W Monitor

This section is used to configure the hardware monitoring events such as temperature, fan speed and voltages.

### Thermal Configuration


Configures the intelligent power sharing function.

### AMT Configuration

Configures the AMT function.

## S5 RTC Wake Settings

This section is used to configure the wake up function.

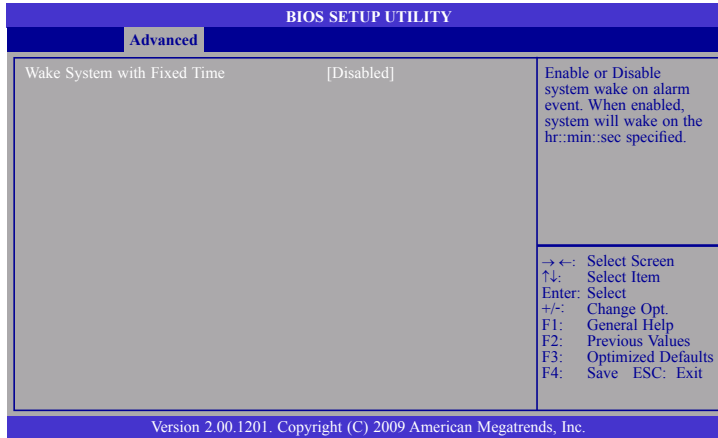


### Wake System with Fixed Time

Enables or disables the system's wake on alarm event. When enabled, the system will wake up on the specified time.

## CPU Configuration

This section is used to configure the CPU. It will also display detected CPU information.

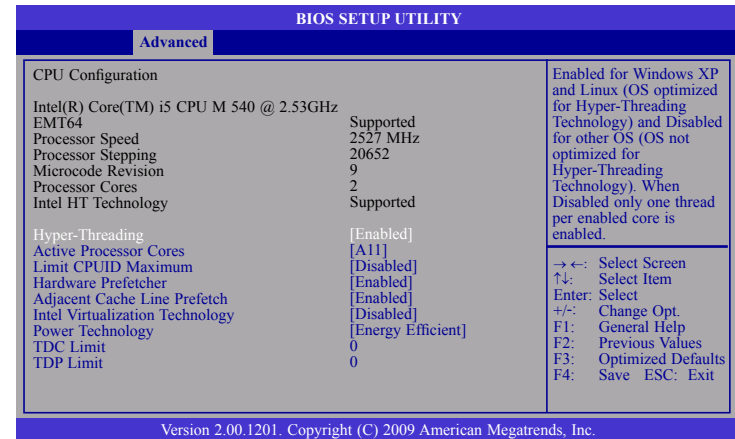

### Hyper-Threading

Enable this field for Windows XP and Linux which are optimized for Hyper-Threading technology. Select disabled for other OSes not optimized for Hyper-Threading technology. When disabled, only one thread per enabled core is enabled.

### Active Processor Cores

Used to enter the number of cores to enable in each processor package.

### Limit CPUID Maximum

The CPUID instruction of some newer CPUs will return a value greater than 3. The default is Disabled because this problem does not exist in the Windows series operating systems. If you are using an operating system other than Windows, this problem may occur. To avoid this problem, enable this field to limit the return value to 3 or lesser than 3.

### Hardware Prefetcher

Turns on or off the MLC streamer prefetcher.

### Adjacent Cache Line Prefetch

Enables or disables the adjacent cache line prefetch.

### Intel Virtualization Technology

When this field is set to Enabled, the VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

### Power Technology

Configures the power management features.

### TDC Limit


Used to select the TDC limit.

### TDP Limit

Used to select the TDP limit.

### SATA Configuration

This section is used to configure the SATA drives.

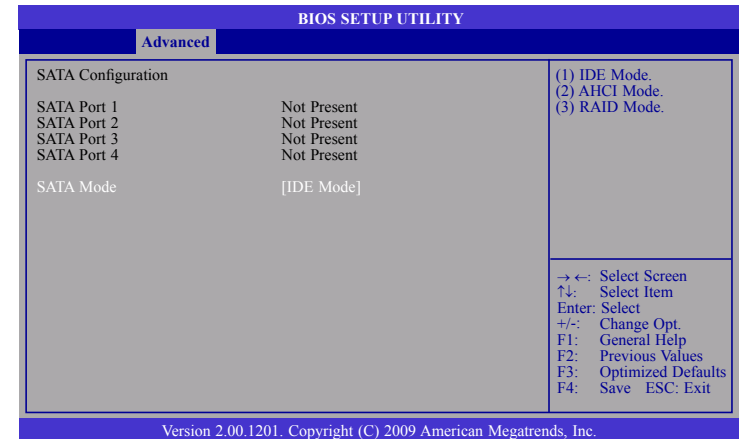


### SATA Mode

- IDE Mode This option configures the Serial ATA drives as Parallel ATA storage devices.
- AHCI Mode This option allows the Serial ATA devices to use AHCI (Advanced Host Controller Interface).
- RAID Mode This option allows you to create RAID or Intel Matrix Storage configuration on Serial ATA devices.

## Intel IGD SWSCI OpRegion

This section is used to configure the Intel graphics display.

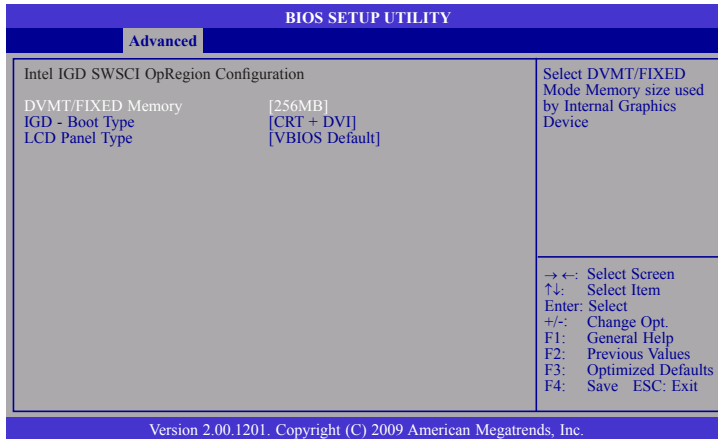

### DVMT/FIXED Memory

Selects the DVMT/FIXED mode memory size used by the internal graphics device.

### IGD - Boot Type


Selects the video device that will be activated during POST. This will not affect any external graphics that may be present.

### LCD Panel Type

Selects the LCD panel used by the internal graphics device.

## Intel TXT(LT) Configuration

This section is used to configure the Intel Trusted Execution technology.

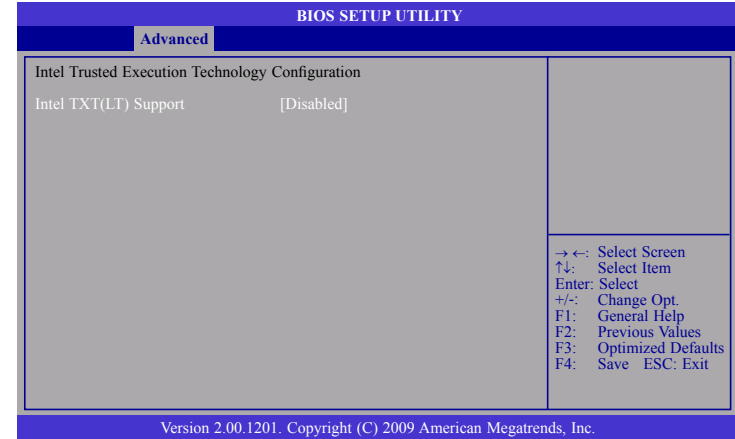


### Intel TXT(LT) Support

The options are Enabled and Disabled.

## USB Configuration

This section is used to configure USB devices.

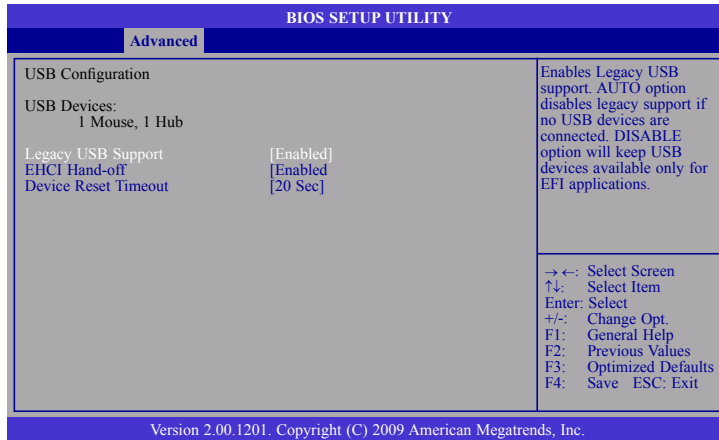

### Legacy USB Support

Enabled Enables legacy USB.

Auto Disables support for legacy when no USB devices are connected.

Disabled Keeps USB devices available only for EFI applications.

### EHCI Hand-off


This is a workaround for OSeS that does not support EHCI hand-off. The EHCI ownership change should be claimed by the EHCI driver.

### Device Reset Timeout

Selects the USB mass storage device start unit command timeout.

## Super IO Configuration

This section is used to configure the I/O functions supported by the on-board Super I/O chip.

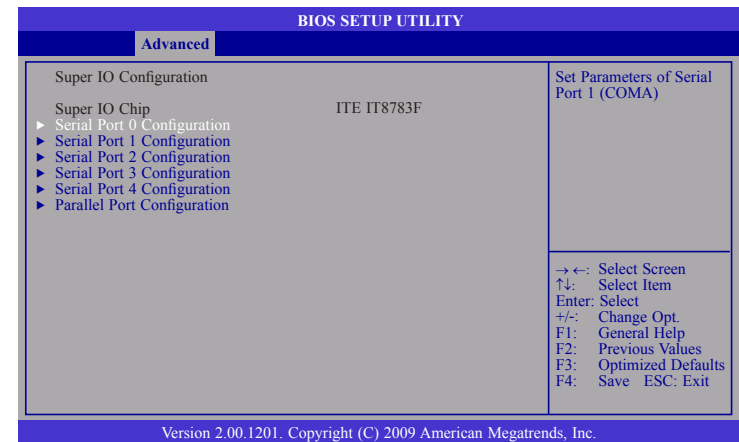

### Serial Port 0 Configuration to Serial Port 4 Configuration


Selects the IO/IRQ setting of the I/O devices.

### Parallel Port Configuration

Configures the parallel port.

## H/W Monitor

This section is used to configure the hardware monitoring events such as temperature, fan speed and voltages.

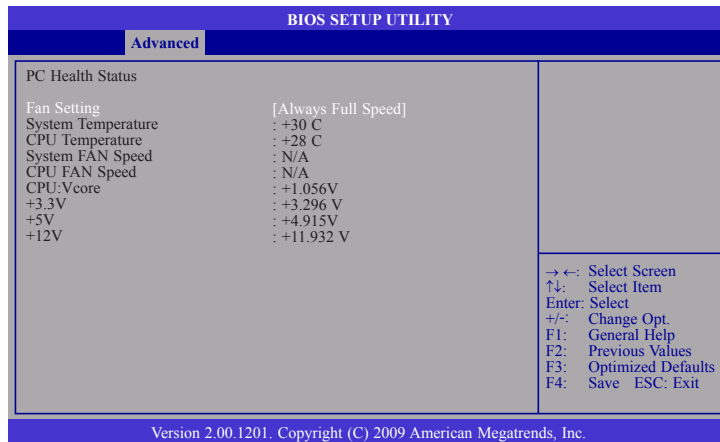

## CPU:Vcore to +12V

Detects and displays the output voltages.

## Fan Setting

Selects the speed of the fan.

## System Temperature and CPU Temperature


Detects and displays the internal temperature of the system and the current temperature of the CPU.

## System Fan Speed to CPU Fan Speed

Detects and displays the current system fan and CPU fan speed in RPM (Revolutions Per Minute).

## Thermal Configuration

This section is used to configure the intelligent power sharing function.

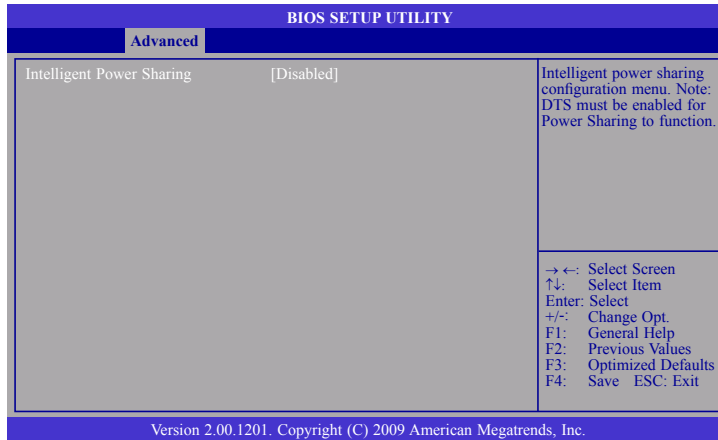


### Intelligent Power Sharing

Enables or disables the power sharing function.

## AMT Configuration

This section is used to configure the AMT function.

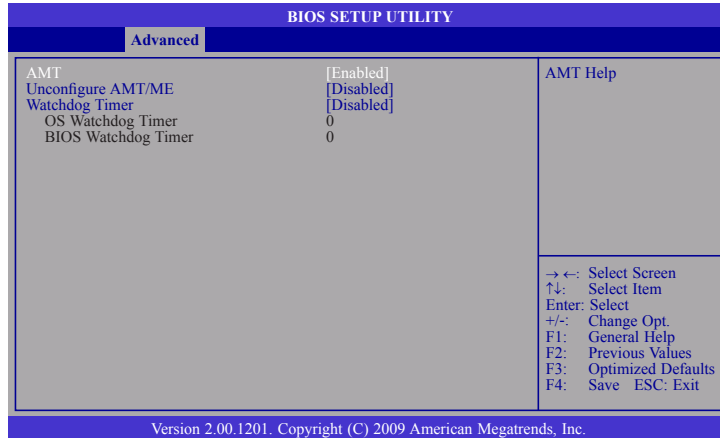

## AMT

Enables or disables the AMT function.

## Unconfigure AMT/ME

Select Enabled to unconfigure the AMT/ME function without the need for a password.

## Watchdog Timer

Enables or disables the Watchdog Timer function.

## OS Watchdog Timer

Selects the time interval of the OS Watchdog Timer.

## BIOS Watchdog Timer

Selects the time interval of the BIOS Watchdog Timer.



## Chipset

This section is used to configure the system based on the specific features of the chipset.



Setting incorrect field values may cause the system to malfunction.

### North Bridge

BIOS SETUP UTILITY	
Chipset	
CPU Type	Arrandale
Total Memory	1024 MB (DDR3 1066)
Memory Slot 0	1024 MB (DDR3 1066)
Memory Slot 1	0 MB (DDR3 1066)
CAS# Latency (tCL)	7
RAS# Active Time (tRAS)	20
Row Precharge Time (tRP)	7
RAS# to CAS# Delay (tRCD)	7
Write Recovery Time (tWR)	8
Row Refresh Cycle Time (tRFC)	60
Write to Read Delay (tWTR)	4
Active to Active Delay (tRRD)	4
Read CAS# Precharge (tRTP)	5
Initiate Graphic Adapter	[PEG/IGD]
VT-d	[Disabled]
IGD Memory	[32M]

→ ←: Select Screen  
 ↑ ↓: Select Item  
 Enter: Select  
 +/-: Change Opt.  
 F1: General Help  
 F2: Previous Values  
 F3: Optimized Defaults  
 F4: Save ESC: Exit

Version 2.00.1201. Copyright (C) 2009 American Megatrends, Inc.

### Initiate Graphic Adapter

Selects the graphics controller to use as the primary boot device.


### VT-d

The options are Enabled and Disabled.

### IGD Memory

Selects the internal graphics device's shared memory size.

## South Bridge

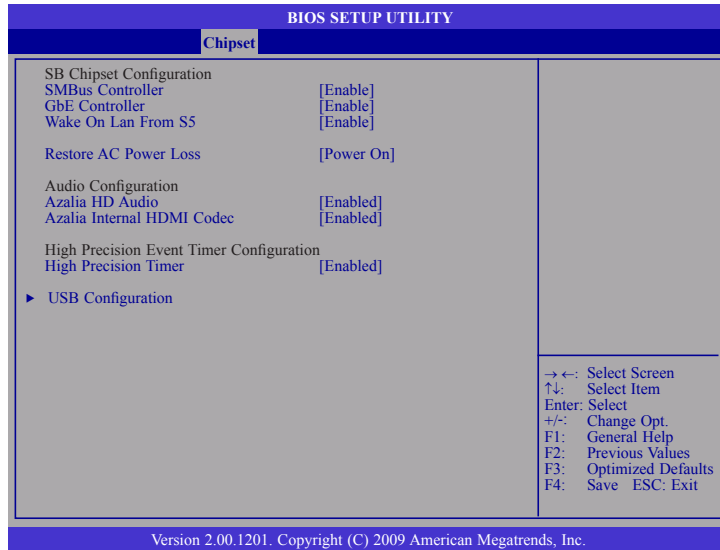

### SMBus Controller

Enables or disables the SMBus controller.

### GbE Controller

Enables or disables the Gigabit LAN controller.

### Wake On Lan From S5

When enabled, it allows the system to wake up from S5 via the network LAN.

### Restore AC Power Loss

- Off When power returns after an AC power failure, the system's power is off. You must press the Power button to power-on the system.
- On When power returns after an AC power failure, the system will automatically power-on.

### Azalia HD Audio

Enables or disables the Azalia HD audio.


### Azalia Internal HDMI Codec

Enables or disables the Azalia internal HDMI codec.

### High Precision Timer

Enables or disables the high precision event timer.

## USB Configuration

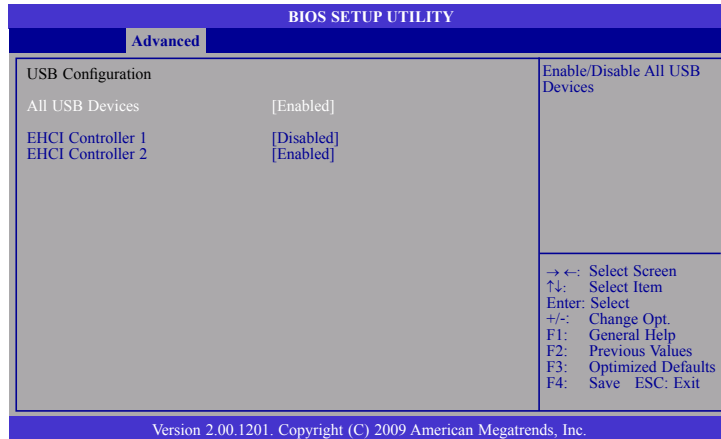


### All USB Devices

Enables or disables all USB devices.

### EHCI Controller 1 and EHCI Controller 2

Enables or disables the Enhanced Host Controller Interface (USB 2.0).

## Intel ME Configuration

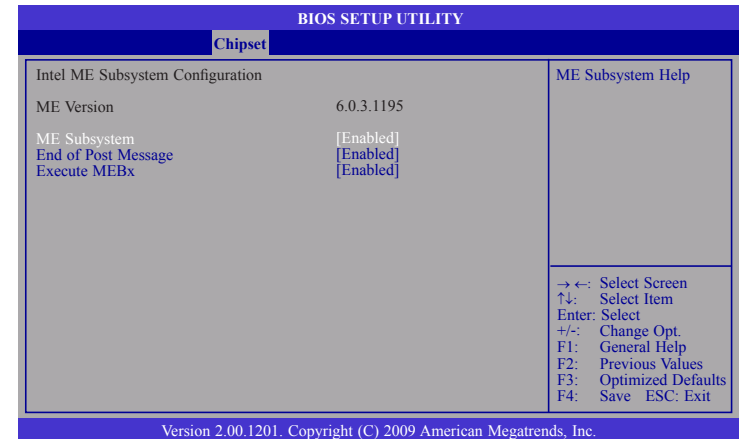

### ME Subsystem

The options are Enabled and Disabled.

### End of the POST Message

The options are Enabled and Disabled.

### Execute MEBx

The options are Enabled and Disabled.

## Boot

BIOS SETUP UTILITY					
Main	Advanced	Chipset	Boot	Security	Save & Exit
Boot Configuration					Enables/Disables Quiet Boot option
Quiet Boot			[Disabled]		
Fast Boot			[Disabled]		
Setup Prompt Timeout			1		
Bootup NumLock State			[On]		
CSM16 Module Version			07.60		
GateA20 Active			[Upon Request]		
Option ROM Messages			[Force BIOS]		
Interrupt 19 Capture			[Disabled]		
Boot Option Priorities					← →: Select Screen
Boot Option #1			[SATA: FUJITSU MH...]		↑↓: Select Item
Boot Option #2			[Built-in EFI Shell]		Enter: Select
Hard Drive BBS Priorities					+/-: Change Opt.
					F1: General Help
					F2: Previous Values
					F3: Optimized Defaults
					F4: Save ESC: Exit
Version 2.00.1201. Copyright (C) 2009 American Megatrends, Inc.					

### Quiet Boot

Enables or disables the quiet boot function.

### Fast Boot

Enables or disables boot with initialization of a minimal set of devices required to launch active boot option. This doesn't affect the BBS boot options.

### Setup Prompt Timeout

Selects the number of seconds to wait for the setup activation key. 65535(0xFFFF) denotes indefinite waiting.

### Bootup NumLock State

This allows you to determine the default state of the numeric keypad. By default, the system boots up with NumLock on wherein the function of the numeric keypad is the number keys. When set to Off, the function of the numeric keypad is the arrow keys.

### Gate A20 Active

Configures the Gate A20 function.

### Option ROM Messages

Configures the ROM messages.

### Interrupt 19 Capture

When enabled, it allows the optional ROM to trap interrupt 19.


### Boot Option #1 and Boot Option #2

Selects the boot sequence of the hard drives.

### Hard Drive BBS Priorities

Sets the order of the legacy devices in this group.

## Security

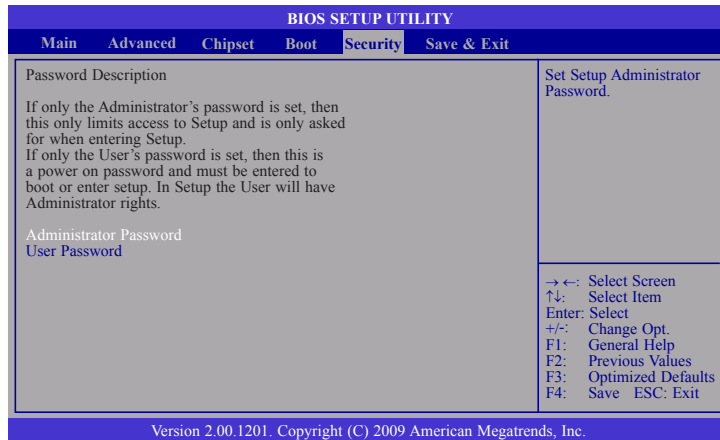


### Administrator Password

Sets the administrator password.

### User Password

Sets the user password.

## Save & Exit

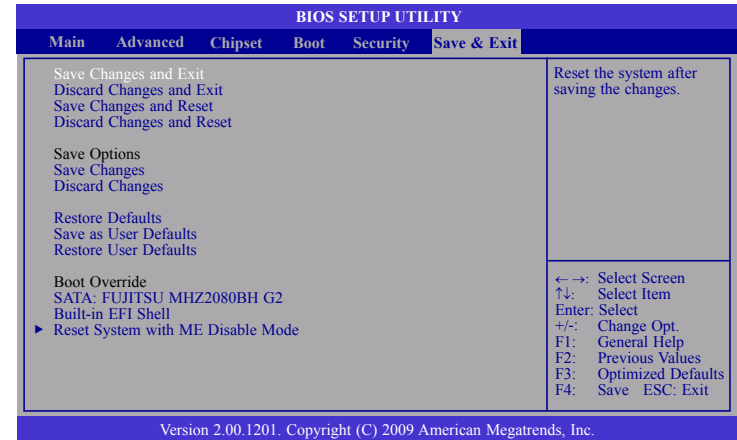

### Save Changes and Exit

To save the changes and exit the Setup utility, select this field then press <Enter>. A dialog box will appear. Confirm by selecting Yes. You can also press <F10> to save and exit Setup.


### Discard Changes and Exit

To exit the Setup utility without saving the changes, select this field then press <Enter>. You may be prompted to confirm again before exiting. You can also press <ESC> to exit without saving the changes.


# Chapter 5: AMT Settings

## Enable Intel® AMT in the AMI BIOS

1. In the Advanced menu, select **AMT Configuration**.


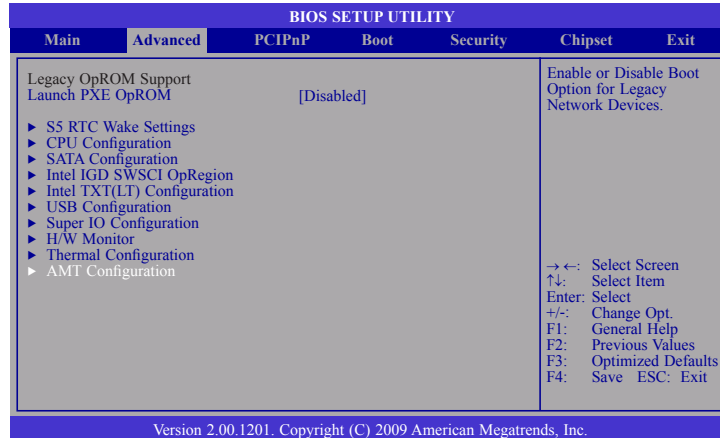


2. In the **AMT** field, select Enabled.

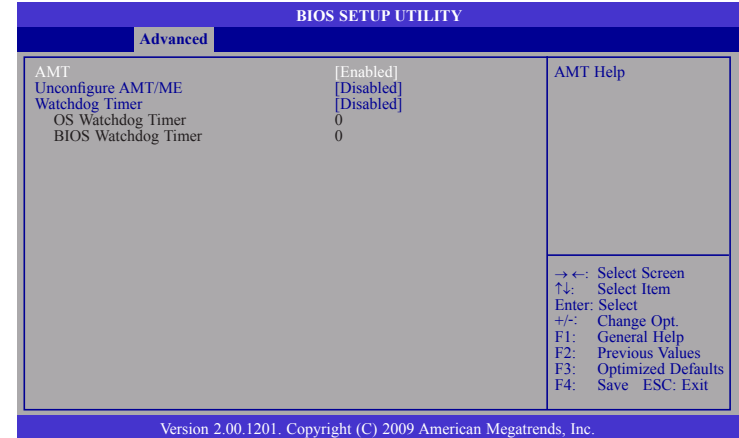


## Configure the Intel® ME Setup


1. When the system reboots, the following message will be displayed. Press **<Ctrl-P>** as soon as the message is displayed; as this message will be displayed for only a few seconds.
2. You will be prompted for a password. The default password is "admin". Enter the default password in the space provided under Intel(R) ME Password and then press Enter.

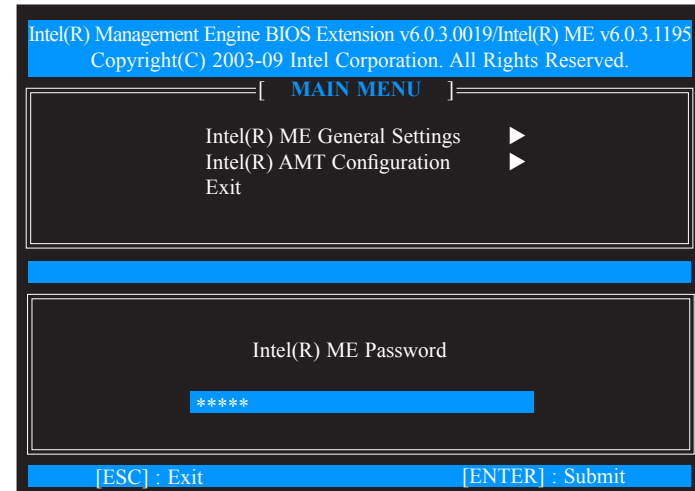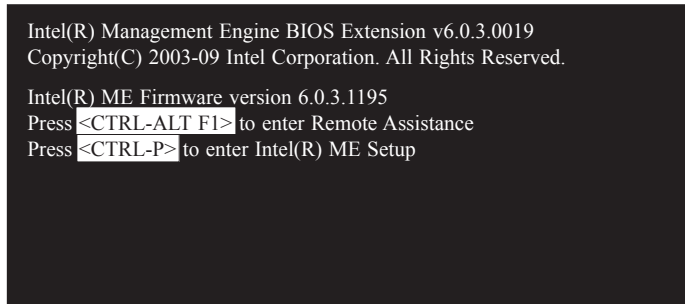

3. Enter a new password in the space provided under Intel(R) ME New Password and then press Enter. The new password must be based on the following rules to create a strong password security.
- Password length - at least 8 characters and not longer than 32.
  - Password complexity - the password must include the following.
    - At least one digit character (0, 1, ...9)
    - At least one 7-bit ASCII non alpha-numeric character (e.g. !, \$, ;) but excluding : , and " characters
    - At least one lowercase letter ('a', 'b'...'z') and at least one uppercase letter ('A', 'B'...'Z')

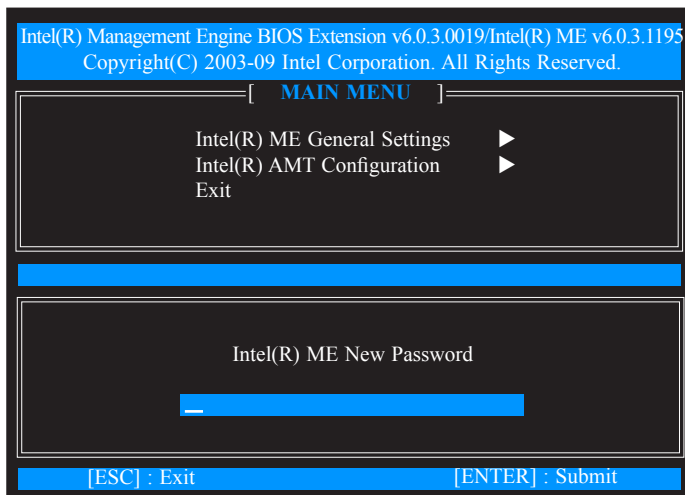


4. You will be asked to verify the password. Enter the same new password in the space provided under Verify Password and then press Enter.

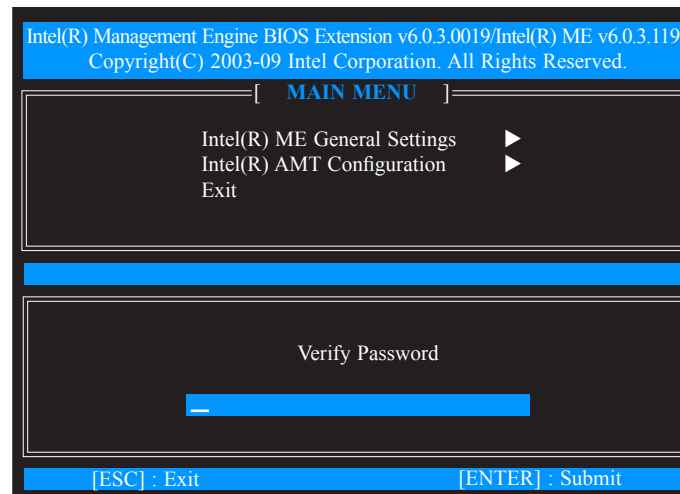




5. Select **Intel(R) ME General Settings** and then press Enter.

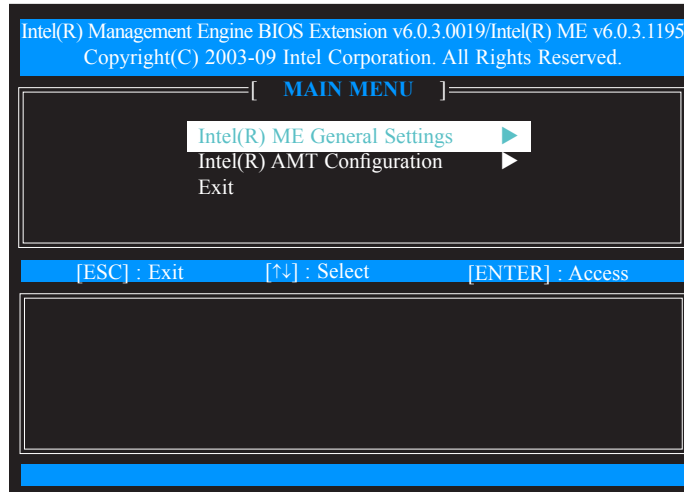


6. Select **Intel(R) ME State Control** and then press Enter.


Select **Enabled** and then press Enter.

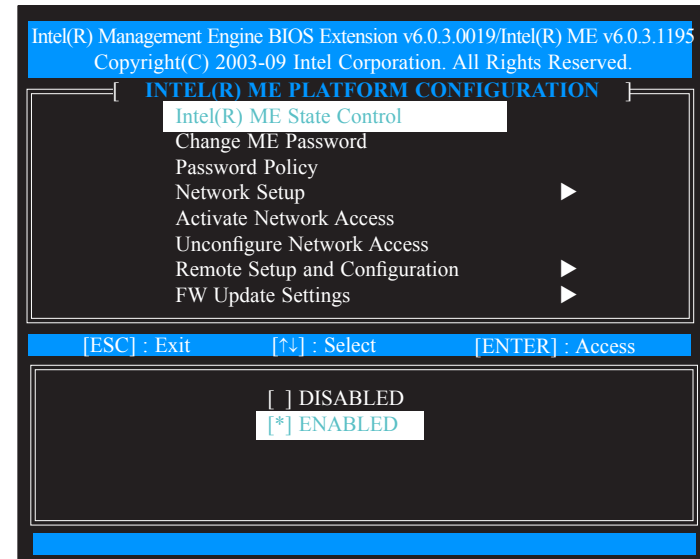

7. Select **Network Setup** and then press Enter.

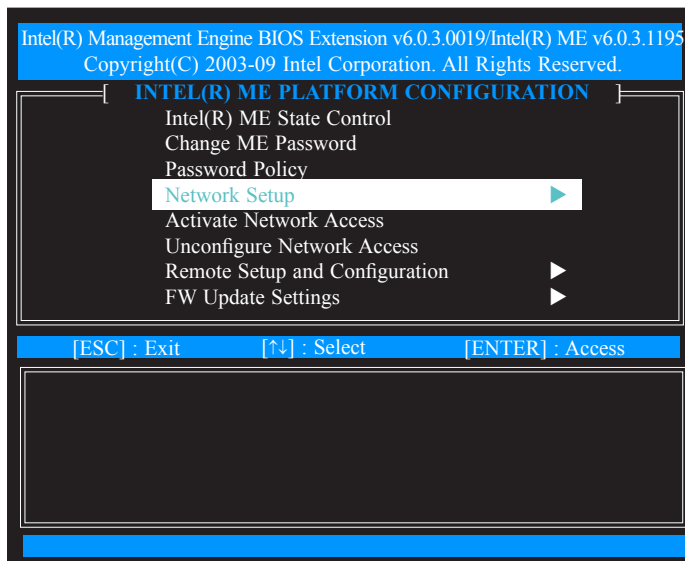


8. In the Intel(R) Network Setup menu, select **Intel(R) ME Network Name Settings** then press Enter.

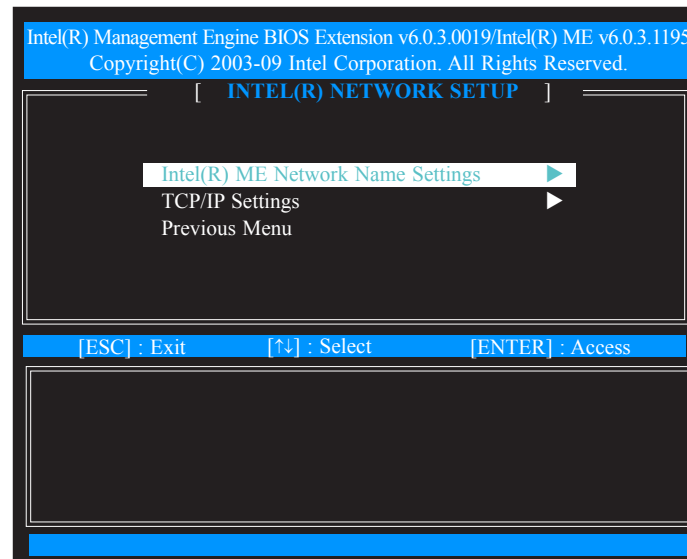


9. In the Intel(R) ME Network Name Settings menu, select **Host Name** and then press Enter.

Enter the computer's host name (for example: QM57) and then press Enter.


Select **Previous Menu** and then press Enter.

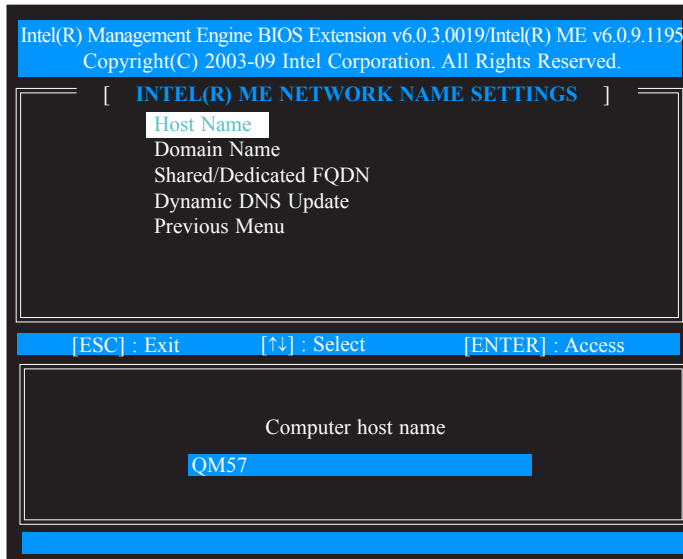

10. In the Network Setup menu, select **TCP/IP Settings** and then press Enter.

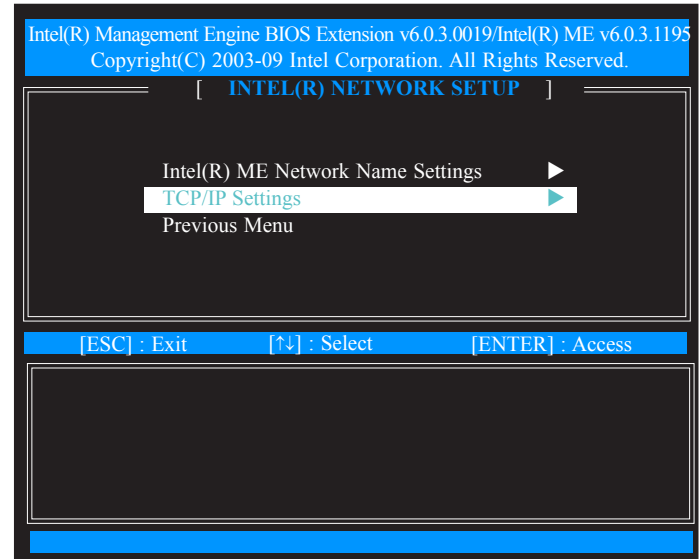


11. In the TCP/IP Settings menu, select **Wired LAN IPv4 Configuration** and then press Enter.

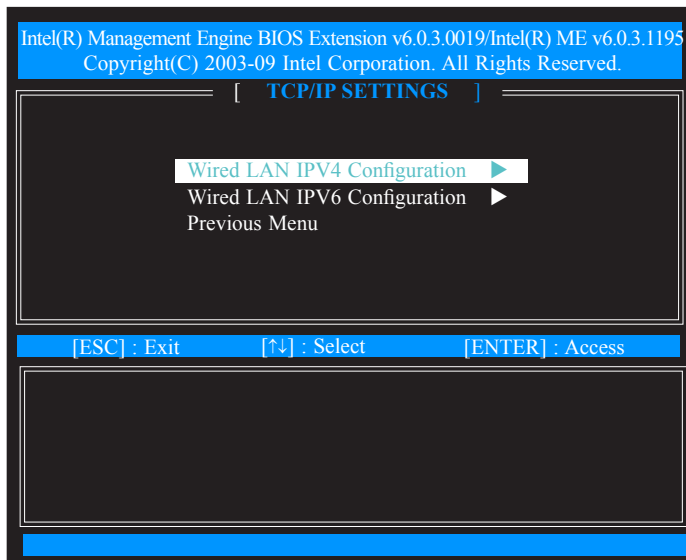


12. Select **DHCP Mode** and then press Enter.

Select **Enabled** or **Disabled** and then press Enter.

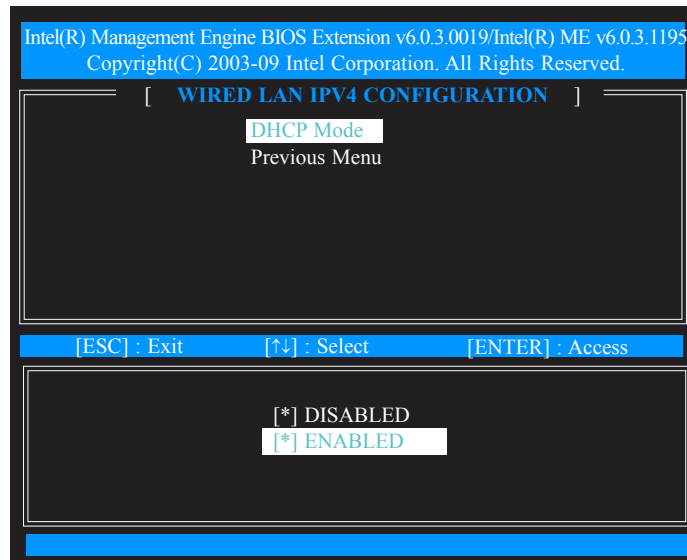


13. A list of options in the Wired LAN IPv4 Configuration menu will appear.

Select **IPv4 Address** and then press Enter. Enter an **IP Address** then press Enter.

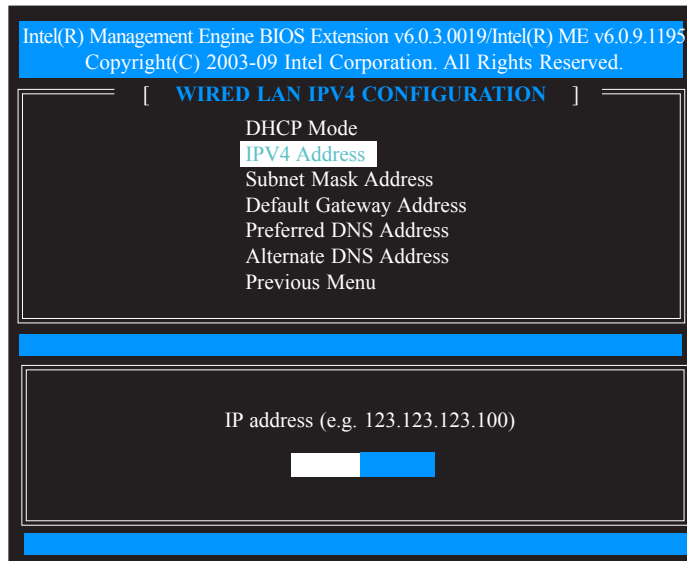


14. Select **Subnet Mask Address** and then press Enter.

Enter the **subnet mask address** and then press Enter.

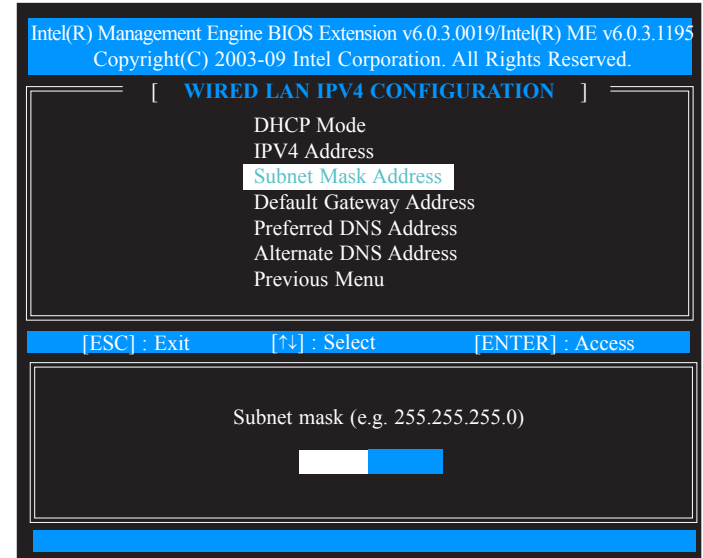


15. Select **Default Gateway Address** and then press Enter.

Enter the **default gateway address** and then press Enter.

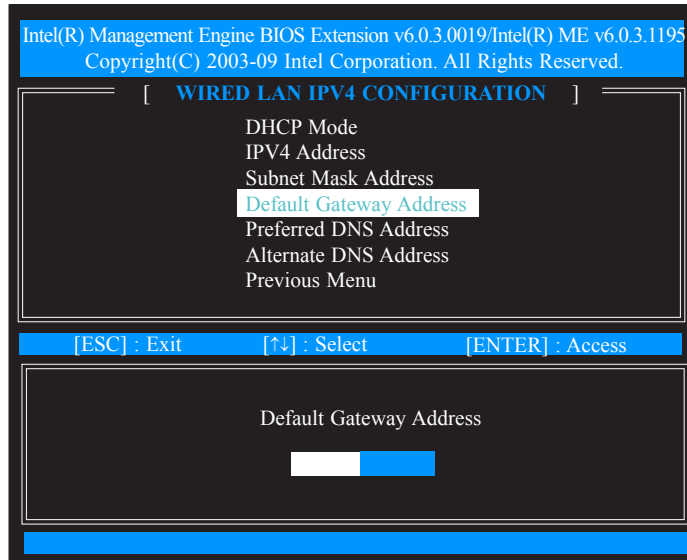


16. Select **Previous Menu** and then press Enter.

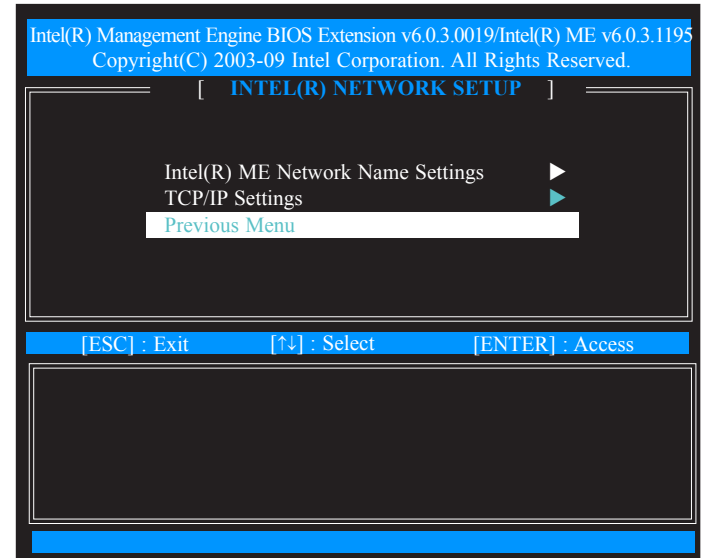


17. Select Previous Menu until you return to the **Intel(R) ME Platform Configuration** menu.


Select **Activate Network Access** and then press Enter.

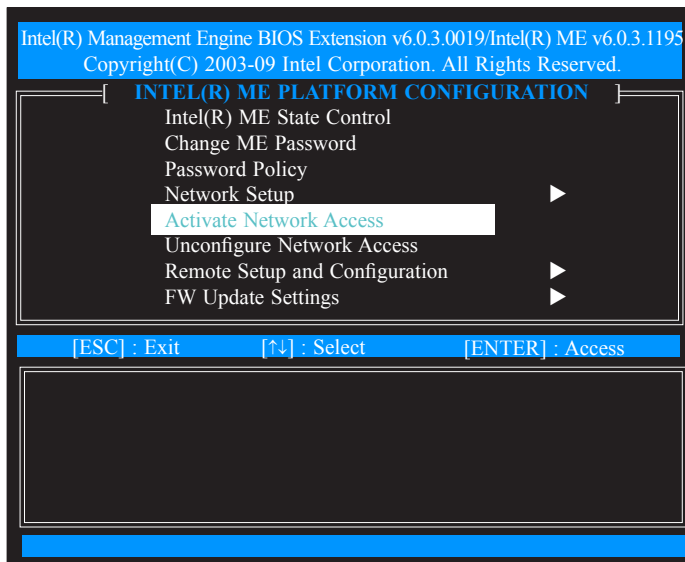


18. Type **Y** and then press Enter.

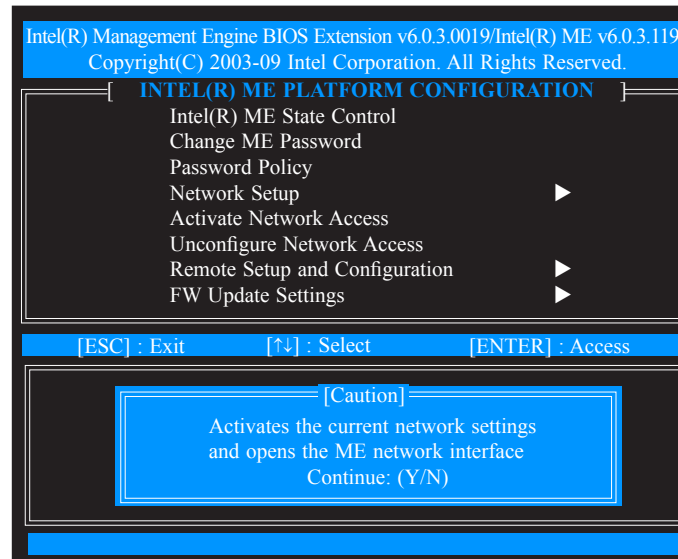

19. In the Intel(R) ME Platform Configuration menu, select **Unconfigure Network Access** and then press Enter. Clear all network settings.

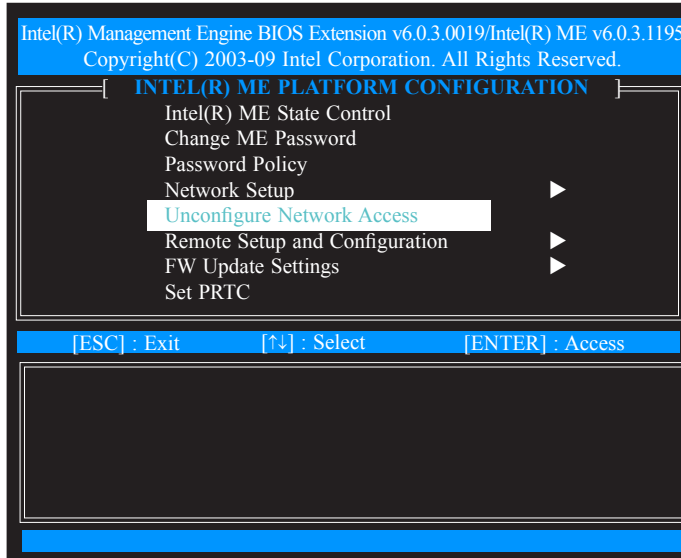


20. In the Intel(R) ME Platform Configuration menu, select **Power Control** and then press Enter.

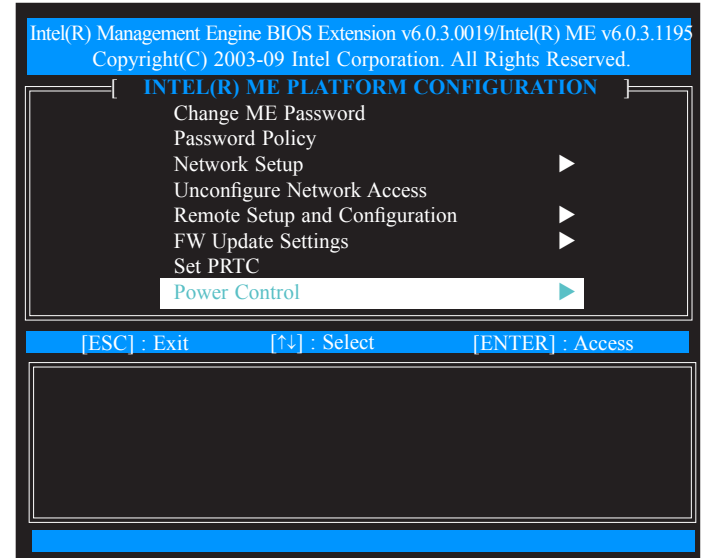




21. In the Intel(R) ME Power Control menu, select **Intel(R) ME ON in Host Sleep States** and then press Enter.


Select **Mobile: ON in S0** and then press Enter.

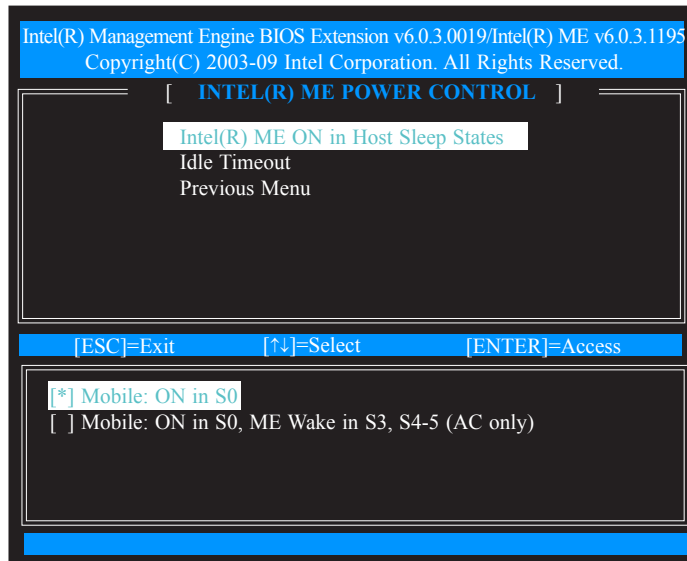


22. Select **Previous Menu** and then press Enter.

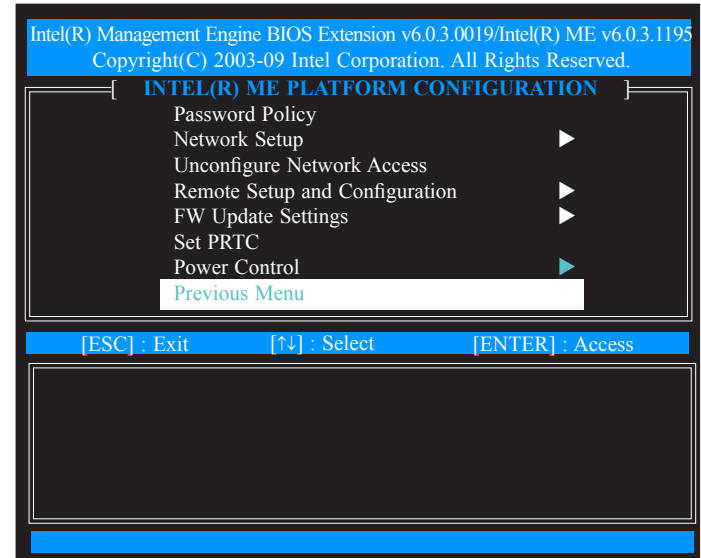


23. Select Previous Menu until you return to the Main Menu. Select **Intel(R) AMT Configuration**.

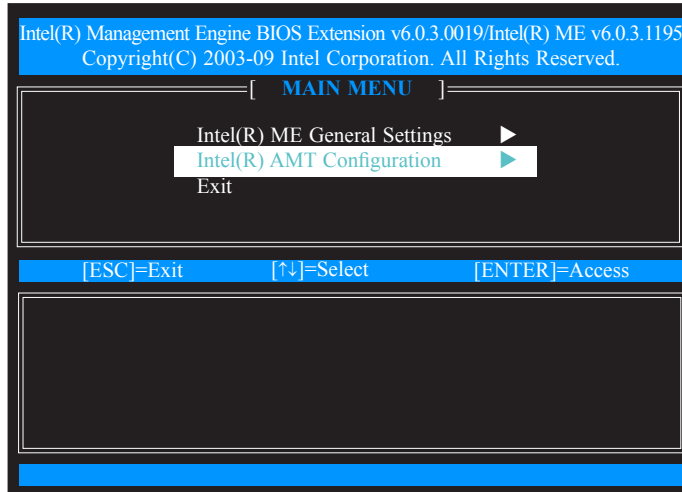

24. The message below will appear.

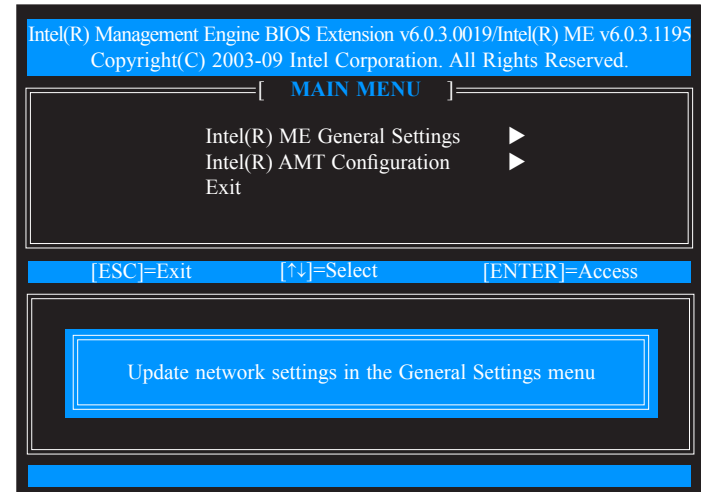


25. In the Intel(R) AMT Configuration menu, select **SOL/IDER** and then press Enter.

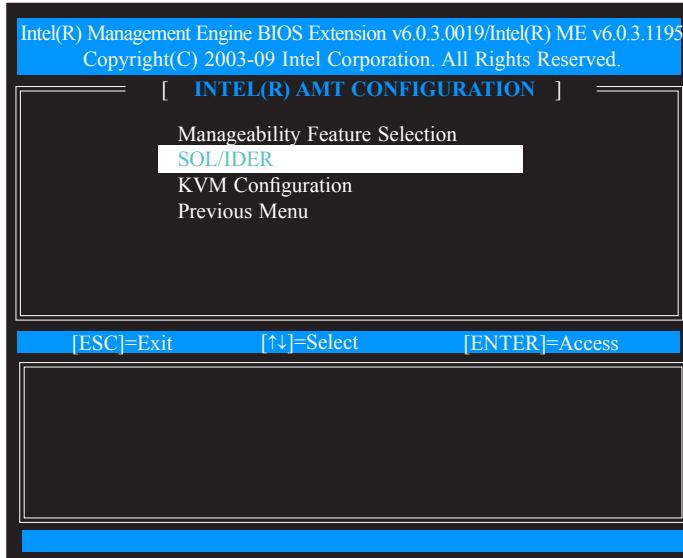


26. In the SOL/IDER menu, select **Username & Password** and then press Enter.

Select **Enabled** and then press Enter.

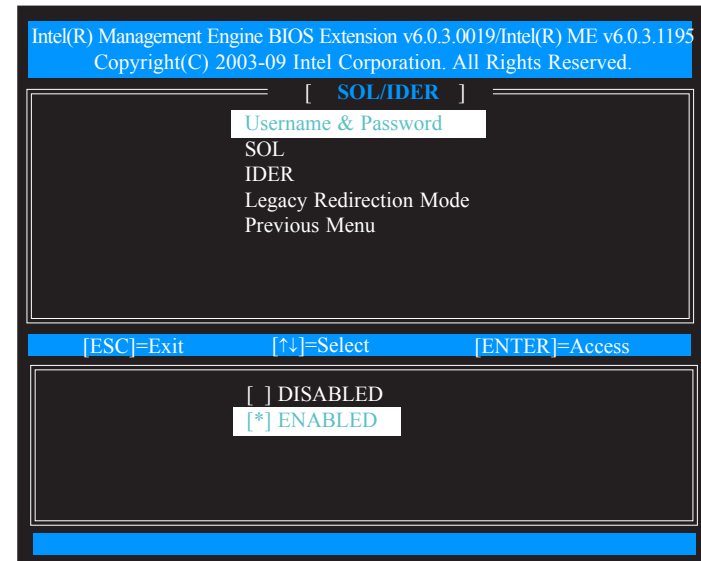


27. In the SOL/IDER menu, select **SOL** and then press Enter.

Select **Enabled** and then press Enter.

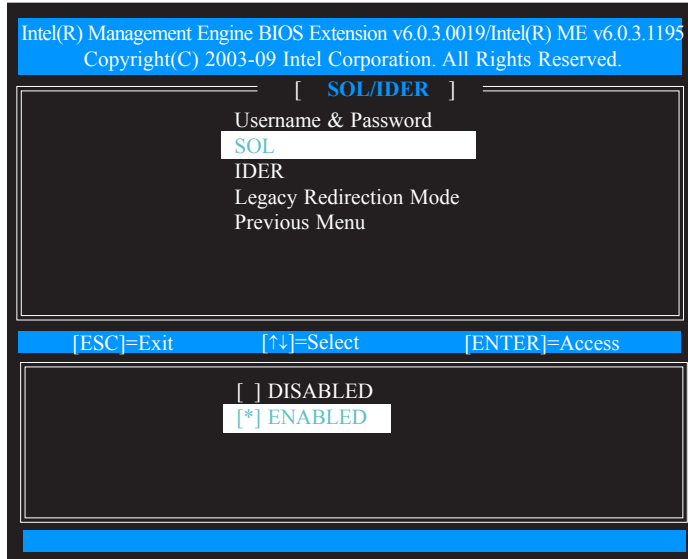


28. In the SOL/IDER menu, select **IDER** and then press Enter.


Select **Enabled** and then press Enter.

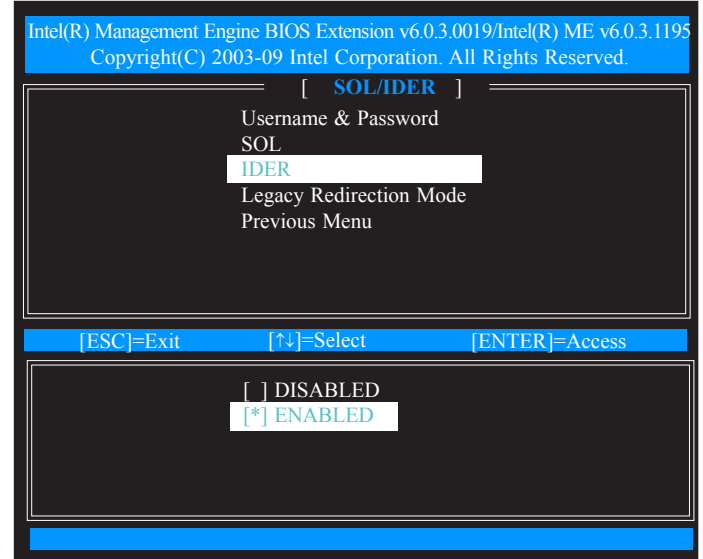

29. In the SOL/IDER menu, select **Legacy Redirection Mode** and then press Enter.

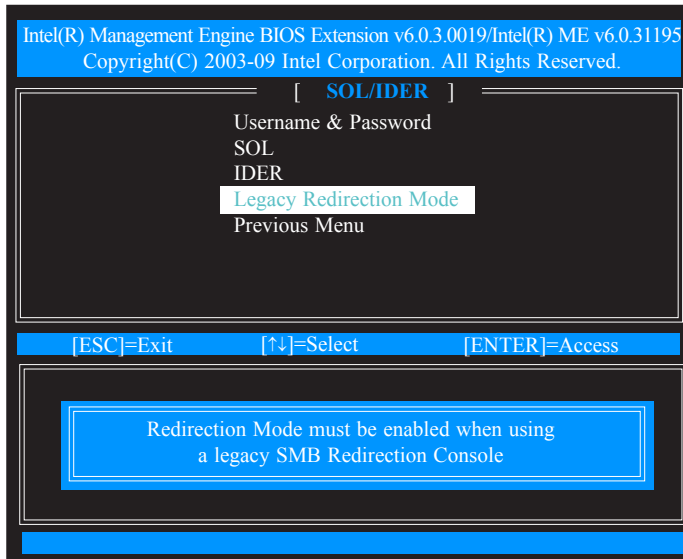


30. Select **Enabled** and then press Enter.

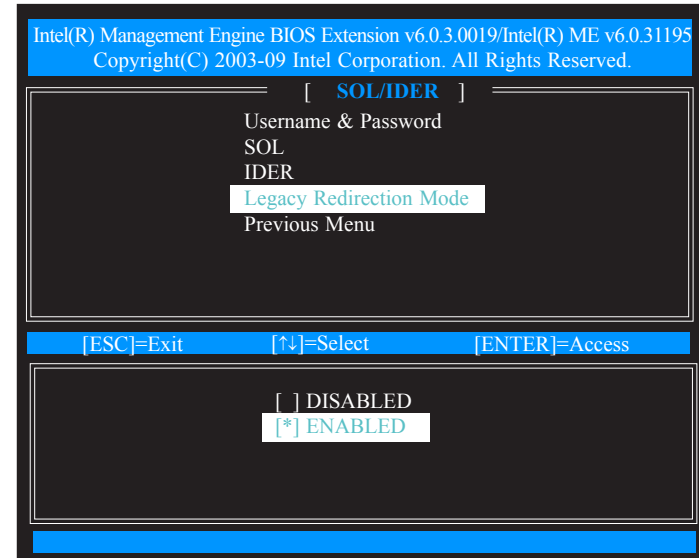


31. Select Previous Menu until you return to the **Intel(R) AMT Configuration** menu.

Select **KVM Configuration** and then press Enter.

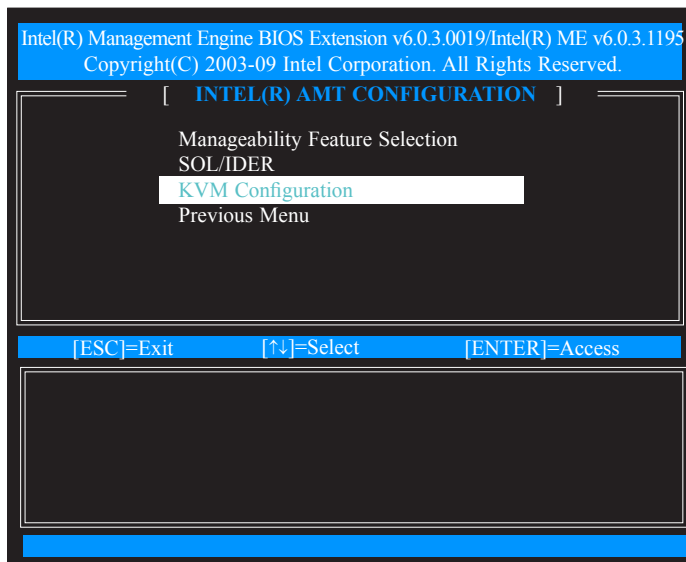


32. In the KVM Configuration menu, select **KVM Feature Selection** and then press Enter.

Select **Enabled** and then press Enter.

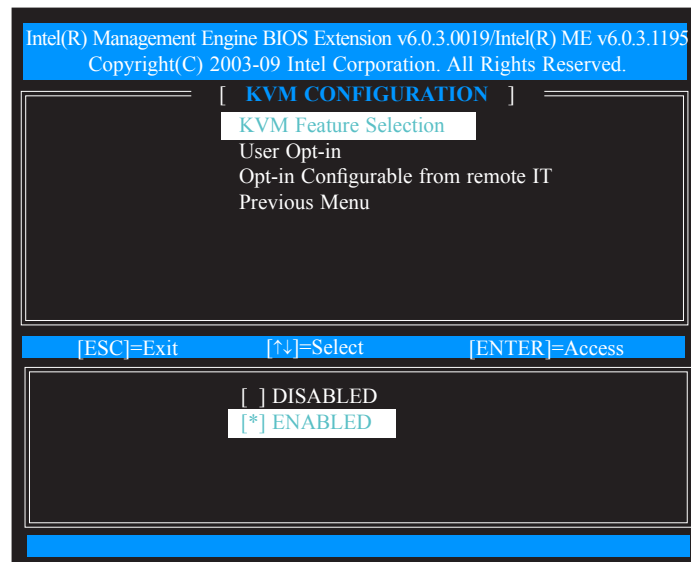


33. In the KVM Configuration menu, select **User Opt-in** and then press Enter.

Select **User Consent is required for KVM Session** and then press Enter.

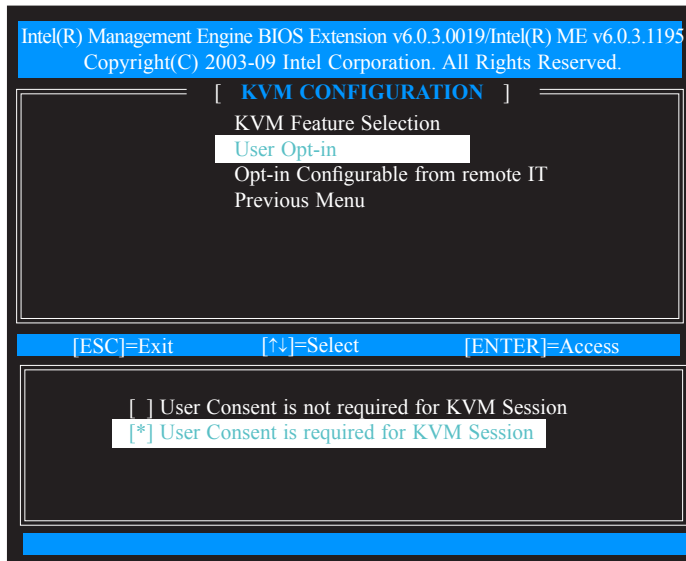


34. In the KVM Configuration menu, select **Opt-in Configurable from Remote IT** and then press Enter.

Select **Enable Remote Control of KVM Opt-in Policy** and then press Enter.

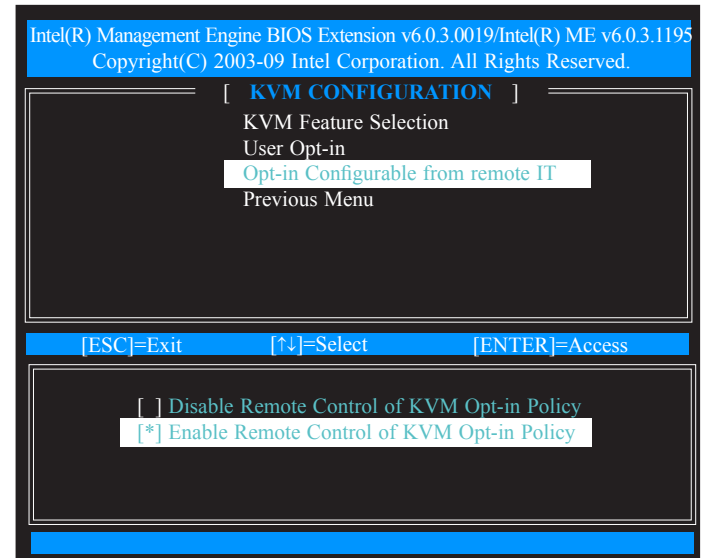

35. Select **Previous Menu**.

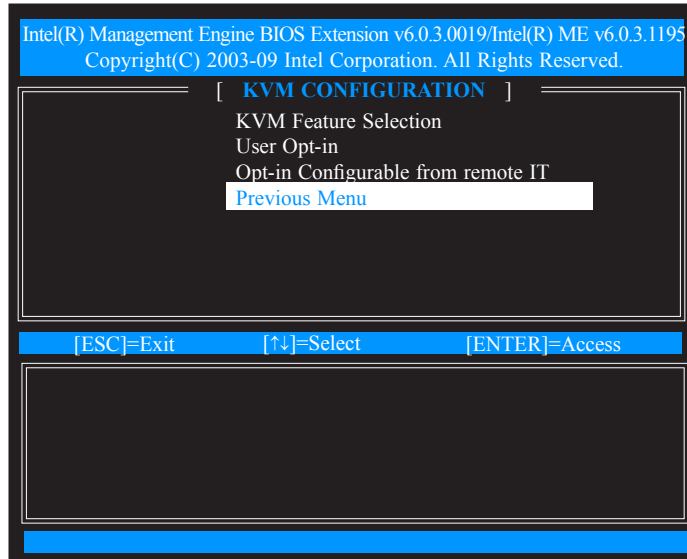


36. Select Previous Menu until you return to the Main Menu. Select **Exit** and then press Enter.

The following message will be displayed on the screen.

**[CONFIRM EXIT]**  
**Are you sure you want to exit? (Y/N):**


Press Y.

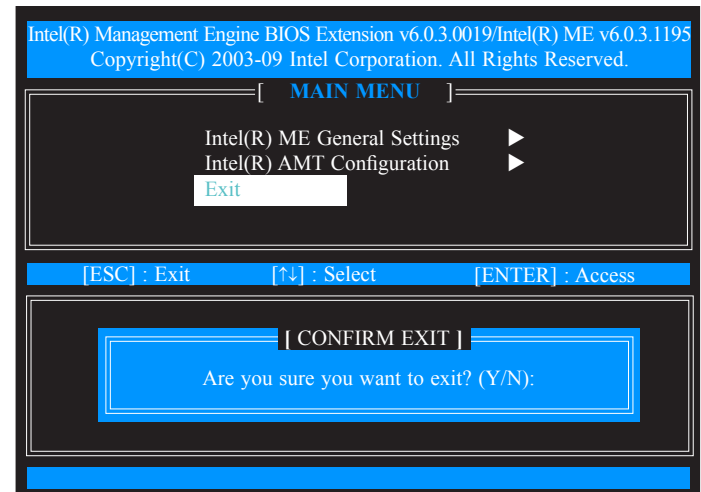




## Unconfigure AMT/ME

1. In the Advanced menu, select **AMT Configuration**.

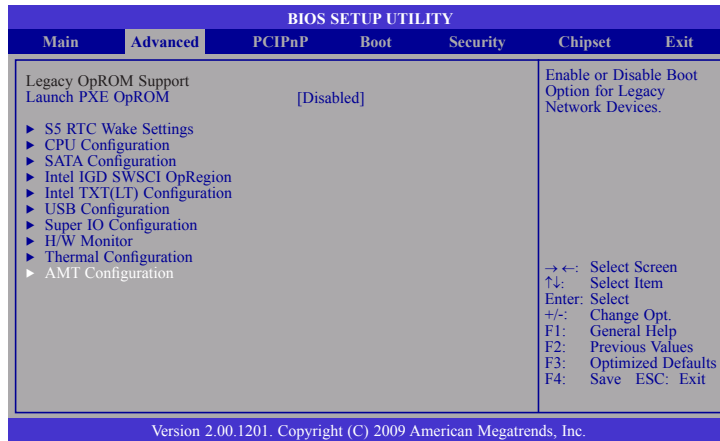

2. In the **Unconfigure AMT/ME** field, select Enabled. Clear all ME settings.

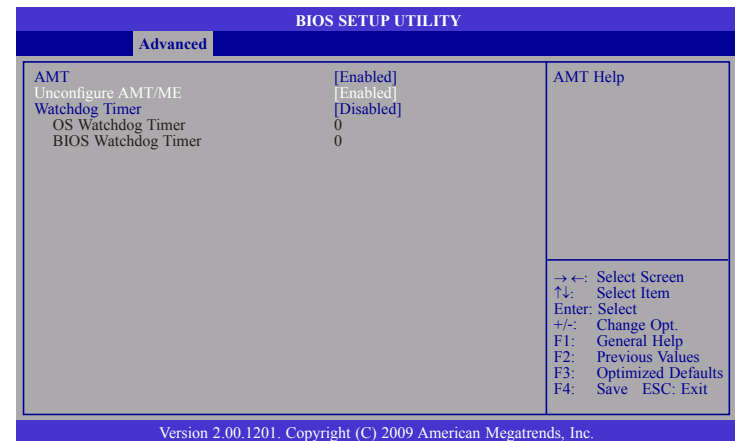

3. The message below will appear. Type **Y**.

```
Intel(R) Management Engine BIOS Extension v6.0.3.0019  
Copyright(C) 2003-09 Intel Corporation. All Rights Reserved.  
  
Found unconfigure of Intel(R) ME  
Continue with unconfiguration (Y/N)
```



# Appendix A: Power Consumption

## Test Configuration

System Configuration	Sys#1	Sys#2	Sys#3
Chassis	CHASSIS NViS 3540 Ver. A	CHASSIS NViS 3540 Ver. A	CHASSIS NViS 3540 Ver. A
CPU	Intel® Core™ i7-620M Processor (4M Cache, 2.66 GHz) 35W	Intel CPU Celeron Processor P4500 (2M Cache, 1.86 GHz)	Intel® Core™ i5-520M Processor (3M Cache, 2.4 GHz) 35W
Memory	Transcend DDR3 1066 2Gx2	Transcend DDR3 1066 2Gx2	Transcend DDR3 1066 2Gx2
HDD	Hitachi HTS23225L9A360 250GB	Hitachi HTS23225L9A360 250GB	Hitachi HTS23225L9A360 250GB
FDD	N/A	N/A	N/A
CD-ROM	N/A	N/A	N/A
Compact Flash device	N/A	N/A	N/A
Power Supply	POWER ADAPTER SPI:G.P FSP120-AAB(N091)	POWER ADAPTER SPI:G.P FSP120-AAB(N091)	POWER ADAPTER SPI:G.P FSP120-AAB(N091)
Add-on Card	D-LINK LAN Card	D-LINK LAN Card	D-LINK LAN Card
CPU Cooler	NViS 3540 HEATSINK	NViS 3540 HEATSINK	NViS 3540 HEATSINK
System Fan	N/A	N/A	N/A
Keyboard	LEMEL B-5201-P	LEMEL B-5201-P	LEMEL B-5201-P
Mouse	GENIVS EASY MOUSE PS/2	GENIVS EASY MOUSE PS/2	GENIVS EASY MOUSE PS/2

## Power Consumption Measurement

### Purpose

The purpose of the power consumption test is to verify the power dissipation of the system and the load of the power supply.

### Test Equipment

PROVA CM-07 AC/DC CLAMP METER

### Device Under Test

DUT: Sys #1 / Sys #2

### Test Procedure

1. Power up the DUT and then boot Windows XP.
2. Enter the standby mode (HDD power down).
3. Measure the power consumption and record it.
4. Run the Burn-in test program to apply 100% full loading.
5. Run the Intel Kpower program.
5. Run the LAN Packet Counter and Receive program.

### Test Data

	Sys #1	Sys #2
	+19V	+19V
Full-Loading Mode	2.97A	2.43A
Total	56.43W	46.17W
Standby Mode	1.025A	0.99A
Total	19.475W	18.81W

# Appendix B: GPIO Programming guide

## NISB3500 GPIO


PIN	Description	PIN	Description
1	+5V	2	GND
3	GPO24	4	GPI20
5	GPO25	6	GPI21
7	GPO26	8	GPI22
9	GPO27	10	GPI23

## IO base address : 800h

Bit0 : GPI20  
 Bit1 : GP I21  
 Bit2 : GP I22  
 Bit3 : GP I23  
 Bit4 : GPO24  
 Bit5 : GPO25  
 Bit6 : GPO26  
 Bit7 : GPO27

1. Read/Write GPIO data by I/O port 801h

# Appendix C: Watchdog Timer Setting

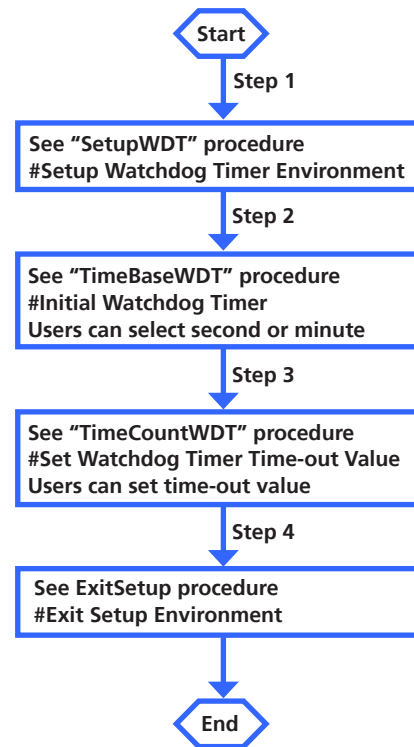

```
c:\>debug [enter]
-o 2e 87 ;Enter the Extended Function Mode
-o 2e 01
-o 2e 55
-o 2e 55
-o 2e 07 ;Logical Device Number Reg
-o 2f 07 ;LDN=7
-o 2e 72 ;Watch dog configuration
-o 2f XX ;minute mode or second mode
-o 2e 73 ;LSB for Watch dog tme out value
-o 2f YY
-o 2e 74 ;MSB for Watch dog tme out value
-o 2f ZZ
```

XX: 90 : Second mode  
10 : minute mode

ex:

10 second timeout:

xx=90

yy=0a

zz=00


# Appendix D: Intel Embedded AMT Management Express KVM

1. After installing the Intel Embedded AMT Management Express utility, the **Intel Embedded AMT Management Express** icon will appear on your desktop.




2. Double-click the icon to run Intel Embedded AMT Management Express.

3. When the Intel Embedded AMT Management Express dialog box appears, click **Accept**.

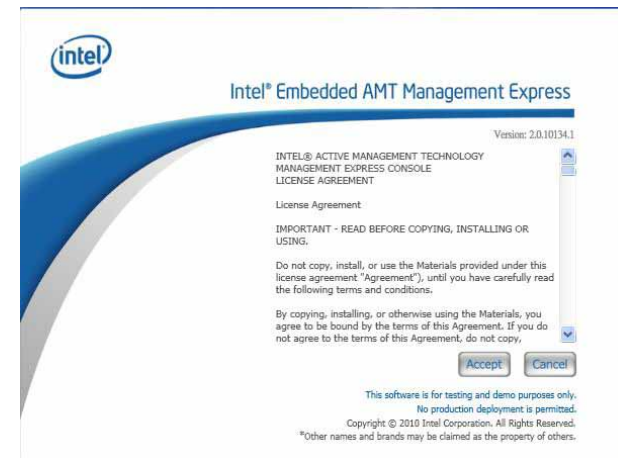



4. Click the first icon in the toolbar (top row).

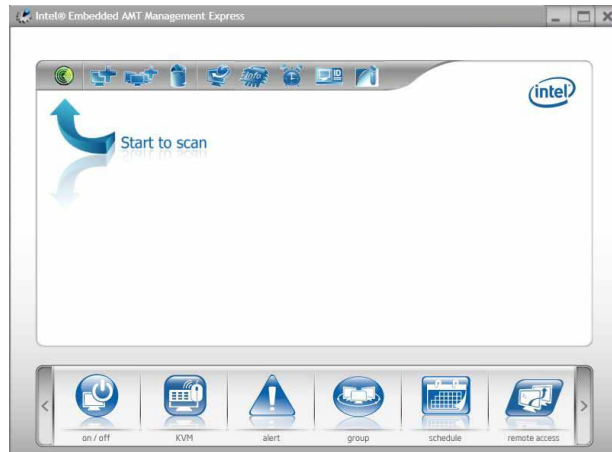

5. Enter a range of IP addresses that is within the network to find iAMT computers.
6. Click the **Start Scan** icon.



7. The iAMT computers that were detected within the network will appear under the Discovered Devices list.



8. Click **Add Device**. A dialog box will appear.
- Enter the ME BIOS' username "admin" and password. Click **OK**.
9. After you have added the iAMT computer, a dialog box will appear informing you that the device was added successfully. Click **OK**.




10. In the Intel Embedded AMT Management Express main menu, you will notice the **Device-1** icon in the Device section.

Move the cursor to **Device-1** and you will see the remote iAMT computer's IP address.




11. Click the 5th icon (Connect to Selected Device) in the toolbar to connect to the remote iAMT computer.

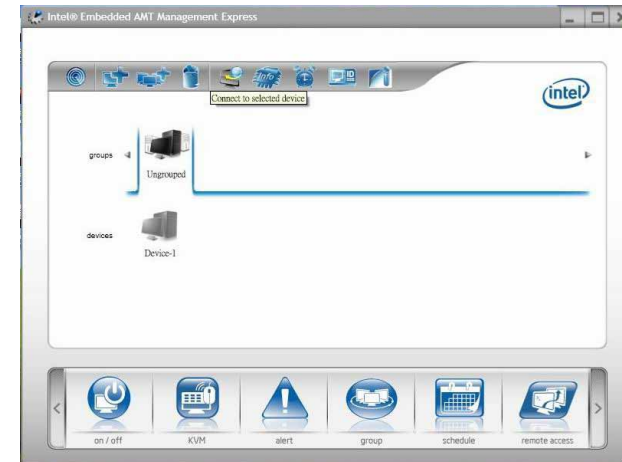

- In the Connection dialog box, enter the remote computer's IP address, ME BIOS' username "admin" and password.

Click the **Connect** icon to connect to the remote computer.

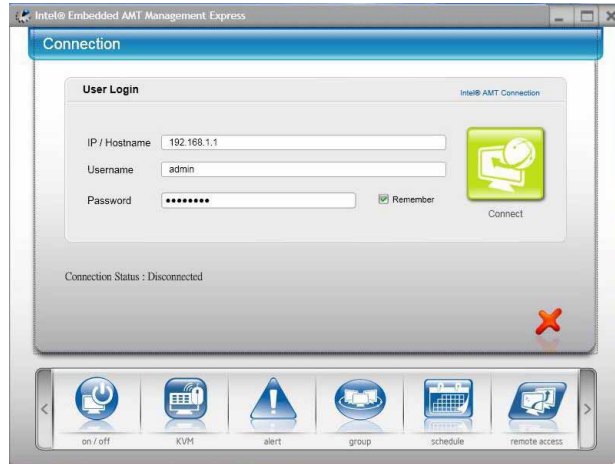

- Once the server is connected to the remote computer, the message **Connection Status: Connection Established** will appear at the bottom of the screen.




14. In the Intel Embedded AMT Management Express main menu, click the **KVM** icon.



15. The Remote KVM screen will appear. In the KVM Password field, enter the ME BIOS admin's password and then click the **Start Session** icon.

You will be prompted to enter the **VNC's password**.

Enter the 6-character password that appeared on the remote computer.

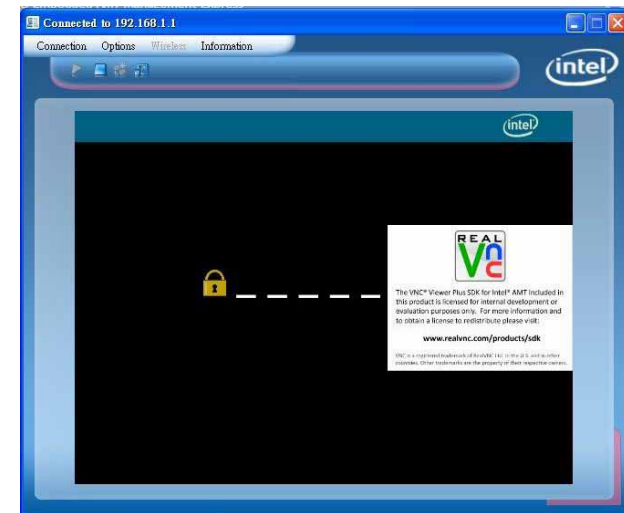

16. When the server is connected to the remote iAMT computer, the server will be able to see the remote computer's current image.



If you entered the wrong password thrice, a message will appear notifying you that the server and remote computer's VNC connection failed. You must click the **KVM** icon again and then select **KVM Viewer Redirect Port** to reconnect.

# Appendix E: Intel Manageability Command Tool - KVM


1. After installing the Intel Manageability Commander Tool, the **Manageability Commander Tool** icon will appear on your desktop.



2. Double-click the icon to run Manageability Commander Tool.


The Network Discovery screen allows you to scan to find iAMT computers (with the ME BIOS configured) on the specified range of IP addresses.

3. Enter a range of IP addresses that is within the network. Enter the **Start IP address** and **End IP address**.
4. Click **Start** to search for iAMT computers that are in the designated range.

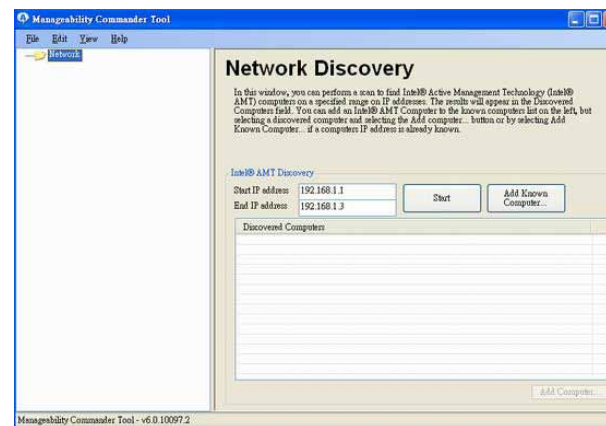


- The detected iAMT computer will appear in the Discovered Computers field.

You can either click **Add Known Computer** to add the iAMT computer to the Network list on the left column or double-click the computer name under the Discovered Computers list.

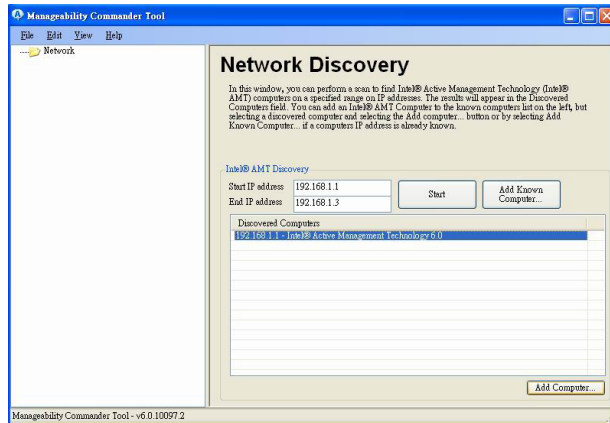


- After adding the iAMT computer, a dialog box will appear. Enter the username "admin" and password used by the ME BIOS of the iAMT computer.

Click **OK**.

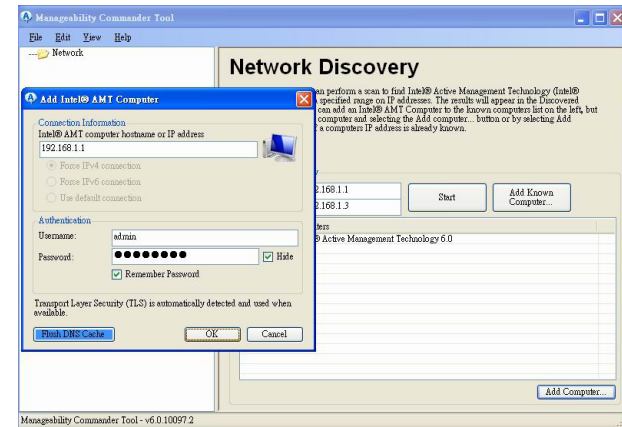




- The newly added iAMT computer with its IP address will appear under the Network list located at the left column of the screen.

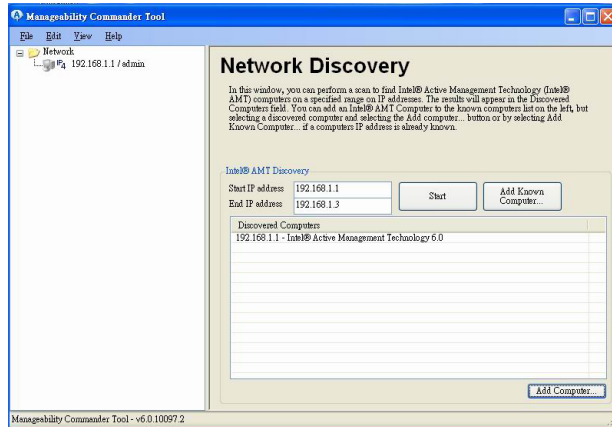


- On the left column, under Network, select the iAMT computer. The Connect & Control screen will appear on the right side.


Select the **Connection** tab and then click **Connect**. The Manageability Commander Tool will connect the iAMT computer with the server.

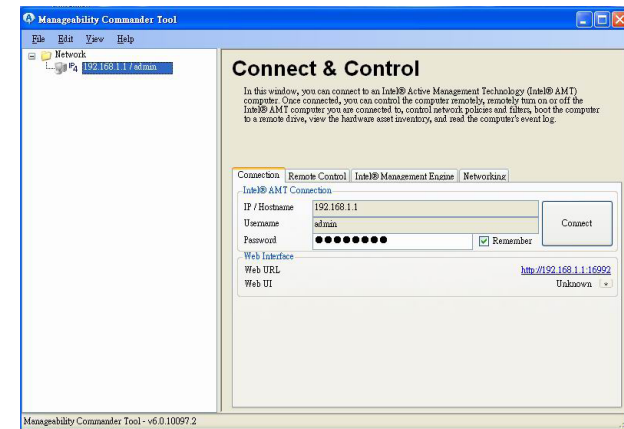


9. The iAMT computer's icon under the Network list will turn from gray to blue. The server and iAMT computer are now connected.

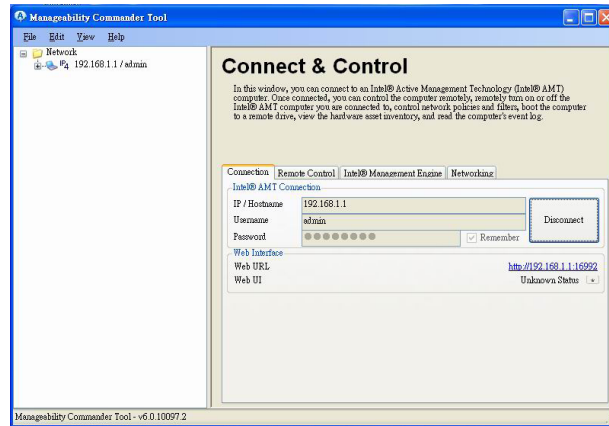


10. Display the hierarchical structure of the iAMT computer's files and folders. This will allow you to view the remote computer's hardware status and configuration.

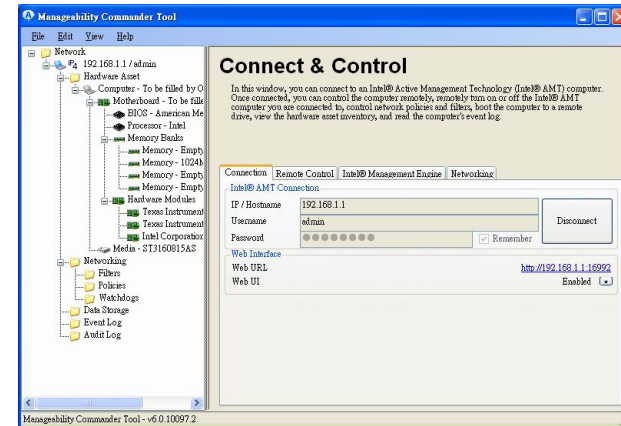

11. On the right side of the screen, select the **Remote Control** tab.
12. Under the KVM section, check whether the Remote KVM Setting's status is All Parts Enabled. If not, click the ↓ arrow beside it.

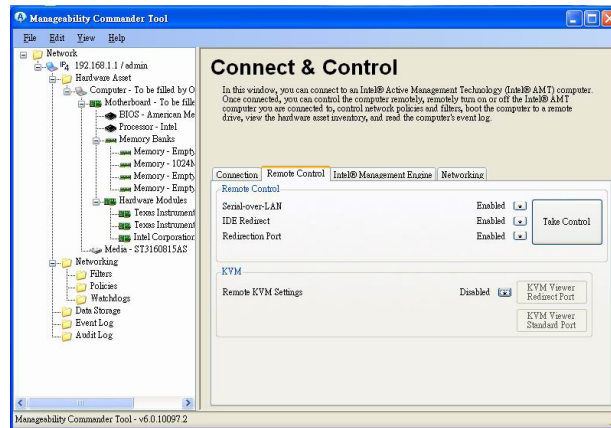


13. The Edit KVM Settings Form dialog box will appear. In the KVM State field, click the scroll down arrow and then select **Enabled - All Ports**. Click **OK**.

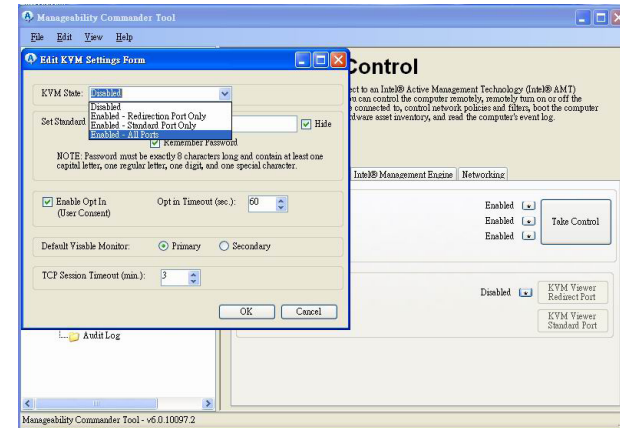


- The Remote KVM screen will appear. Select **KVM Viewer Redirect Port**. The server will prompt you to enter the VNC's password.

The remote iAMT's computer will at the same time display the Intel KVM Remote Assistance Application program's 6-character password.

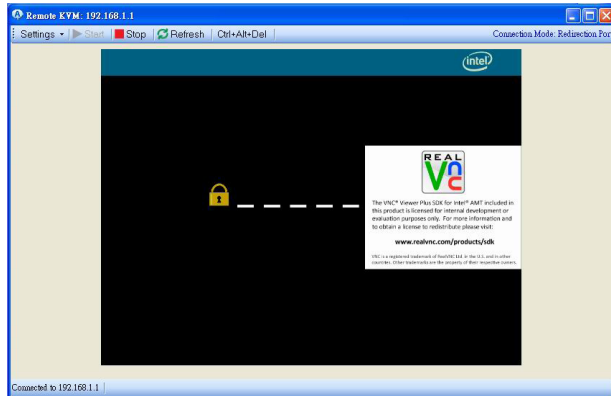

- After the server entered the 6-character password provided by the remote computer's screen, the server will be able to see the remote computer's current image.

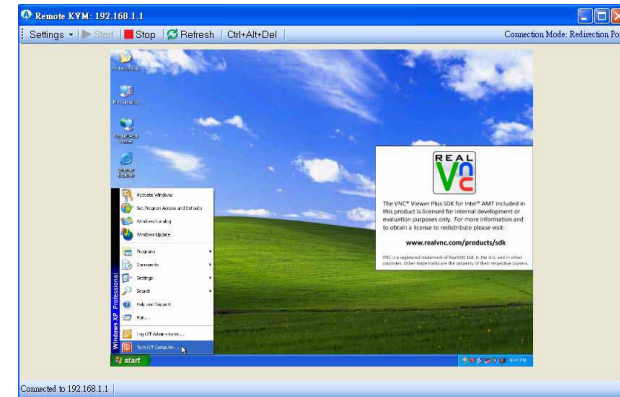


If you entered the wrong password thrice, a message will appear notifying you that the server and remote computer's VNC connection failed. You must click the **KVM** icon again and then select **KVM Viewer Redirect Port** to reconnect.

# Appendix F: PoE Device Setup

## PoE Device Configuration

1. The system will automatically detect the PoE switch device (Realtek RTL8139).

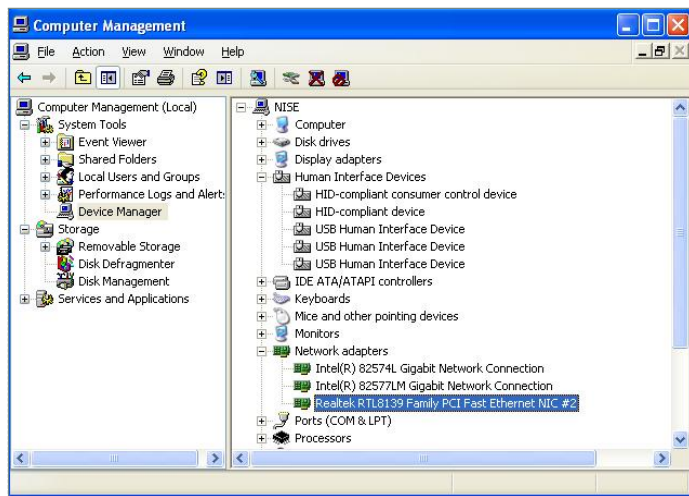


2. Connect the IP camera and then set its IP address.

Example:  
IP CAM IP address: 192.168.0.30




Fill out the PoE switch device's local IP address as 192.168.0.x

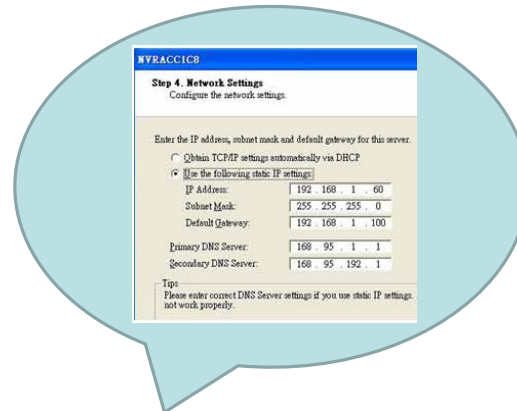


## Wireless/LAN Bridge Configuration

1. Wireless LAN can be useful in many scenarios. Refer to the illustration below on how to connect the PoE switch to the Internet.

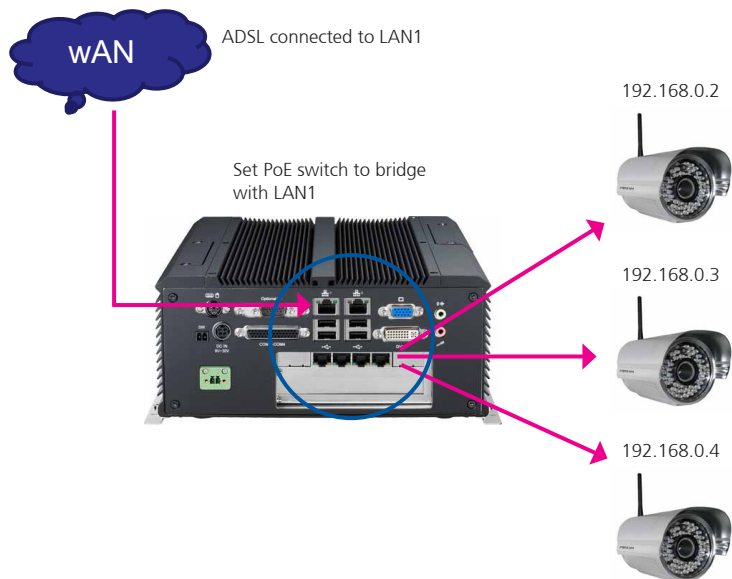

2. Bridge the Intel LAN and PoE switch device. In the Network Connections dialog box, select the Local Area Connection devices and then right click the selected devices. Select Bridge Connections.

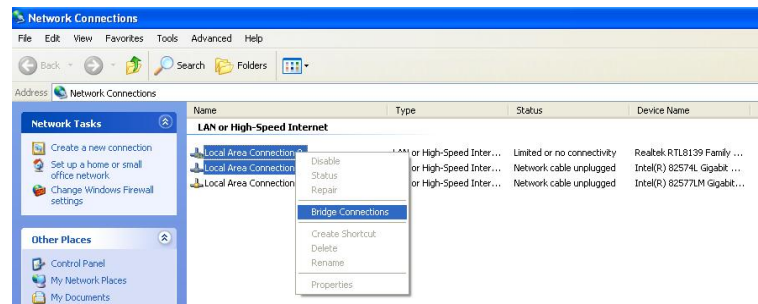

## Hybrid DVR Configuration (NViS 3540H only)

### Connect Surveillance Cameras

1. The 25-pin connector on the capture card is used to connect surveillance cameras.





2. Connect the D-sub end of the provided cable to the 25-pin connector and the other ends to surveillance cameras.



3. Set the IP address to 192.168.0.x.




4. Select the IP Camera Channel Setup.

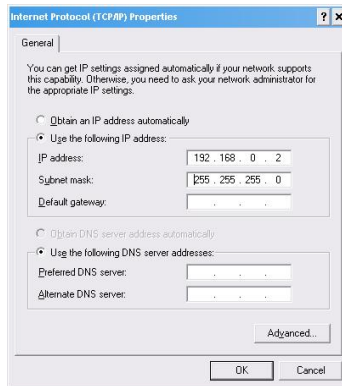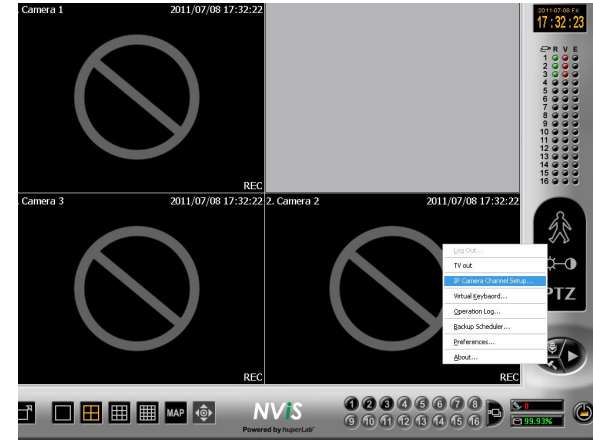




5. In the IP Camera Channel Setup dialog box, select 1.

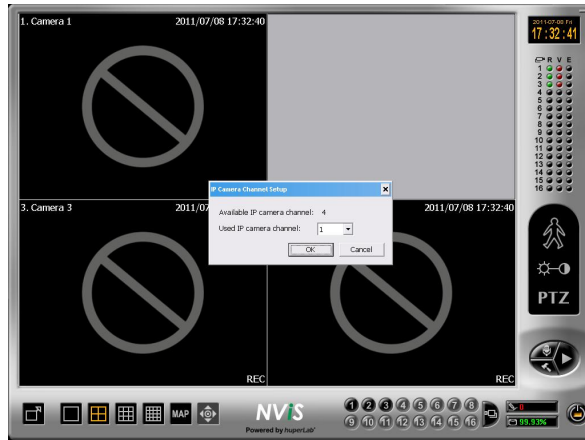


6. Select Preferences.

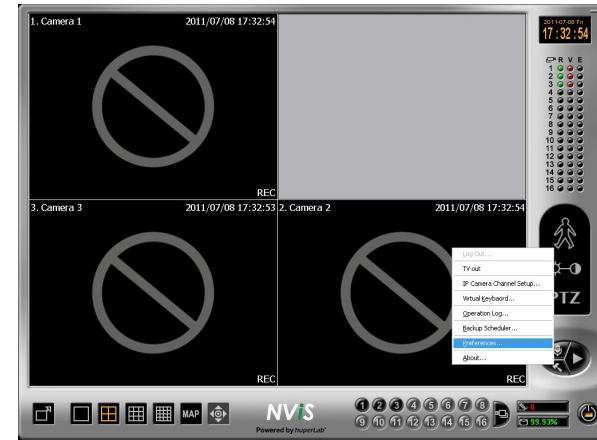




8. Enter the IP address:192.168.0.30 (default setting).

Under Camera Model, select MESSOA – NIC836(MPEG4) and then click OK.

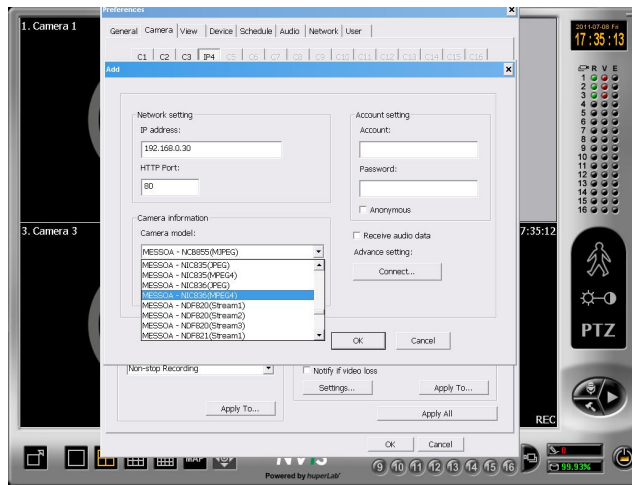

8. In the IP Camera field, select 192.168.0.30 MESSOA –NIC836(MPEG4).

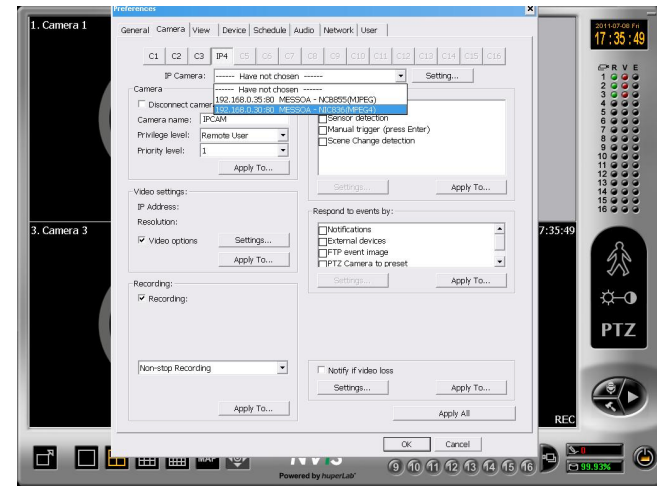

# Appendix G: Voltage Low Shut-down Setting (NISKIG120)



## Voltage Low Shut-down Setting (12V DC Input)

SW1	DIP Switch 1	DIP Switch 2	Start-Up	Shut-Down	Note
00	0=OFF	0=OFF	11.5V	10.5V	Default
01	0=OFF	1=ON	12V	11V	
10	1=ON	0=OFF	12.5V	11V	
11	1=ON	1=ON	12.5V	11.5V	

## Voltage Low Shut-down Setting (24V DC Input)

SW1	DIP Switch 1	DIP Switch 2	Start-Up	Shut-Down	Note
00	0=OFF	0=OFF	23V	21V	Default
01	0=OFF	1=ON	24V	22V	
10	1=ON	0=OFF	25V	22V	
11	1=ON	1=ON	25V	23V	

## Appendix H: DC Input & Output Setting (NISKIG120)




### DC Input Setting

SW1	DIP Switch 3	DIP Switch 4	Function Setting	Note
00	0=OFF	0=OFF	12V DC input	Default
01	0=OFF	1=ON	24V DC input	
10	1=ON	0=OFF	Reserved only	
11	1=ON	1=ON	9~36V Power module without Ignition function	

### DC Output Setting

SW1	DIP Switch 7	DIP Switch 8	Function Setting	Note
00	0=OFF	0=OFF	Disable	Default
01	0=OFF	1=ON	24V Output	
10	1=ON	0=OFF	19V Output	
11	1=ON	1=ON	12V Output	

# Appendix I: Power On/Off Delay Timer Setting (NISKIG120)

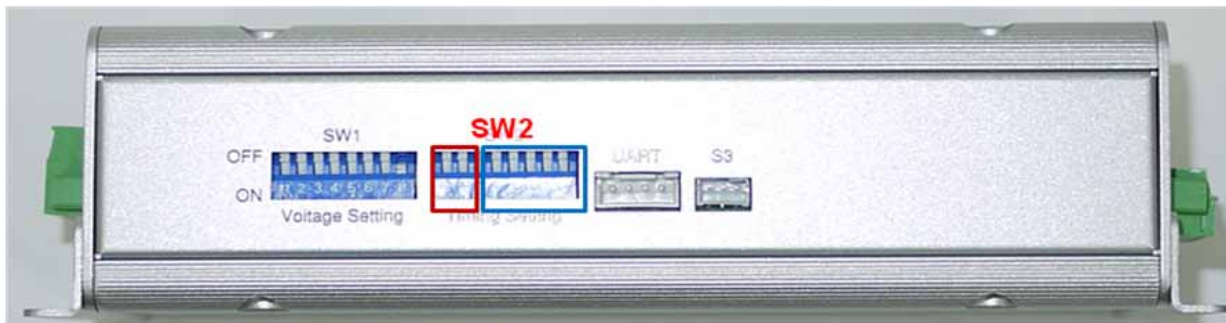

## Delay Timer Setting


Power On Delay Timer			
SW2	DIP Switch 1	Function Setting	Note
0	0=OFF	Disable (default 3 seconds)	Default
1	1=ON	Enable (DIP Switch 3,4,5)	

Power Off Delay Timer			
SW2	DIP Switch 2	Function Setting	Note
0	0=OFF	Disable (default 0 second)	Default
1	1=ON	Enable (DIP Switch 6,7,8)	

DIP Switch 3, 4, 5	
POWER ON Delay Timer Select	
000	10sec
100	30sec
010	1min
110	5min
001	10min
101	15min
011	30min
111	1hour

DIP Switch 6, 7, 8	
POWER OFF Delay Timer Select	
000	20sec
100	1min
010	5min
110	10min
001	30min
101	1hour
011	6hour
111	18hour

## Appendix J: MCU Programming (NISKIG120)

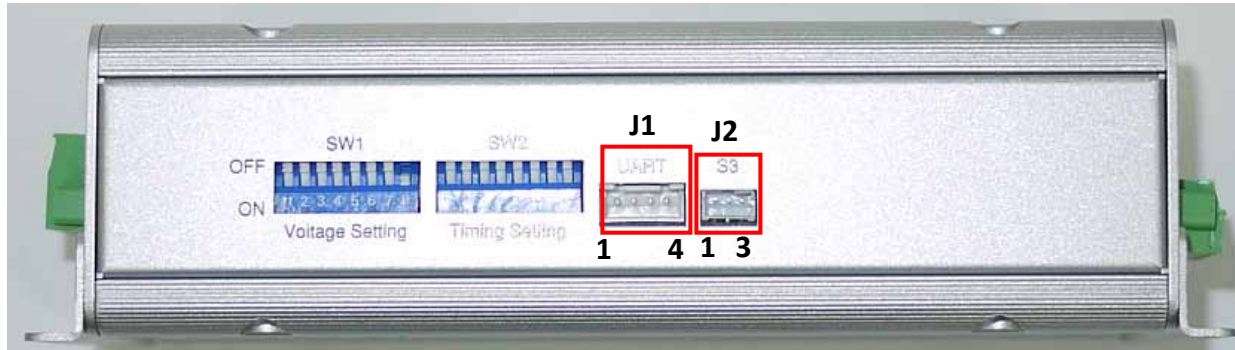

J1 : MCU programming port (RS232 signal)	
1	GND
2	COM TX (Output)
3	COM RX (Input)
4	N/A

J2 : System port	
1	GND
2	Power ON Button (Output)
3	SLP_S3 IN (Input)
4	N/A