



NEXCOM International Co., Ltd.

Intelligent Platform & Services Business Unit

Marine Panel PC

(M)PPC-240T-HW-01

User Manual

CONTENTS

Preface

Copyright	iv
Disclaimer	iv
Acknowledgements	iv
Regulatory Compliance Statements	iv
Declaration of Conformity	iv
RoHS Compliance	v
Warranty and RMA	vi
Safety Information	ix
Installation Recommendations	ix
Safety Precautions	x
Technical Support and Assistance	xi
Conventions Used in this Manual	xi
Global Service Contact Information	xii
Package Contents	xiv
Ordering Information	xv

Chapter 1: Product Introduction

(M)PPC-240T-HW-01	1
Specifications	2
Knowing Your (M)PPC-240T-HW-01	4
Front	4
Rear Bottom	5
Rear	6
Mechanical Dimensions	7

Chapter 2: Jumpers and Connectors

Before You Begin	8
Precautions	8
Jumper Settings	9
Locations of the Jumpers and Connectors	10
Top View	10
Bottom View	11
Jumpers	12
RTC Clear Select	12
PWN Mode Power Select	12
AT/ATX Power Select	13
Connector Pin Definitions	14
External I/O Interfaces	14
DVI-I Port	14
LAN1 Port	14
LAN2 Port	15
LAN3 Port	15
LAN4 Port	16
Dual USB 3.0 Port	16
Dual USB 2.0 Port	17
COM Port	17
Internal Connectors	18
EC Download Pin Header	18
Debug Port	18
LVDS Channel A Connector	19
LVDS Channel B Connector	19



PWR/HDD LED Connector	20
USB Connector	20
USB Connector	21
Light Sensor Connector	21
Touch Control Board Connector	22
FAN Connector	22
SATA Connector.....	23
SATA Power Connector	23
LVDS Inverter Connector	24
USB Connector	24
Battery Connector.....	25
SIM Card Connector	25
Mini-PCIe Slot	26
NGFF M.2 SATA Connector	27
Block Diagram	28

Chapter 3: System Setup

Installing a SATA M.2 Module	29
Installing a SO-DIMM Memory Module	32
Installing a SIM Card	35
Installing a Mini PCIe Module.....	38
Installing the Half-Size Mini PCIe Module	42
Installing the Fan.....	43
Flush Mounting.....	46
VESA Mounting	47

Chapter 4: BIOS Setup

About BIOS Setup.....	48
When to Configure the BIOS.....	48
Default Configuration	49
Entering Setup	49

Legends.....	49
BIOS Setup Utility.....	51
Main	51
Advanced.....	52
Chipset.....	57
Boot.....	60
Security	61
Save & Exit	62

Appendix A: Power Consumption63

Appendix B: Watchdog

1.1 Command Register and Address Description:	64
1.2 Set up Watchdog Time Interval Description:	64
1.3 Read Watchdog Time Interval Description:	65
1.4 Reset Watchdog Time Interval Description:.....	65
1.5 Start Watchdog Description:	66
1.6 Stop Watchdog Description:.....	66

PREFACE

Copyright

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written consent from NEXCOM International Co., Ltd.

Disclaimer

The information in this document is subject to change without prior notice and does not represent commitment from NEXCOM International Co., Ltd. However, users may update their knowledge of any product in use by constantly checking its manual posted on our website: <http://www.nexcom.com>. NEXCOM shall not be liable for direct, indirect, special, incidental, or consequential damages arising out of the use of any product, nor for any infringements upon the rights of third parties, which may result from such use. Any implied warranties of merchantability or fitness for any particular purpose is also disclaimed.

Acknowledgements

(M)PPC-240T-HW-01 is a trademark of NEXCOM International Co., Ltd. All other product names mentioned herein are registered trademarks of their respective owners.

Regulatory Compliance Statements

This section provides the FCC compliance statement for Class A devices and describes how to keep the system CE compliant.

Declaration of Conformity

FCC

This equipment has been tested and verified to comply with the limits for a Class A digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area (domestic environment) is likely to cause harmful interference, in which case the user will be required to correct the interference (take adequate measures) at their own expense.

CE

The product(s) described in this manual complies with all applicable European Union (CE) directives if it has a CE marking. For computer systems to remain CE compliant, only CE-compliant parts may be used. Maintaining CE compliance also requires proper cable and cabling techniques.

RoHS Compliance



NEXCOM RoHS Environmental Policy and Status Update

NEXCOM is a global citizen for building the digital infrastructure. We are committed to providing green products and services, which are compliant with European Union RoHS (Restriction on Use of Hazardous Substance in Electronic Equipment) directive 2011/65/EU, to be your trusted green partner and to protect our environment.

RoHS restricts the use of Lead (Pb) < 0.1% or 1,000ppm, Mercury (Hg) < 0.1% or 1,000ppm, Cadmium (Cd) < 0.01% or 100ppm, Hexavalent Chromium (Cr6+) < 0.1% or 1,000ppm, Polybrominated biphenyls (PBB) < 0.1% or 1,000ppm, and Polybrominated diphenyl Ethers (PBDE) < 0.1% or 1,000ppm.

In order to meet the RoHS compliant directives, NEXCOM has established an engineering and manufacturing task force to implement the introduction of green products. The task force will ensure that we follow the standard NEXCOM development procedure and that all the new RoHS components and new manufacturing processes maintain the highest industry quality levels for which NEXCOM are renowned.

The model selection criteria will be based on market demand. Vendors and suppliers will ensure that all designed components will be RoHS compliant.

How to recognize NEXCOM RoHS Products?

For existing products where there are non-RoHS and RoHS versions, the suffix "(LF)" will be added to the compliant product name.

All new product models launched after January 2013 will be RoHS compliant. They will use the usual NEXCOM naming convention.

Warranty and RMA

NEXCOM Warranty Period

1. NEXCOM makes products in accordance with the Industry standard and, NEXCOM warrants that all the Industry-grade IPC and System products will be free from defect in neither material nor workmanship for twenty-four (24) months from the day of invoice issued.
2. For NEXCOM Panel PC product lines (the APPC, MPPC series), they are also guaranteed against defect in materials and workmanship for the period of twenty-four (24) months in their motherboard design. For 3rd party parts, it follows with original suppliers' standard: 12 months for battery pack and LCD, 24 months for adaptor / add on modules (including GSM module, RFID module, and antenna).
3. If NEXCOM determines customer's warranty claim is valid, NEXCOM will repair or replace product(s) without additional charge for parts and labor. An extended Warranty Program will extend the warranty period of the product accordingly.

Warranty Coverage

The warranty applies only to products manufactured or distributed by NEXCOM and its subsidiaries. This warranty covers all the products/shipments except for:

1. Any claimed defect, products that have been repaired or modified by persons who have not been authorized by NEXCOM or, products which have been subjected to misuse, abuse, accident, improper installation, or usage not in accordance with the product instruction. NEXCOM assumes no liability as a consequence of such events under the term of this warranty.

One example is the replacement of Tablet's or Hand-held's LCD display due to scratching stains or other degradation; these will not be covered under this warranty.

2. Damages caused by customers' delivery/shipping of the product or, product failure resulted from electrical power/voltage shock, or, installation of parts/components which are not supplied/approved by NEXCOM in advance.
3. Third-party products:
 - a. Software, such as the device drivers,
 - b. External devices such as HDD, printer, scanner, mouse, LCD panel, battery, and so on,
 - c. Accessory/parts that were not approved by NEXCOM and,
 - d. Accessory/parts were added to products after they were shipped from NEXCOM.

Product will be treated as "Out of Warranty " if:

- a. It expires the warranted 24 months period from the day it was purchased.
- b. It had been altered by persons other than an authorized NEXCOM service person or, which have been subjected to misuse, abuse, accident, or improper installation.
- c. It doesn't have the original NEXCOM Serial Number labeling for NEXCOM's warranty period identification or, tracking.

RMA that NEXCOM has determined not to be covered by the warranty will be charged the NEXCOM Standard Repair Fee for the repairing. If a RMA is determined to be not repairable, customer will be notified and product(s) may be returned to customer at their request; a minimum service fee may be charged however.

NEXCOM Return Merchandise Authorization (RMA) Procedure

For the RMA (Return Merchandise Authorization) shipment, customer is responsible for packaging and shipping the product to the designated NEXCOM service sites, with shipping charges prepaid by the customer. The original NEXCOM shipping box should be used whenever possible. NEXCOM shall pay for the return of the product to the customer's location. In case of expedited shipping request, an extra service charge shall be assessed and the customer is responsible for this extra return shipping charge.

1. Customers should enclose the "NEXCOM RMA Service Form" with the returned products.
2. Customers need to write down all the information related to the problem on the " NEXCOM RMA Service Form " when applying for the RMA service; information will help to understand the problem, including the fault description, on-screen messages, and pictures if possible.
3. Customers could send back the faulty product with or without the accessories and key parts such as the CPU and DIMM. If the key parts are included, please be noted clearly within the return form. NEXCOM takes no responsibility for the parts which are not listed in the return form.
4. Customers hold the responsibility to ensure that the packing of defective products is durable enough to be resistant against further damage due to the transportation; damage caused by transportation is treated as " Out of Warranty " under our Warranty specification.
5. RMA product(s) returned by NEXCOM to any location other than the

customer registered delivery address will incur an extra shipping charge, the customer is responsible for paying the extra shipping charges, duties, and taxes of this shipment.

Product Repairing

1. NEXCOM will repair defective products covered under this limited warranty that are returned to NEXCOM; if products do prove to be defective, they will be repaired during their warranty period unless other warranty terms have been specified.
2. NEXCOM owns all parts removed from repaired products.
3. NEXCOM will use parts made by various manufacturers in performing the repair.
4. The repaired products will be warranted subjected to the original warranty coverage and period only.
5. For products returned as defective but, proved to be no defect/fault after the RMA process, NEXCOM reserves the right to claim for a NDF (No Defect Found) Service Charge.
6. NEXCOM will issue RMA Report which included Repair Detailed Information to the customer when the defective products were repaired and returned.
7. In addition to the above, NEXCOM may authorize Independent/Third-party suppliers to repair the defective products for NEXCOM.

Out Of Warranty Service

There will be a service charge from NEXCOM for the “Out Of Warranty” product service; they are the Basic Diagnostic Service Fee and the Advanced Component Replacement Fee respectively. And, if the product can not be repaired, NEXCOM will either return the product to the customer or, just scrap it, followed by customer’s instruction.

1. Testing and Parts Replacement

NEXCOM will have the following Handling Charges for those OoW products that returned:

- a. Basic Labor Cost and Testing Fee: as Table listed.
 - b. Parts Fee: NEXCOM will charge for main IC chipsets such as the N.B., S.B., Super-IO, LAN, Sound, Memory, and so on.
 - c. 3rd-party Device Fee: products replacement for CPU, DIMM, HDD, Chassis, and UPS.
2. Out of Warranty product will have a three months warranty for the fixed issues. If the product failed with different problem within 3 months, they will still incur the service charge of “Out of Warranty” .
3. Out of Warranty “products will not be repaired without a signed PI from the customer, the agreement of the repair process.

Add-on card, 3rd Party Device and board level repair cost higher than new product prices, customer can abandon to sign PI to repair and, please contact with sales to buy new products.

Safety Information

Before installing and using the device, note the following precautions:

- Read all instructions carefully.
- Do not place the unit on an unstable surface, cart, or stand.
- Follow all warnings and cautions in this manual.
- When replacing parts, ensure that your service technician uses parts specified by the manufacturer.
- Avoid using the system near water, in direct sunlight, or near a heating device.
- The load of the system unit does not solely rely for support from the rackmounts located on the sides. Firm support from the bottom is highly necessary in order to provide balance stability.
- The computer is provided with a battery-powered real-time clock circuit. There is a danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

Installation Recommendations

Ensure you have a stable, clean working environment. Dust and dirt can get into components and cause a malfunction. Use containers to keep small components separated.

Adequate lighting and proper tools can prevent you from accidentally damaging the internal components. Most of the procedures that follow require only a few simple tools, including the following:

- A Philips screwdriver
- A flat-tipped screwdriver
- A grounding strap
- An anti-static pad

Using your fingers can disconnect most of the connections. It is recommended that you do not use needle-nose pliers to disconnect connections as these can damage the soft metal or plastic parts of the connectors.

Safety Precautions

1. Read these safety instructions carefully.
2. Keep this User Manual for later reference.
3. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a stable surface during installation. Dropping it or letting it fall may cause damage.
7. The openings on the enclosure are for air convection to protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
9. Place the power cord in a way so that people will not step on it. Do not place anything on top of the power cord. Use a power cord that has been approved for use with the product and that it matches the voltage and current marked on the product's electrical range label. The voltage and current rating of the cord must be greater than the voltage and current rating marked on the product.
10. All cautions and warnings on the equipment should be noted.
11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
12. Never pour any liquid into an opening. This may cause fire or electrical shock.
13. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
14. If one of the following situations arises, get the equipment checked by service personnel:
 - a. The power cord or plug is damaged.
 - b. Liquid has penetrated into the equipment.
 - c. The equipment has been exposed to moisture.
 - d. The equipment does not work well, or you cannot get it to work according to the user's manual.
 - e. The equipment has been dropped and damaged.
 - f. The equipment has obvious signs of breakage.
15. Do not place heavy objects on the equipment.
16. The unit uses a three-wire ground cable which is equipped with a third pin to ground the unit and prevent electric shock. Do not defeat the purpose of this pin. If your outlet does not support this kind of plug, contact your electrician to replace your obsolete outlet.
17. **CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER. DISCARD USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.**

Technical Support and Assistance

1. For the most updated information of NEXCOM products, visit NEXCOM's website at www.nexcom.com.
2. For technical issues that require contacting our technical support team or sales representative, please have the following information ready before calling:
 - Product name and serial number
 - Detailed information of the peripheral devices
 - Detailed information of the installed software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wordings of the error messages

Warning!

1. Handling the unit: carry the unit with both hands and handle it with care.
2. Maintenance: to keep the unit clean, use only approved cleaning products or clean with a dry cloth.

Conventions Used in this Manual



Warning:

Information about certain situations, which if not observed, can cause personal injury. This will prevent injury to yourself when performing a task.



Caution:

Information to avoid damaging components or losing data.



Note:

Provides additional information to complete a task easily.

Global Service Contact Information

Headquarters

NEXCOM International Co., Ltd.

9F, No. 920, Chung-Cheng Rd.,
ZhongHe District, New Taipei City, 23586,
Taiwan, R.O.C.

Tel: +886-2-8226-7786

Fax: +886-2-8226-7782

www.nexcom.com

America

USA

NEXCOM USA

2883 Bayview Drive,
Fremont CA 94538, USA

Tel: +1-510-656-2248

Fax: +1-510-656-2158

Email: sales@nexcom.com

www.nexcom.com

Asia

Taiwan

NEXCOM Intelligent Systems

Taipei Office

13F, No.920, Chung-Cheng Rd.,
ZhongHe District,
New Taipei City, 23586, Taiwan, R.O.C.

Tel: +886-2-8226-7796

Fax: +886-2-8226-7792

Email: sales@nexcom.com.tw

www.nexcom.com.tw

NEXCOM Intelligent Systems

Taichung Office

16F, No.250, Sec. 2, Chongde Rd.,
Beitun Dist.,

Taichung City 406, R.O.C.

Tel: +886-4-2249-1179

Fax: +886-4-2249-1172

Email: sales@nexcom.com.tw

www.nexcom.com.tw

Japan

NEXCOM Japan

9F, Tamachi Hara Bldg.,
4-11-5, Shiba Minato-ku,
Tokyo, 108-0014, Japan

Tel: +81-3-5419-7830

Fax: +81-3-5419-7832

Email: sales@nexcom-jp.com

www.nexcom-jp.com

China

NEXCOM China

Floor 5, No.4, No.7 fengxian middle Rd.,
(Beike Industrial Park), Haidian District,
Beijing, 100094, China

Tel: +86-10-5704-2680

Fax: +86-10-5704-2681

Email: sales@nexcom.cn

www.nexcom.cn

NEXCOM Shanghai

Room 603/604, Huiyinmingzun Plaza Bldg., 1,
No.609, Yunlin East Rd.,
Shanghai, 200333, China
Tel: +86-21-5278-5868
Fax: +86-21-3251-6358
Email: sales@nexcom.cn
www.nexcom.cn

NEXCOM Surveillance Technology Corp.

Room202, Building B,
the GuangMing Industrial Zone Zhonghua Rd.,
Minzhi Street, Longhua District,
Shenzhen 518131, China
Tel: +86-755-8364-7768
Fax: +86-755-8364-7738
Email: steveyang@nexcom.com.tw
www.nexcom.cn

NEXCOM United System Service

Hui Yin Ming Zun Building Room 1108,
Building No. 11, 599 Yunling Road, Putuo District,
Shanghai, 200062, China
Tel: +86-21-6125-8282
Fax: +86-21-6125-8281
Email: frankyang@nexcom.cn
www.nexcom.cn

Europe

United Kingdom NEXCOM EUROPE

10 Vincent Avenue,
Crownhill Business Centre,
Milton Keynes, Buckinghamshire
MK8 0AB, United Kingdom
Tel: +44-1908-267121
Fax: +44-1908-262042
Email: sales.uk@nexcom.eu
www.nexcom.eu

Italy

NEXCOM ITALIA S.r.l

Via Lanino 42,
21047 Saronno (VA), Italia
Tel: +39 02 9628 0333
Fax: +39 02 9625 570
Email: nexcomitalia@nexcom.eu
www.nexcomitalia.it

Package Contents

Before continuing, verify that the package you received is complete. Your package should have all the items listed in the table.

(M)PPC-240T-HW-01

Item	Description	Qty
1	Flush Mount Bracket	1
2	Terminal block 3-pin Phoenix Contact Plug	1
3	Fan	1
4	Sponge for Flush Mount Bracket	4
5	P Head Screw	12
6	Flat Head Screw (Used for fan)	4
7	Copper Pillar (Used for fan)	4



Flush Mount Bracket



Terminal Block
3-pin Phoenix
Contact Plug



Fan



Sponge for Flush
Mount Bracket



P Head Screw



Flat Head Screw



Copper Pillar



Note: Package contents may vary depending on your country region, some items may be optional. Please contact your local distributor for more information.

Ordering Information

The following information below provides ordering information for (M)PPC-240T-HW-01.

Barebone

- **PPC-240T-HW-01 (P/N: 10M20240T00X0)**
24" Full HD LED backlight touch panel PC, Intel® Core™ i5-4300U 1.9GHz, touch screen, 4GB DDR3L, 128G M.2 SATA, 1x RS232/422/485, PCAP control buttons

CHAPTER 1: PRODUCT INTRODUCTION

(M)PPC-240T-HW-01

Overview



Key Features

- 16:9 24" Full HD Marine Panel Computer
- Intel® Core™ i5-4300U, Dual Core, 1.9 GHz
- 24" PCAP touch screen with AR coating
- 4 Gigabit Ethernet/1x DVI-I port for connecting secondary display
- 2 USB 2.0, 2 USB 3.0
- 1 RS232/422/485 isolated
- DDR3L 4GB/M.2 SATA 128GB
- IP65 compliant front panel
- Full range AC + 24VDC power inputs
- Mounting support: flush/VESA 100mm x 100mm
- IEC-60945 maritime standards compliance

Specifications

Panel

- LED size: 24", 16:9
- Resolution: Full HD 1920 x 1080
- Luminance: 300cd/m²
- Contrast ratio: 5000
- LCD color: 16.7M
- Viewing angle: 89(U), 89(D), 89(L), 89(R)
- Backlight: LED

Touch Screen

- Projected capacitive (flush panel type)
- Light transmission: 91%
- Interface: USB
- With AR coating

System

- CPU: onboard Intel® Core™ processor i5-4300U, 1.9GHz, 3M Cache
- BIOS AMI BIOS
- System memory: 2x 204-pin DDR3L SO-DIMM socket, 4GB DDR3L (default), support up to 16GB DDR3L-1066/1333, non-ECC and unbuffered
- Storage Device:
 - 1x SATA M.2 connector, 128G M.2 SATA (default)
 - 1x Mini-PCIe connector
- Graphics: Intel® HD Graphics
- Watchdog timer: Watchdog timeout can be programmed by software from 1 second to 255 seconds and from 1 minute to 255 minutes (tolerance 15% under room temperature 25°C)

- H/W status monitor: monitoring system temperature, and voltage
- Control buttons
 - Power on/off, reset, brightness
- Backlight control
 - Auto dimming function can be adjusted by ambient light sensor
 - Panel backlight can be controlled by software, dimming range from 0% to 100%

Rear I/O

- Ethernet: 4x RJ45
- 2nd display port: 1x DVI-I port
- USB: 2x USB 2.0, 2x USB 3.0
- COM #1: 1x RS232/422/485
- Power status/ HDD status LEDs
- AC power input connector: IEC 60320 C14 connector
- DC power input connector: 3-Pin Phoenix terminal blocks

Ethernet

- LAN chip: 2x Intel® I210-IT Gigabit LAN + 2x Intel® 82574 Gigabit LAN
- Ethernet interface: 10/100/1000 Mbps
- Support wake up on LAN

Power Requirements

- AC power input
 - Input voltage: 110/230VAC
 - Power consumption: 28W to 55W
- DC power input
 - Input voltage: 24VDC

- Reverse polarity protection
- Galvanic isolated

**Note: Only one power source (AC or DC) to be connected. No failover functionality.*

Mechanical & Environment


- Fanless system design
- Color
 - Pantone black RAL9005, powder painting for aluminum front bezel
 - Pantone black RAL9005 for backlight button membrane
- IP protection
 - IP65 front bezel
 - IP20 back system
- Mounting: flush/VESA 100mm x 100mm
- Vibration
 - Compliance with EN60945 protected
 - Sweep 2 Hz – 13.2 Hz at ± 1 mm, 13.2 Hz – 100 Hz at 7m/s^2 and for 2 h on each resonance ($Q>5$), 2h on one resonance/observed frequency ($Q<5$), otherwise ($Q=0$) 2 h at 30 Hz in all three axes, 12 minutes/axis
- Shock
 - IEC 68 2-27
 - 20G @ wall mount, half sine, 11ms
- Operating temperature: -25°C to 70°C
- Storage temperature: -25°C to 75°C
- Operating humidity: 10%~90% relative humidity, non-condensing
- Dimension: 590 x 366.6 x 71.66mm
- Weight: 9kg

Certifications

- CE approval
- FCC Class A
- CCC approval
- IEC-60945 maritime standards compliance

Knowing Your (M)PPC-240T-HW-01

Front

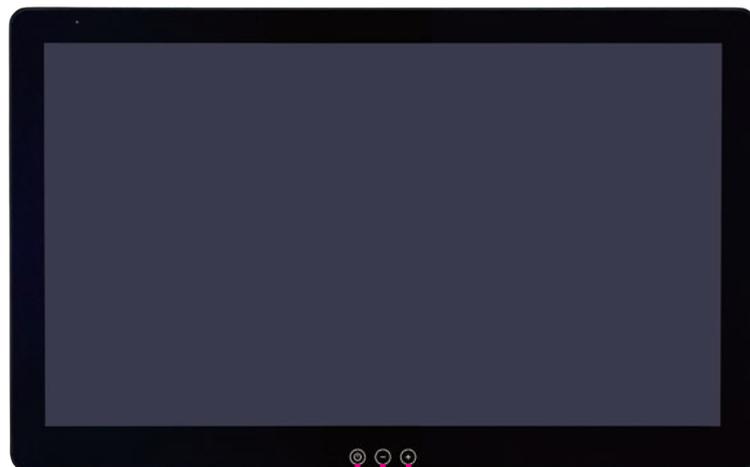

Backlight On/Off

Decrease
Brightness

Increase
Brightness

Backlight On/Off

Press to turn-on or turn-off the display.

Decrease Brightness

Press to decrease brightness of the screen.

Increase Brightness

Press to increase brightness of the screen.

Rear Bottom



LED Indicators



DVI-I LAN 1 to LAN 4 Ports USB 2.0 AC Power Socket

USB 3.0 COM



LED Indicators

Indicates the power status and hard drive activity of the system.

DVI-I Port

Used to connect a DVI-I interface monitor.

LAN 1 to LAN 4 Ports

Used to connect the system to a local area network.

USB 3.0 Ports

Used to connect the system with USB 3.0/2.0 devices.

USB 2.0 Ports

Used to connect the system with USB 2.0/1.1 devices.

COM Port

Serial DB9 port used to connect RS232/422/485 compatible devices.

AC Power Socket

Plug an AC power cord here before turning on the system.


24V DC Input

Alternatively, the system can be powered from a DC power source through the 24V DC input next to the AC power socket. To access the 24V DC input, remove the two screws securing the cover and slide the cover to the left, then fix the cover using the screws.



Do not remove the cover. Connect one power source only.


Rear

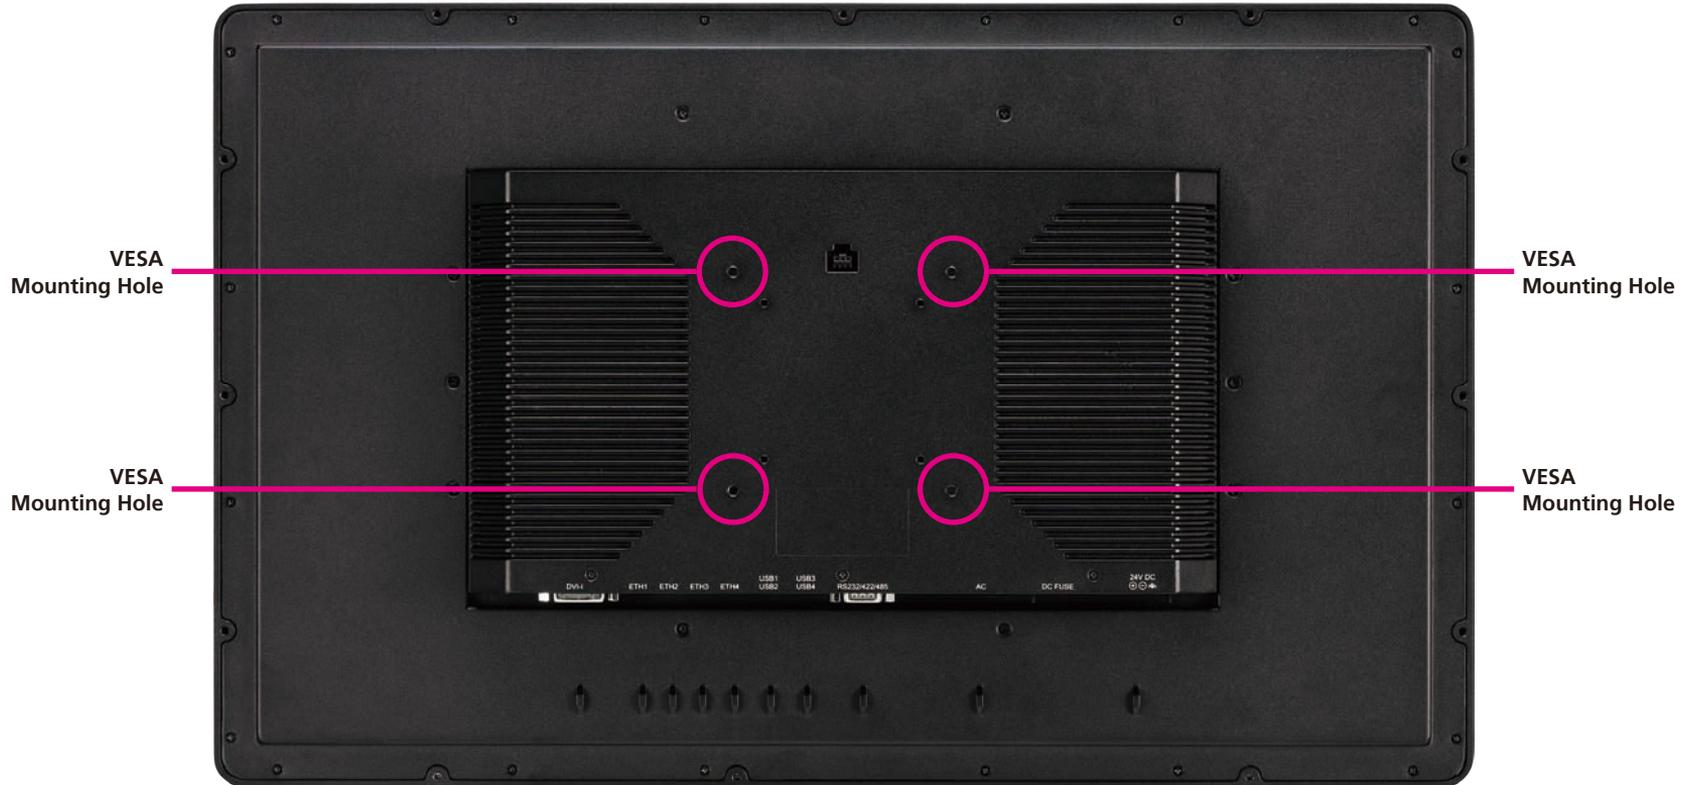

VESA Mounting Holes

These are the mounting holes for VESA mounting (100x100mm)

Mechanical Dimensions

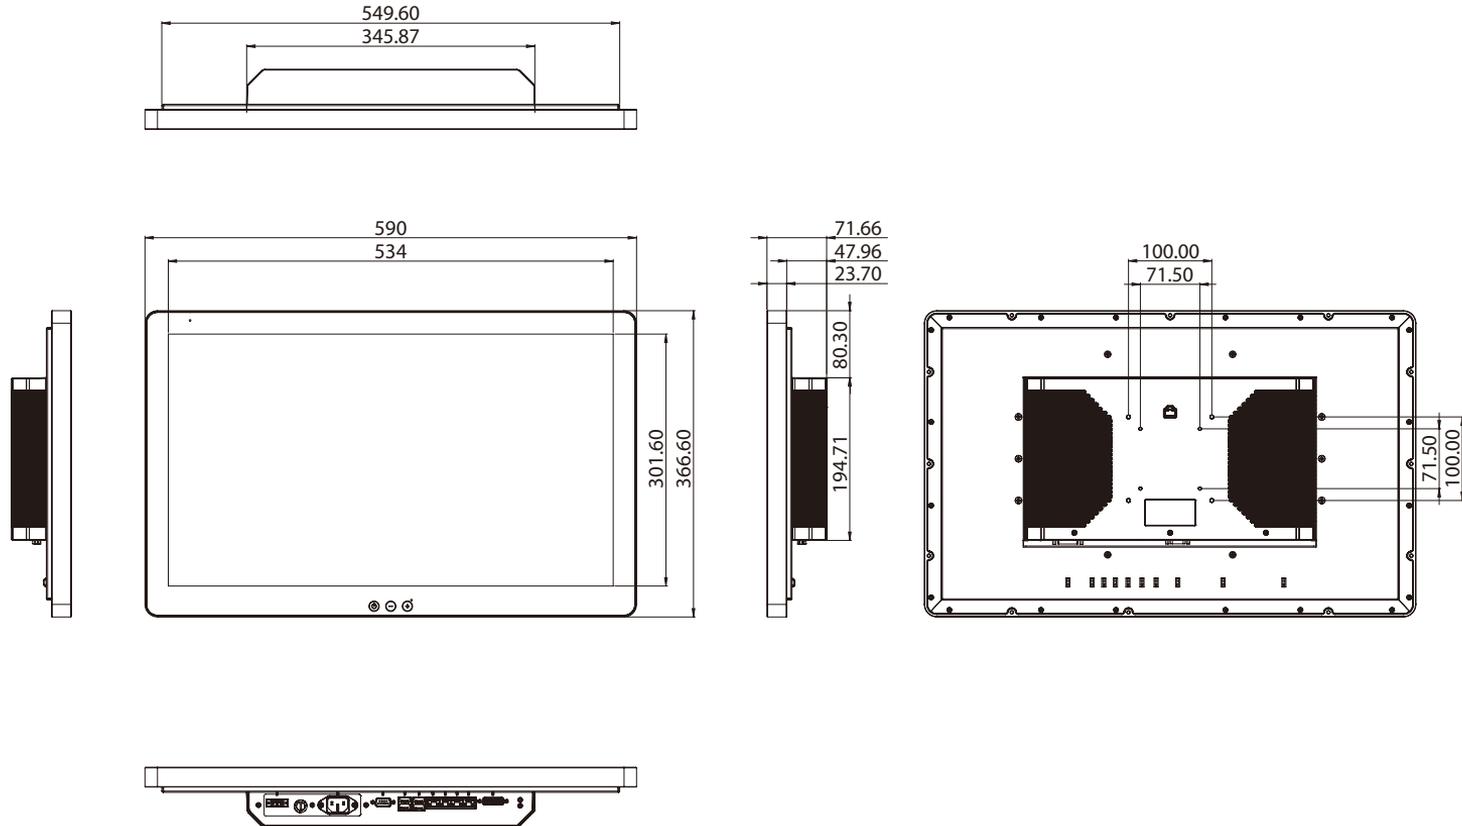

CHAPTER 2: JUMPERS AND CONNECTORS

This chapter describes how to set the jumpers and connectors on the motherboard. Note that information in this chapter applies to (M)PPC-240T-HW-01.

Before You Begin

- Ensure you have a stable, clean working environment. Dust and dirt can get into components and cause a malfunction. Use containers to keep small components separated.
- Adequate lighting and proper tools can prevent you from accidentally damaging the internal components. Most of the procedures that follow require only a few simple tools, including the following:
 - A Philips screwdriver
 - A flat-tipped screwdriver
 - A set of jewelers screwdrivers
 - A grounding strap
 - An anti-static pad
- Using your fingers can disconnect most of the connections. It is recommended that you do not use needle-nosed pliers to disconnect connections as these can damage the soft metal or plastic parts of the connectors.
- Before working on internal components, make sure that the power is off. Ground yourself before touching any internal components, by touching a metal object. Static electricity can damage many of the electronic

components. Humid environments tend to have less static electricity than dry environments. A grounding strap is warranted whenever danger of static electricity exists.

Precautions

Computer components and electronic circuit boards can be damaged by discharges of static electricity. Working on computers that are still connected to a power supply can be extremely dangerous.

Follow the guidelines below to avoid damage to your computer or yourself:


- Always disconnect the unit from the power outlet whenever you are working inside the case.
- If possible, wear a grounded wrist strap when you are working inside the computer case. Alternatively, discharge any static electricity by touching the bare metal chassis of the unit case, or the bare metal body of any other grounded appliance.
- Hold electronic circuit boards by the edges only. Do not touch the components on the board unless it is necessary to do so. Don't flex or stress the circuit board.
- Leave all components inside the static-proof packaging that they shipped with until they are ready for installation. Use correct screws and do not over tighten screws.

Jumper Settings


A jumper is the simplest kind of electric switch. It consists of two metal pins and a cap. When setting the jumpers, ensure that the jumper caps are placed on the correct pins. When the jumper cap is placed on both pins, the jumper is short. If you remove the jumper cap, or place the jumper cap on just one pin, the jumper is open.

Refer to the illustrations below for examples of what the 2-pin and 3-pin jumpers look like when they are short (on) and open (off).

Two-Pin Jumpers: Open (Left) and Short (Right)

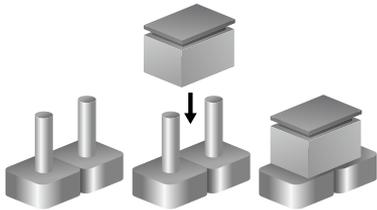


Three-Pin Jumpers: Pins 1 and 2 are Short

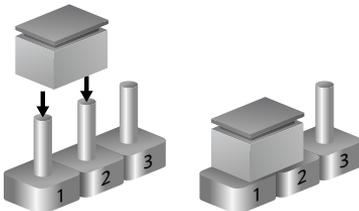


Locations of the Jumpers and Connectors

Top View

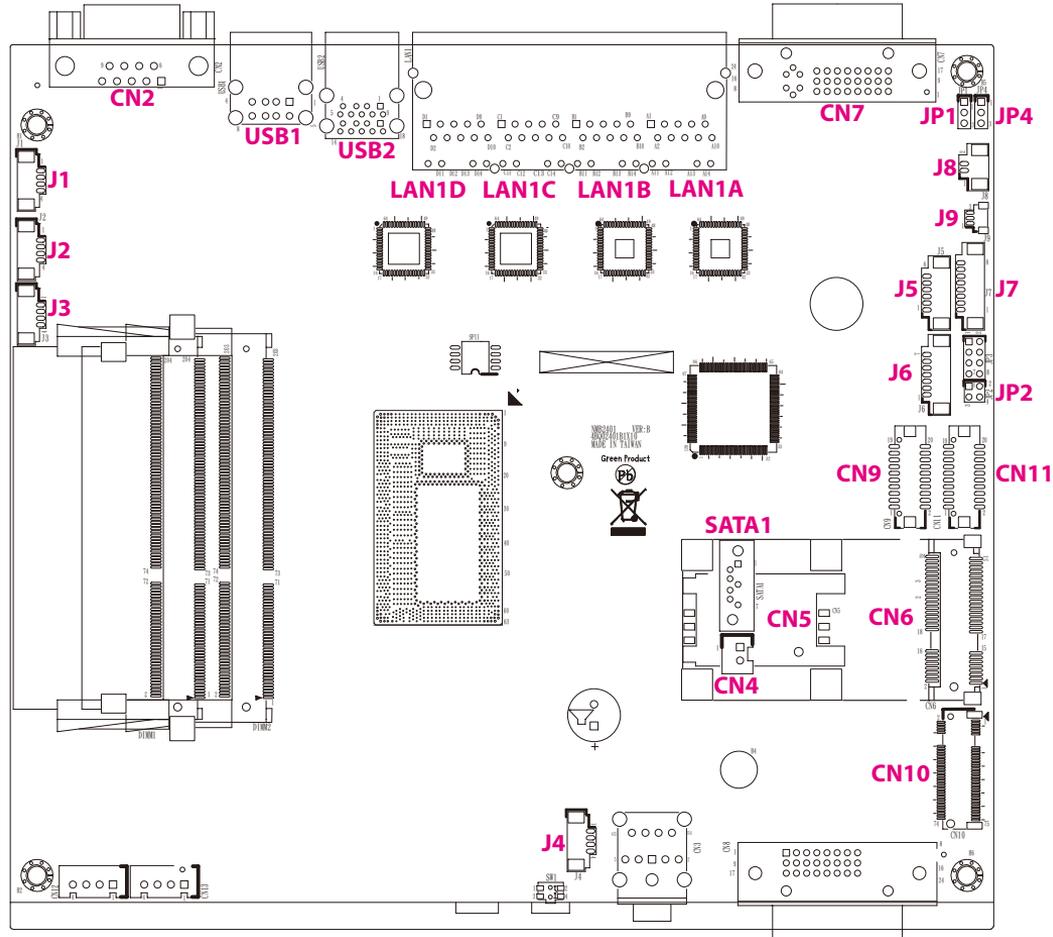

Bottom View

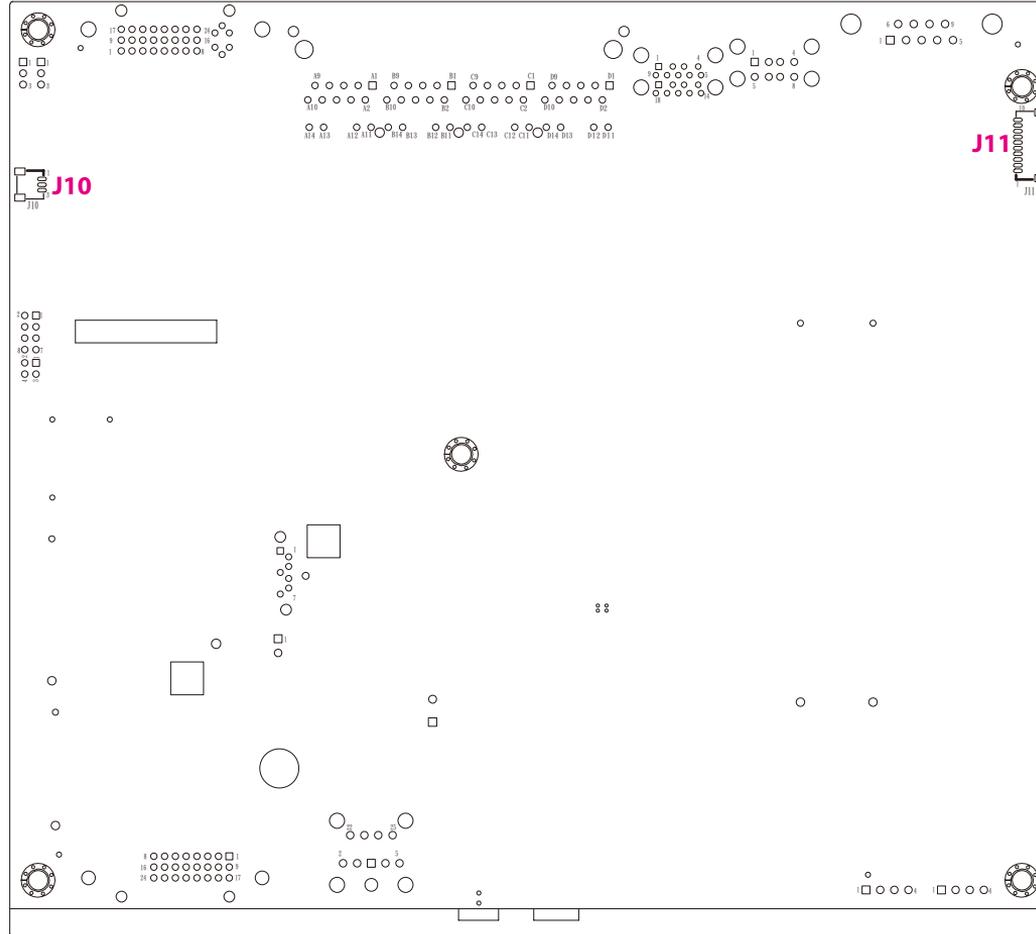

Jumpers

RTC Clear Select

Connector type: 1x3 3-pin header, 2.0mm pitch

Connector location: JP4



Pin	Settings
1-2 On	Normal
2-3 On	RTC Clear

1-2 On: default

PWN Mode Power Select

Connector type: 2x2 4-pin header, 2.0mm pitch

Connector location: JP2



Pin	Settings
1-2 On	VCC3
3-4 On	VCC5

1-2 On: default

AT/ATX Power Select

Connector type: 1x3 3-pin header, 2.0mm pitch

Connector location: JP1



Pin	Settings
1-2 On	AT Mode
2-3 On	ATX Mode


Connector Pin Definitions

External I/O Interfaces

DVI-I Port

Connector type: 24-pin D-Sub, 2.0mm-M-180 (DVI)

Connector location: CN7

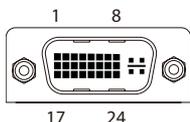


Pin	Definition	Pin	Definition
1	DVI1_DATA2_N	2	DVI1_DATA2_P
3	GND	4	NC
5	NC	6	DVI1_CLK
7	DVI1_DATA	8	VS_VGA
9	DVI1_DATA1_N	10	DVI1_DATA_1_P
11	GND	12	NC
13	NC	14	5V
15	GND	16	DVI1_HPD
17	DVI1_DATA0_N	18	DVI1_DATA0_P
19	GND	20	VGA_CLK
21	VGA_DATA	22	NC
23	DVI1_CLK_P	24	DVI1_CLK_N
C1	RED_VGA	C2	GREEN_VGA
C3	BLUE_VGA	C4	HS_VGA
C5A	VGA_GND	C5B	VGA_GND

LAN1 Port

Connector type: RJ45 port with LEDs

Connector location: LAN1A

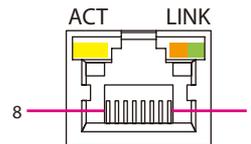

Act	Status
Flashing Yellow	Data activity
Off	No activity


Link	Status
Steady Green	1G network link
Steady Orange	100Mbps network link
Off	10Mbps or no link

Pin	Definition	Pin	Definition
1	LAN1_MDI0P	2	LAN1_MDI0N
3	LAN1_MDI1P	4	LAN1_MDI1N
5	LAN1_TCTG	6	LAN1_TCT
7	LAN1_MDI2P	8	LAN1_MDI2N
9	LAN1_MDI3P	10	LAN1_MDI3N
11	LAN1_LEDACT#	12	3VSB
13	LAN1_LINK1G#	14	LAN1_LINK100#

LAN2 Port

Connector type: RJ45 port with LEDs

Connector location: LAN1B

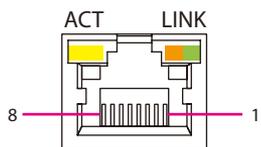

Act	Status
Flashing Yellow	Data activity
Off	No activity


Link	Status
Steady Green	1G network link
Steady Orange	100Mbps network link
Off	10Mbps or no link

Pin	Definition	Pin	Definition
1	LAN2_MDI0P	2	LAN2_MDI0N
3	LAN2_MDI1P	4	LAN2_MDI1N
5	LAN2_TCTG	6	LAN2_TCT
7	LAN2_MDI2P	8	LAN2_MDI2N
9	LAN2_MDI3P	10	LAN2_MDI3N
11	LAN2_LEDACT#	12	3VSB
13	LAN2_LINK1G#	14	LAN2_LINK100#

LAN3 Port

Connector type: RJ45 port with LEDs

Connector location: LAN1C

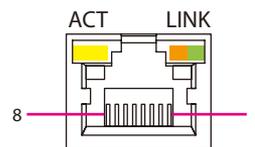


Act	Status
Flashing Yellow	Data activity
Off	No activity

Link	Status
Steady Green	1G network link
Steady Orange	100Mbps network link
Off	10Mbps or no link

Pin	Definition	Pin	Definition
1	LAN3_MDI0P	2	LAN3_MDI0N
3	LAN3_MDI1P	4	LAN3_MDI1N
5	LAN3_TCTG	6	LAN3_TCT
7	LAN3_MDI2P	8	LAN3_MDI2N
9	LAN3_MDI3P	10	LAN3_MDI3N
11	LAN3_LEDACT#	12	3VSB
13	LAN3_LINK1G#	14	LAN3_LINK100#

LAN4 Port

Connector type: RJ45 port with LEDs
 Connector location: LAN1D

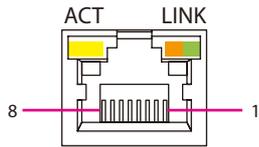


Act	Status
Flashing Yellow	Data activity
Off	No activity

Link	Status
Steady Green	1G network link
Steady Orange	100Mbps network link
Off	10Mbps or no link

Pin	Definition	Pin	Definition
1	LAN4_MDI0P	2	LAN4_MDI0N
3	LAN4_MDI1P	4	LAN4_MDI1N
5	LAN4_TCTG	6	LAN4_TCT
7	LAN4_MDI2P	8	LAN4_MDI2N
9	LAN4_MDI3P	10	LAN4_MDI3N
11	LAN4_LEDACT#	12	3VSB
13	LAN4_LINK1G#	14	LAN4_LINK100#

Dual USB 3.0 Port

Connector type: USB 3.0 ports, Type A
 Connector location: USB2

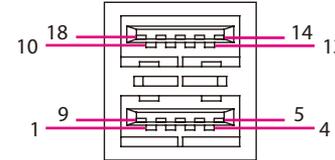


Pin	Definition	Pin	Definition
1	5V	2	USB2N0
3	USB2P0	4	GND
5	USB3RN1	6	USB3RP1
7	GND	8	USB3TN1
9	USB3TP1	10	5V
11	USB2N1	12	USB2P1
13	GND	14	USB3RN2
15	USB3RP2	16	GND
17	USB3TN2	18	USB3TP2
MH1	CHASSIS_GND	MH2	CHASSIS_GND
MH3		MH4	CHASSIS_GND

Dual USB 2.0 Port

Connector type: USB 2.0 ports, Type A

Connector location: USB1

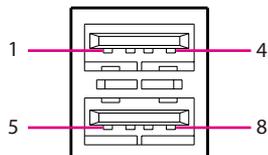


Pin	Definition	Pin	Definition
1	5V	2	USB2N2
3	USB2P2	4	GND
5	5V	6	USB2N3
7	USB2P3	8	GND
MH1	CHASSIS_GND	MH2	CHASSIS_GND
MH3	CHASSIS_GND	MH4	CHASSIS_GND

COM Port

Connector type: DB-9 port, 9-pin D-Sub

Connector location: CN2

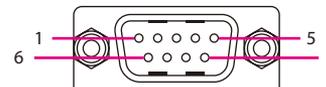

Pin	Definition	Pin	Definition
1	SP1_DCD	2	SP1_RXD
3	SP1_TXD	4	SP1_DTR
5	ISO_GND	6	SP1_DSR
7	SP1_RTS	8	SP1_CTS
9	SP1_RI		
MH1	CHASSIS_GND	MH2	CHASSIS_GND

Internal Connectors

EC Download Pin Header

Connector type: 1x3 3-pin header, 1.0mm pitch

Connector location: J10



Pin	Definition	Pin	Definition
1	EC_SMB_CLK	2	EC_SMB_DATA
3	GND	MH1	GND
MH2	GND		

Debug Port

Connector type: 1x10 10-pin header, 1.0mm pitch

Connector location: J11




Pin	Definition	Pin	Definition
1	VCC3	2	VCC3
3	LPC_LAD0	4	LPC_LAD1
5	LPC_LAD2	6	LPC_LAD3
7	LPC_FRAME#	8	LPC_CLK1_DEBUG
9	PLTRST_3P3#	10	GND
MH1	GND	MH2	GND

LVDS Channel A Connector

Connector type: 2x10 20-pin header, 1.25mm pitch

Connector location: CN9

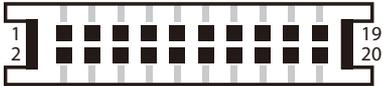


Pin	Definition	Pin	Definition
1	VCC5_VDD	2	VCC5_VDD
3	VCC3_VDD	4	LVDSA_DAT1N
5	LVDSA_DAT0N	6	LVDSA_DAT1P
7	LVDSA_DAT0P	8	VCC3_VDD
9	GND	10	LVDSA_CLK1N
11	LVDSA_DAT2N	12	LVDSA_CLK1P
13	LVDSA_DAT2P	14	GND
15	GND	16	12V
17	LVDSA_DAT3N	18	12V
19	LVDSA_DAT3P	20	GND
MH1	GND	MH2	GND

LVDS Channel B Connector

Connector type: 2x10 20-pin header, 1.25mm pitch

Connector location: CN11

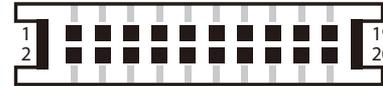


Pin	Definition	Pin	Definition
1	VCC5_VDD	2	VCC5_VDD
3	VCC3_VDD	4	LVDSB_DAT5N
5	LVDSB_DAT4N	6	LVDS_DAT5P
7	LVDSB_DAT4P	8	VCC3_VDD
9	GND	10	LVDSB_CLK2N
11	LVDSB_DAT6N	12	LVDSB_CLK2P
13	LVDSB_DAT6P	14	GND
15	GND	16	12V
17	LVDSB_DAT7N	18	12V
19	LVDSB_DAT7P	20	GND
MH1	GND	MH2	GND

PWR/HDD LED Connector

Connector type: 1x4 4-pin header, 1.25mm pitch

Connector location: J1

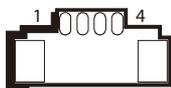


Pin	Definition	Pin	Definition
1	PWRLED#	2	PWRLED
3	HDD_LED#	4	HDD_LED
MH1	GND	MH2	GND

USB Connector

Connector type: 1x4 4-pin header, 1.25mm pitch


Connector location: J2

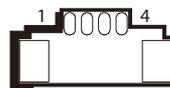

Pin	Definition	Pin	Definition
1	5VSB	2	USB2N6
3	USB2P6	4	GND
MH1	GND	MH2	GND

USB Connector


Connector type: 1x4 4-pin header, 1.25mm pitch
Connector location: J3

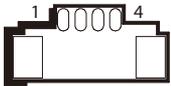

Pin	Definition	Pin	Definition
1	5VSB	2	USB2N7
3	USB2P7	4	GND
MH1	GND	MH2	GND

Light Sensor Connector

Connector type: 1x6 6-pin header, 1.25mm pitch
Connector location: J5

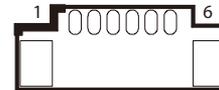


Pin	Definition	Pin	Definition
1	NC	2	3VSB
3	GND	4	EC_I2C_DATA
5	EC_I2C_CLK	6	INT
MH1	GND	MH2	GND

Touch Control Board Connector

Connector type: 1x8 8-pin header, 1.25mm pitch

Connector location: J7

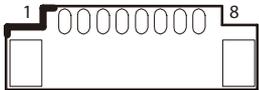

Pin	Definition	Pin	Definition
1	VCC3	2	EC_I2C_DATA
3	EC_I2C_CLK	4	EC_LED_PWM
5	INT	6	GND
7	ATXBT#	8	RSTBTN#
MH1	GND	MH2	GND

FAN Connector

Connector type: 1x3 3-pin header, 1.0mm pitch

Connector location: J9




Pin	Definition	Pin	Definition
1	GND	2	FAN_12V
3	FAN_12V_FB		

SATA Connector

Connector type: Standard Serial ATA 7P (1.27mm, SATA-M-180)

Connector location: SATA1

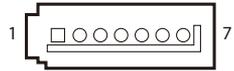

Pin	Definition	Pin	Definition
1	GND	2	SATA_TXP2
3	SATA_TXN2	4	GND
5	SATA_RXN2	6	SATA_RXP2
7	GND		

SATA Power Connector

Connector type: 1x2 2-pin header, JST 2.5mm pitch

Connector location: CN4




Pin	Definition
1	5V
2	GND

LVDS Inverter Connector

Connector type: 1x7 7-pin header, 1.25mm pitch

Connector location: J6

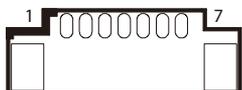


Pin	Definition	Pin	Definition
1	5V	2	12V
3	12V	4	BKLTCTRL
5	INV_GND	6	INV_GND
7	BKLTEN	MH1	INV_GND
MH2	INV_GND		

USB Connector

Connector type: 1x4 4-pin header, 1.25mm pitch

Connector location: J4

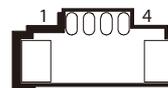

Pin	Definition	Pin	Definition
1	5V	2	USB2N4
3	USB2P4	4	GND
MH1	GND	MH2	GND

Battery Connector

Connector type: 1x2 2-pin header, JST 1.25mm pitch

Connector location: J8




Pin	Definition	Pin	Definition
1	GND	2	RTC
MH1	GND	MH2	GND

SIM Card Connector

Connector type: SIM card slot


Connector location: CN5

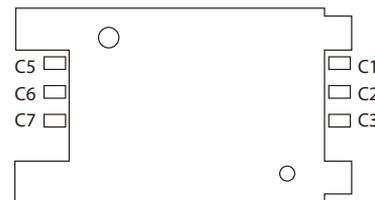

Pin	Definition	Pin	Definition
C1	UIM_PWR	C2	UIM_RESET
C3	UIM_CLK	C5	GND
C6	UIM_VPP	C7	UIM_DATA

Mini-PCIe Slot

Connector location: CN6

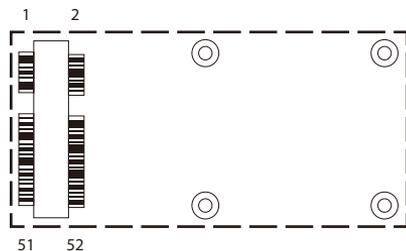


Pin	Definition	Pin	Definition
1	PCIE_WAKE#	2	3VSB
3	NC	4	GND
5	NC	6	1.5V
7	CLKREQ#	8	UIM_PWR
9	GND	10	UIM_DATA
11	PCIE_CLK#	12	UIM_CLK
13	PCIE_CLK	14	UIM_RESET
15	GND	16	UIM_VPP
17	NC	18	GND
19	NC	20	DISABLE#
21	GND	22	PCIE_RESET#
23	PCIE_RXP	24	3VSB
25	PCIE_RXN	26	GND

Pin	Definition	Pin	Definition
27	GND	28	1.5V
29	GND	30	SMB_CLK
31	PCIE_TXN	32	SMB_DATA
33	PCIE_TXP	34	GND
35	GND	36	USB2N5
37	GND	38	USB2P5
39	3VSB	40	GND
41	3VSB	42	NC
43	GND	44	NC
45	NC	46	NC
47	NC	48	1.5V
49	NC	50	GND
51	PCIE_mSATA_SEL	52	3VSB

NGFF M.2 SATA Connector


Connector location: CN10

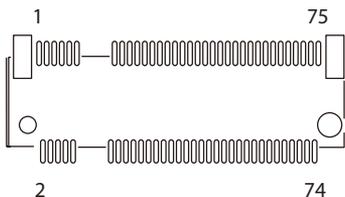

Pin	Definition	Pin	Definition
1	PCIE_M2_CONFIG3	2	VCC3
3	NC	4	VCC3
5	NC	6	NC
7	NC	8	NC
9	NC	10	PCIE_M2_DAS_DSS#
11	NC	20	NC
21	PCIE_M2_CONFIG0	22	NC
23	NC	24	NC
25	NC	26	NC
27	NC	28	NC
29	NC	30	NC
31	NC	32	NC
33	NC	34	NC
35	NC	36	NC
37	NC	38	PCIE_M2_DEVSLP
39	NC	40	NC
41	SATA_RXP0	42	NC

Pin	Definition	Pin	Definition
43	SATA_RXN0	44	NC
45	NC	46	NC
47	SATA_TXN0	48	NC
49	SATA_TXP0	50	NC
51	NC	52	NC
53	NC	54	NC
55	NC	56	PCIE_M2_Z01
57	NC	58	PCIE_M2_Z02
59	NC	60	NC
61	NC	62	NC
63	NC	64	NC
65	NC	66	NC
67	NC	68	NC
69	PCIE_M2_CONFIG1	70	VCC3
71	NC	72	VCC3
73	NC	74	VCC3
75	PCIE_M2_CONFIG2	MH1	GND
MH2	GND	MH3	NC

Block Diagram

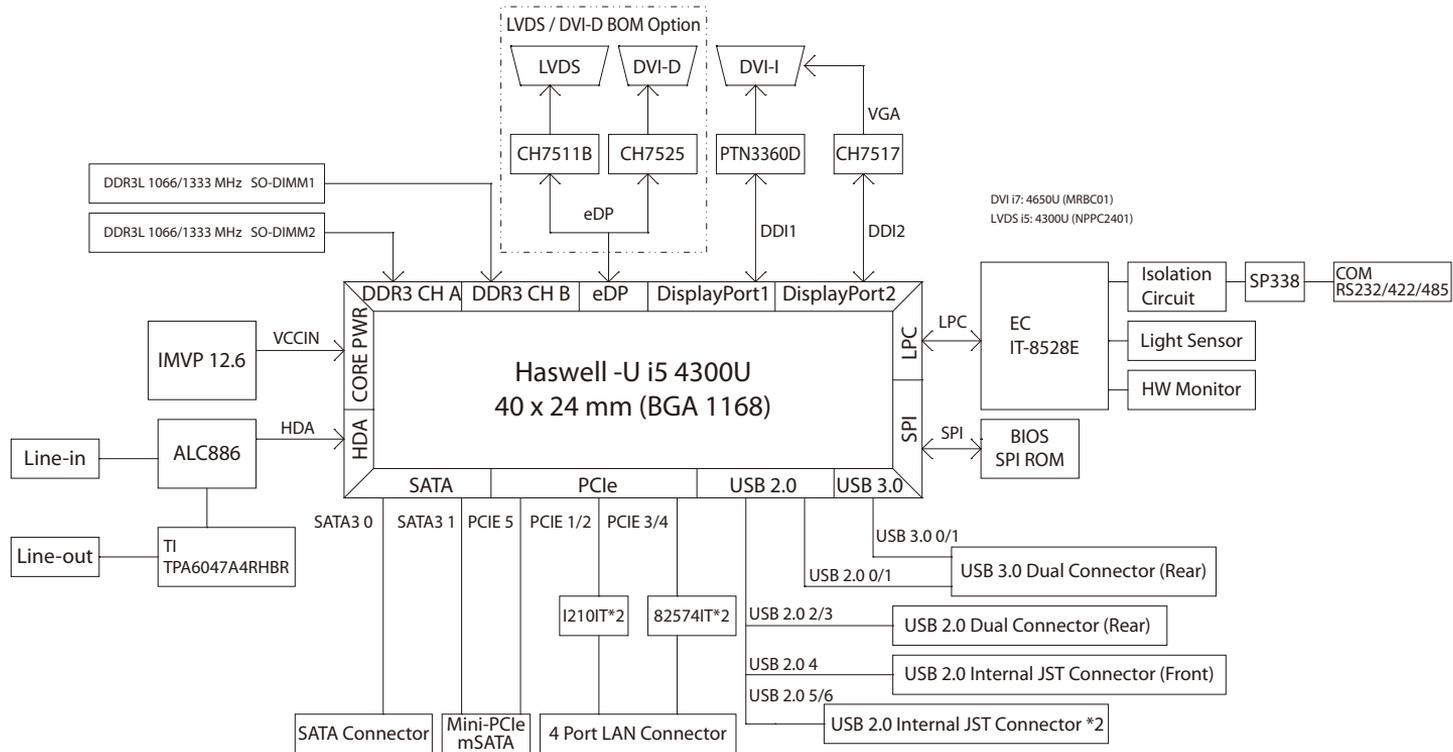


CHAPTER 3: SYSTEM SETUP

Installing a SATA M.2 Module





Prior to removing the chassis cover, make sure the unit's power is off and disconnected from the power sources to prevent electric shock or system damage.


1. Remove the screws around the chassis cover.

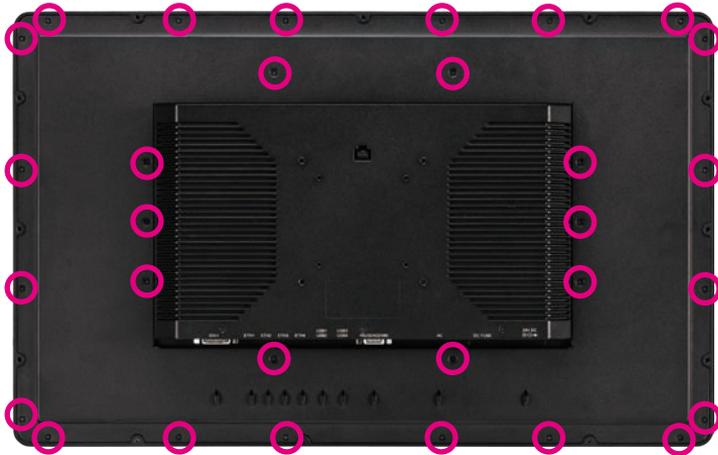


2. Lift up the back cover.

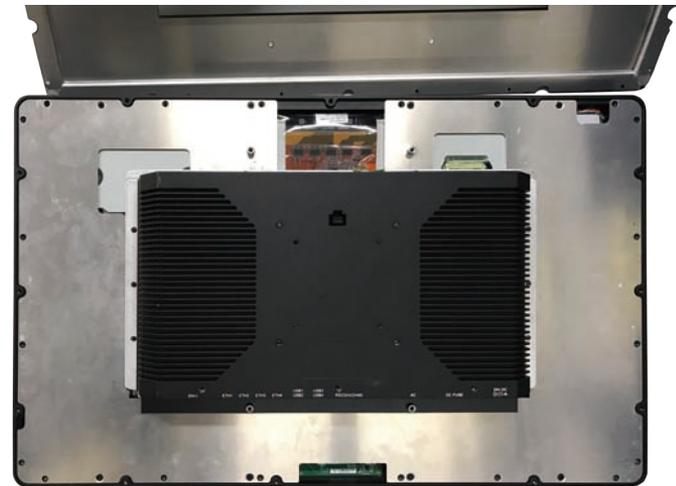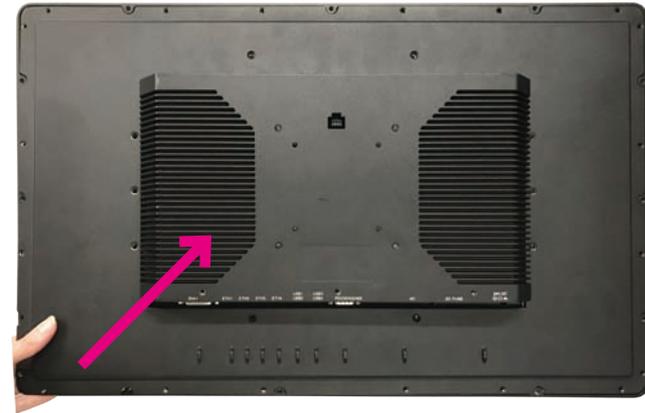

3. Remove the back panel.

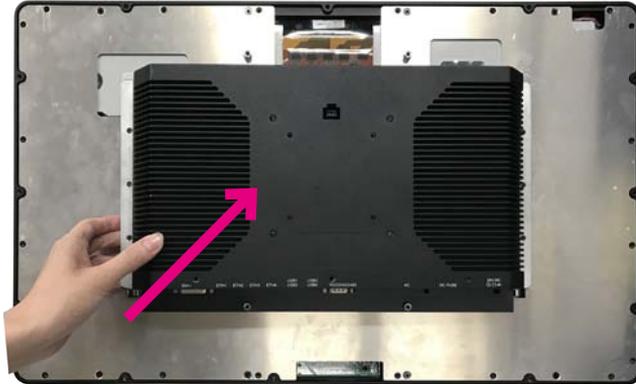


4. Install the SATA M.2 module into the M.2 slot.

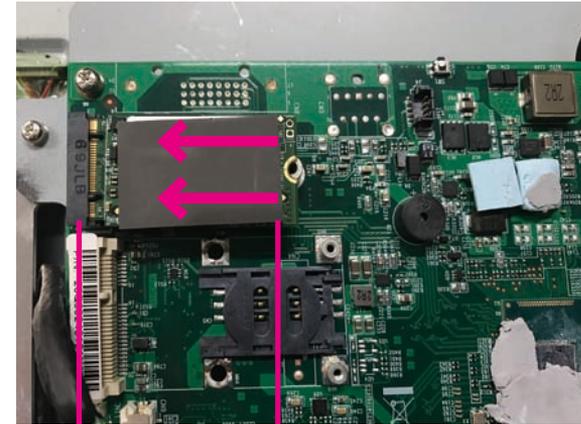

M.2 Slot

SATA M.2
Module

5. Secure the module with mounting screws.

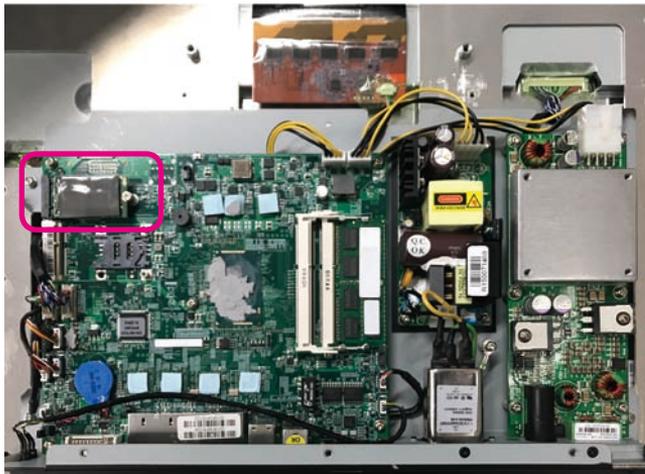


Installing a SO-DIMM Memory Module


1. Remove the screws around the chassis cover.



2. Lift up the back cover.


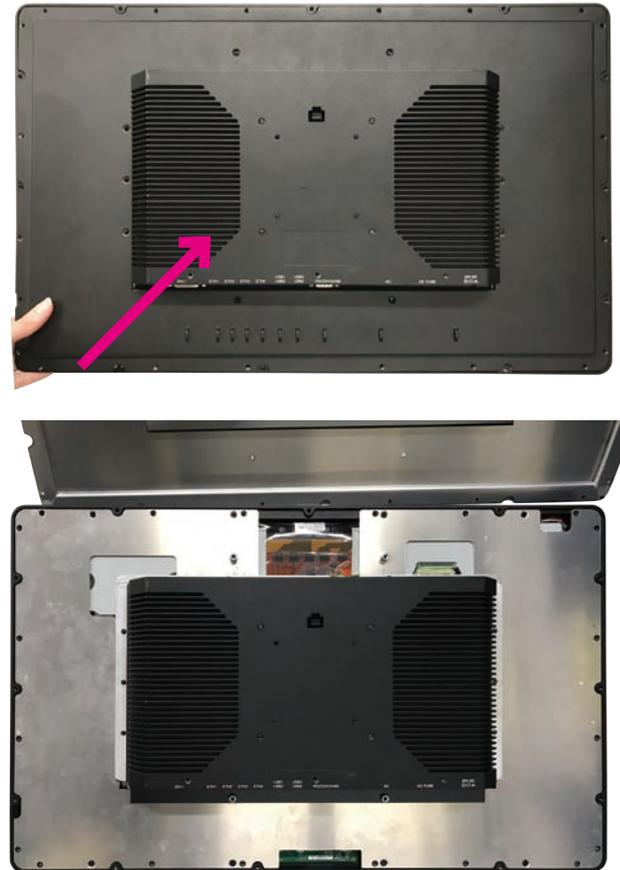


3. Remove the back panel.

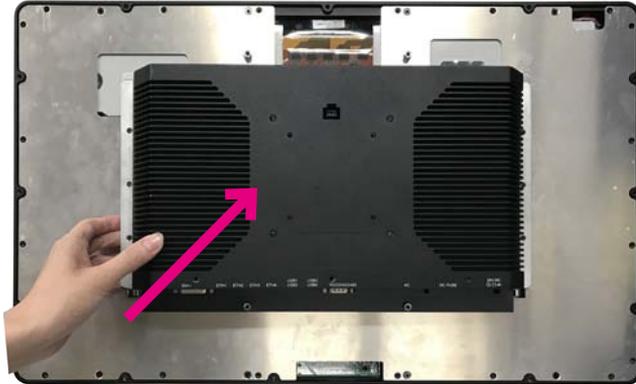

4. Locate the SO-DIMM slot on the mainboard and install a SO-DIMM module into the slot.



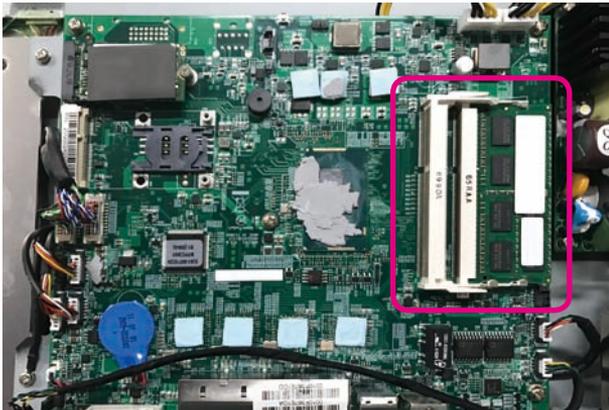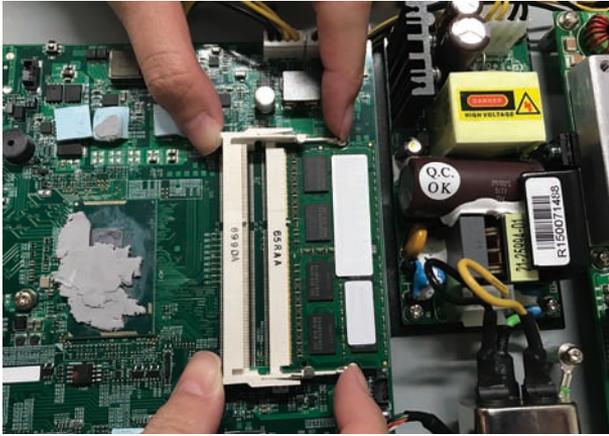


Installing a SIM Card


1. Remove the screws around the chassis cover.




2. Lift up the back cover.

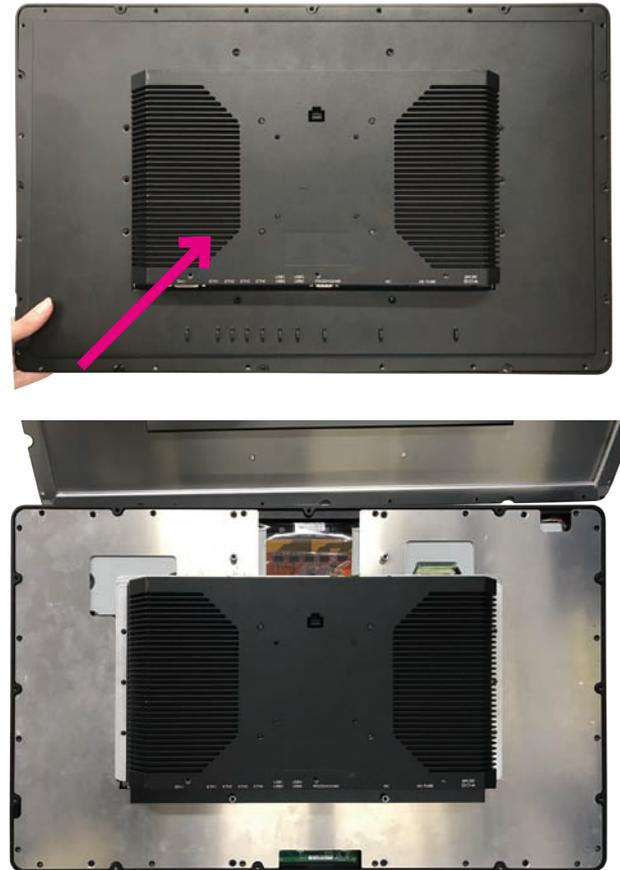

3. Remove the back panel.

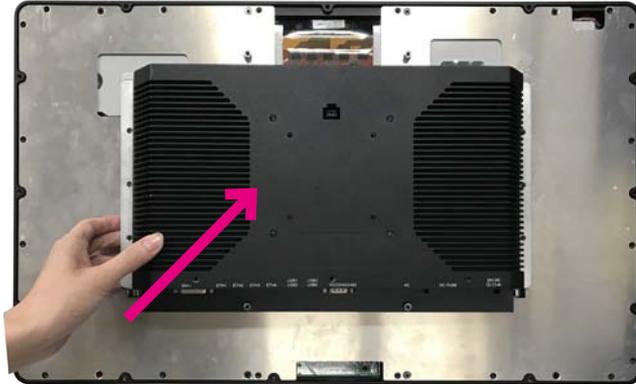


4. Open the cover of the SIM card slot on the mainboard.

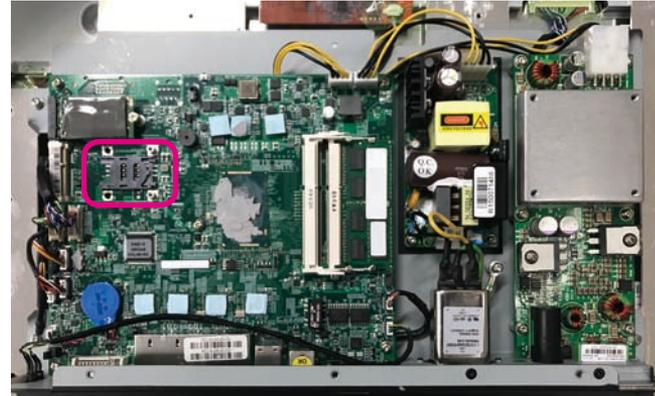


5. Install the SIM card.



6. Close the cover of the SIM card slot.

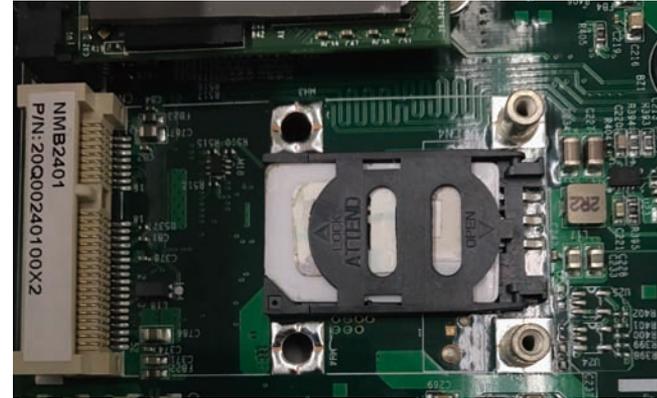


Installing a Mini PCIe Module


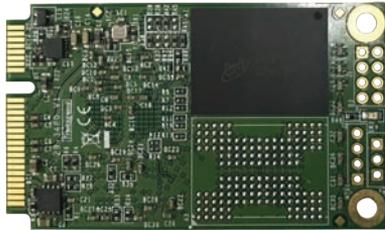


Mini PCIe Module


1. Remove the screws around the chassis cover.

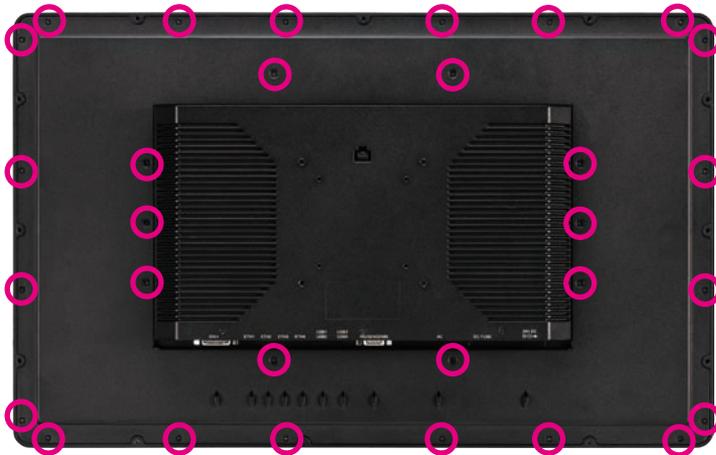


2. Lift up the back cover.

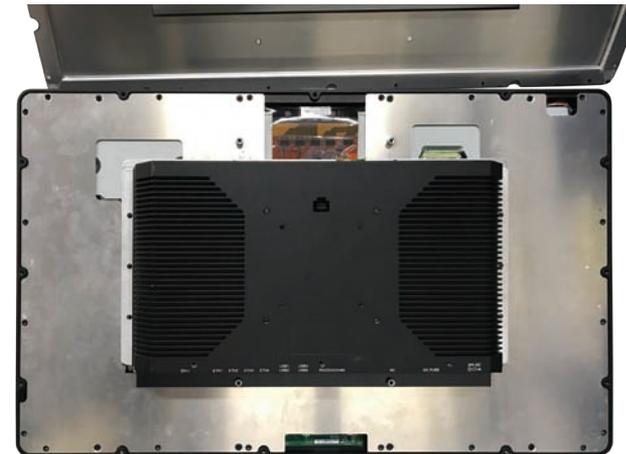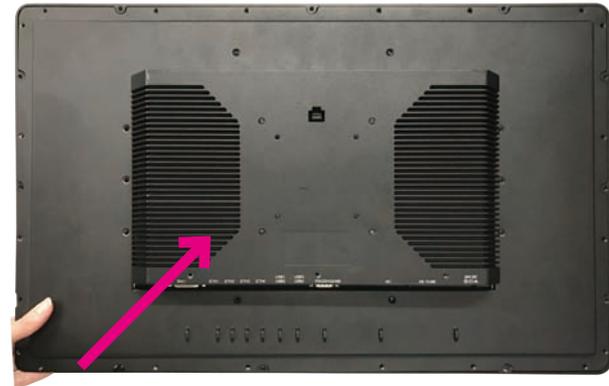

3. Remove the back panel.

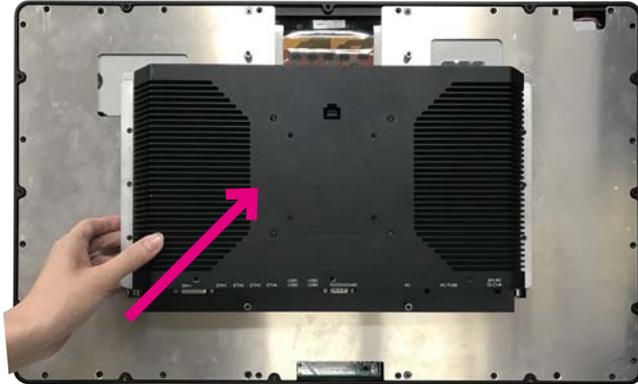


4. Install the Mini PCIe module into the Mini PCIe slot.

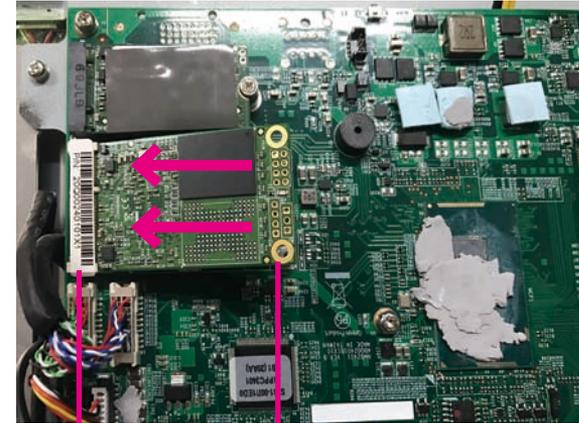

Mini PCIe Slot

Mini PCIe Module

5. Secure the module with mounting screws.

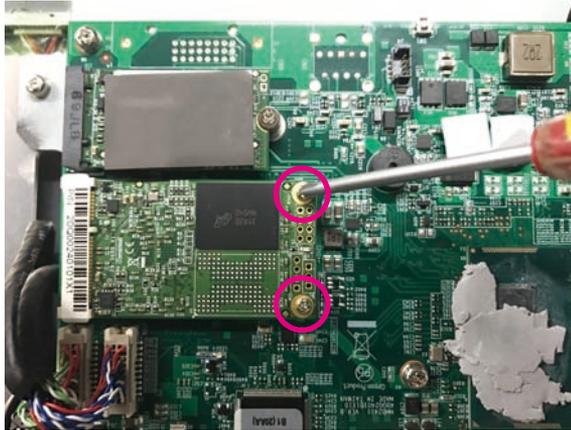

If you are installing a half-size Mini PCIe module, before proceeding with the installation, please assemble the module bracket first by following the instructions below:



Half-size Mini PCIe Module




Antennas





RF Cables

1. Align the mounting holes on the Mini PCIe module to the mounting holes on the module bracket.

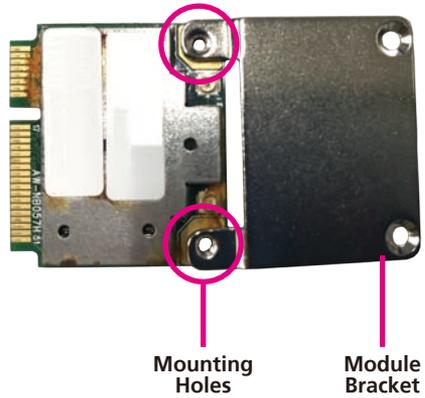


2. Tighten screws onto the mounting holes to secure the bracket.

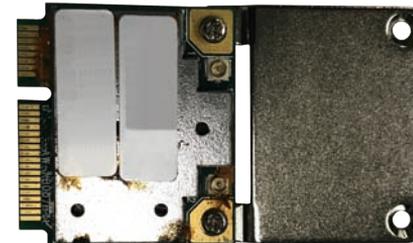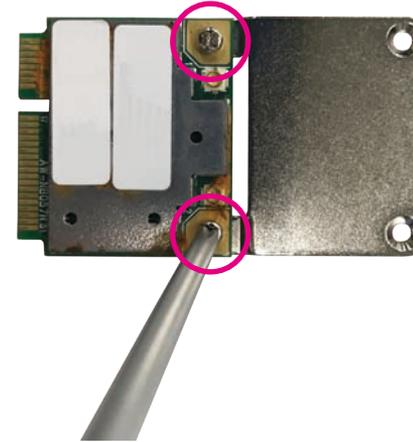

Installing the Half-Size Mini PCIe Module


1. Install the half-size Mini PCIe module into the Mini PCIe slot.

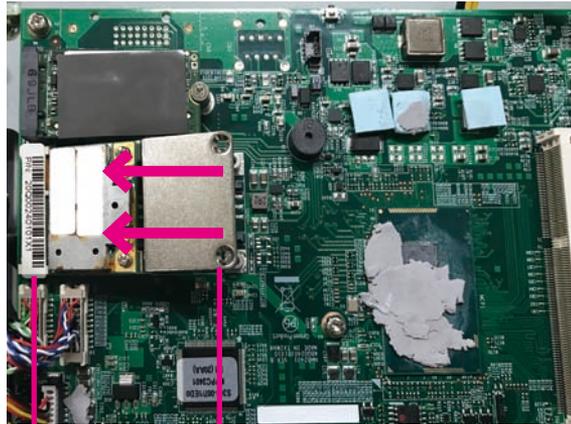

Mini PCIe Slot

Mini PCIe Module

2. Secure the module with mounting screws.

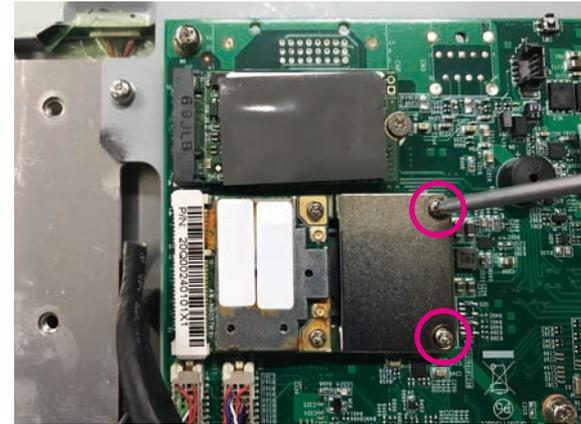


Installing the Fan


1. Fix the copper pillars on the mounting holes at the back of the system.




2. Install the fan.

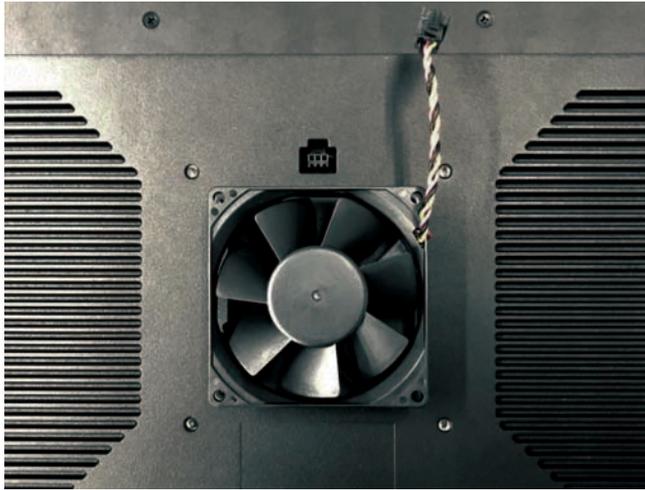

3. Secure the fan with flat head screws.

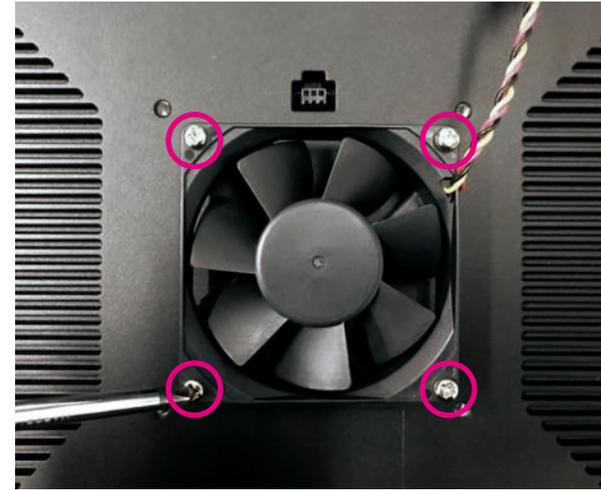


4. Connect the fan cable to the fan connector.

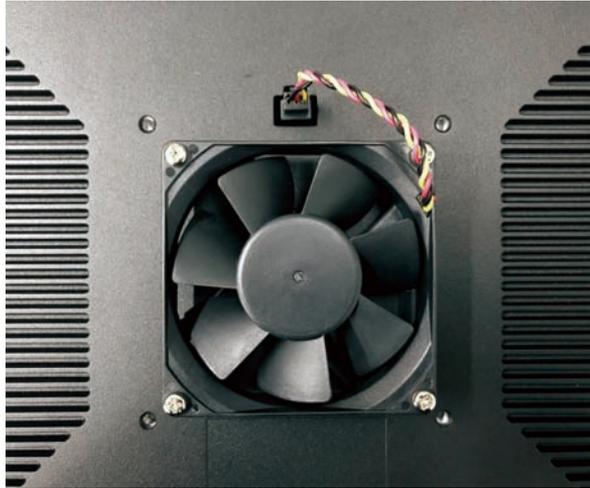

Flush Mounting




The flush mount bracket is used to mount the system on a desk or enclosure.

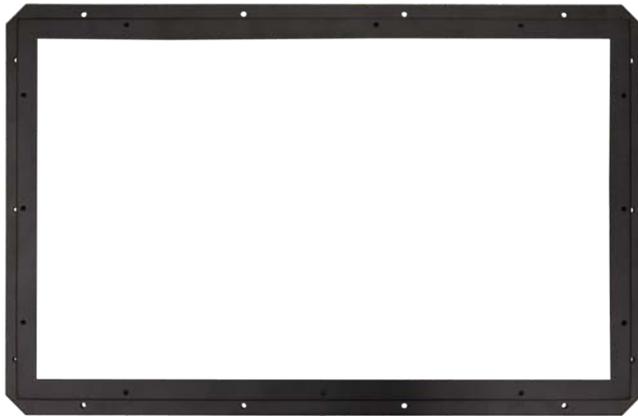


Flush Mount Bracket

1. Align the mounting holes on the bracket to the flush mounting holes on the back of the system, then secure the bracket with screws.

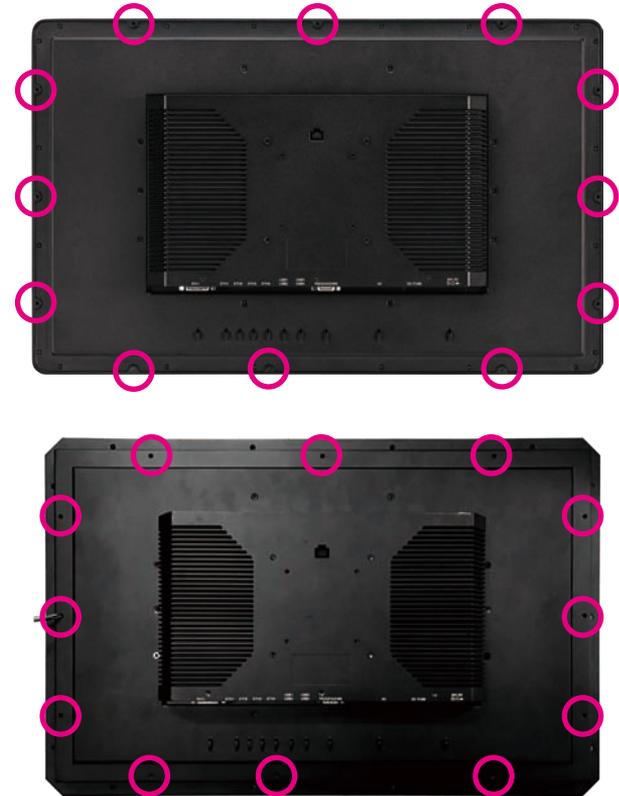

VESA Mounting

1. The VESA mounting measurements are shown as below.

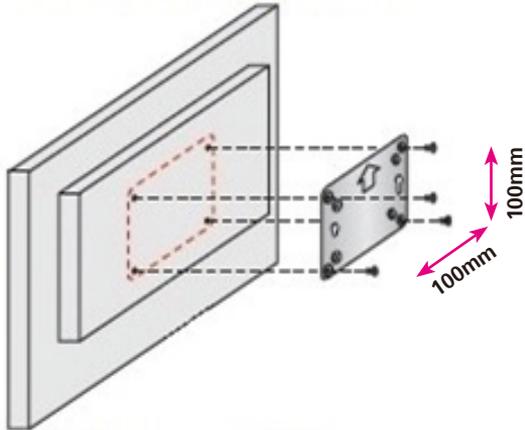

(M)PPC-240T-HW-01: 100mm x 100mm

CHAPTER 4: BIOS SETUP

This chapter describes how to use the BIOS setup program for (M)PPC-240T-HW-01. The BIOS screens provided in this chapter are for reference only and may change if the BIOS is updated in the future.

To check for the latest updates and revisions, visit the NEXCOM website at www.nexcom.com.tw.

About BIOS Setup

The BIOS (Basic Input and Output System) Setup program is a menu driven utility that enables you to make changes to the system configuration and tailor your system to suit your individual work needs. It is a ROM-based configuration utility that displays the system's configuration status and provides you with a tool to set system parameters.

These parameters are stored in non-volatile battery-backed-up CMOS RAM that saves this information even when the power is turned off. When the system is turned back on, the system is configured with the values found in CMOS.

With easy-to-use pull down menus, you can configure such items as:

- Hard drives, diskette drives, and peripherals
- Video display type and display options
- Password protection from unauthorized use
- Power management features

The settings made in the setup program affect how the computer performs. It is important, therefore, first to try to understand all the setup options, and second, to make settings appropriate for the way you use the computer.

When to Configure the BIOS

This program should be executed under the following conditions:

- When changing the system configuration
- When a configuration error is detected by the system and you are prompted to make changes to the setup program
- When resetting the system clock
- When redefining the communication ports to prevent any conflicts
- When making changes to the Power Management configuration
- When changing the password or making other changes to the security setup

Normally, CMOS setup is needed when the system hardware is not consistent with the information contained in the CMOS RAM, whenever the CMOS RAM has lost power, or the system features need to be changed.

Default Configuration

Most of the configuration settings are either predefined according to the Load Optimal Defaults settings which are stored in the BIOS or are automatically detected and configured without requiring any actions. There are a few settings that you may need to change depending on your system configuration.

Entering Setup

When the system is powered on, the BIOS will enter the Power-On Self Test (POST) routines. These routines perform various diagnostic checks; if an error is encountered, the error will be reported in one of two different ways:

- If the error occurs before the display device is initialized, a series of beeps will be transmitted.
- If the error occurs after the display device is initialized, the screen will display the error message.

Powering on the computer and immediately pressing allows you to enter Setup.

Press the  key to enter Setup:

Legends

Key	Function
	Moves the highlight left or right to select a menu.
	Moves the highlight up or down between sub-menu or fields.
	Exits the BIOS Setup Utility.
	Scrolls forward through the values or options of the highlighted field.
	Scrolls backward through the values or options of the highlighted field.
	Selects a field.
	Displays General Help.
	Load previous values.
	Load optimized default values.
	Saves and exits the Setup program.
	Press <Enter> to enter the highlighted sub-menu

Scroll Bar

When a scroll bar appears to the right of the setup screen, it indicates that there are more available fields not shown on the screen. Use the up and down arrow keys to scroll through all the available fields.

Submenu


When “▶” appears on the left of a particular field, it indicates that a submenu which contains additional options are available for that field. To display the submenu, move the highlight to that field and press  .

BIOS Setup Utility

Once you enter the AMI BIOS Setup Utility, the Main Menu will appear on the screen. The main menu allows you to select from several setup functions and one exit. Use arrow keys to select among the items and press  to accept or enter the submenu.


Main

The Main menu is the first screen that you will see when you enter the BIOS Setup Utility.

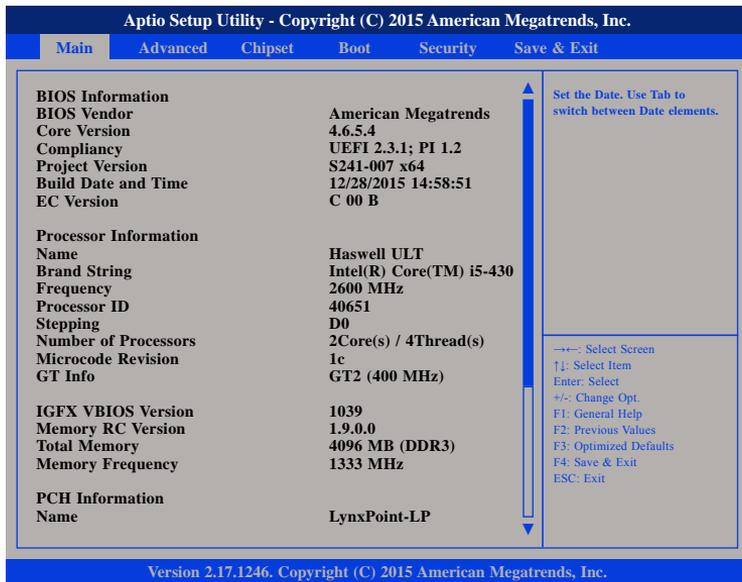

Aptio Setup Utility - Copyright (C) 2015 American Megatrends, Inc.					
Main	Advanced	Chipset	Boot	Security	Save & Exit
BIOS Information					
BIOS Vendor	American Megatrends				
Core Version	4.6.5.4				
Compliance	UEFI 2.3.1; PI 1.2				
Project Version	S241-007 x64				
Build Date and Time	12/28/2015 14:58:51				
EC Version	C 00 B				
Processor Information					
Name	Haswell ULT				
Brand String	Intel(R) Core(TM) i5-430				
Frequency	2600 MHz				
Processor ID	40651				
Stepping	D0				
Number of Processors	2Core(s) / 4Thread(s)				
Microcode Revision	1c				
GT Info	GT2 (400 MHz)				
IGFX VBIOS Version					
Memory RC Version	1039				
Total Memory	1.9.0.0				
Memory Frequency	4096 MB (DDR3)				
	1333 MHz				
PCH Information					
Name	LynxPoint-LP				

Version 2.17.1246. Copyright (C) 2015 American Megatrends, Inc.

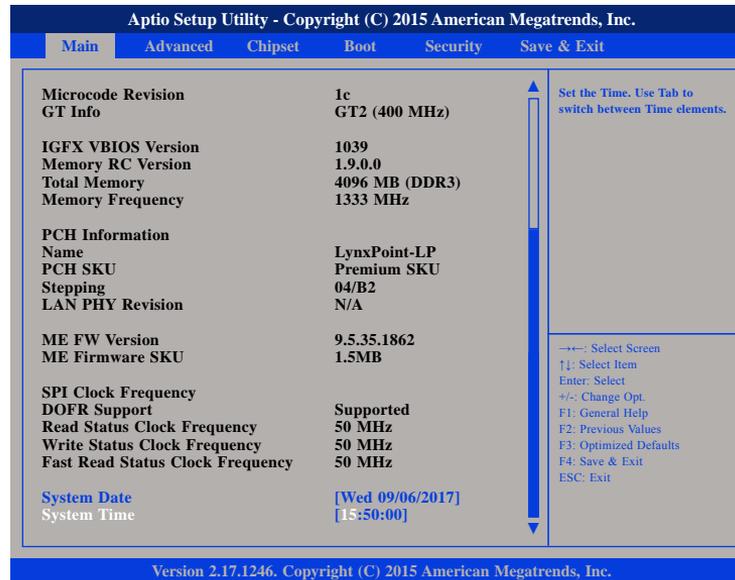

Aptio Setup Utility - Copyright (C) 2015 American Megatrends, Inc.					
Main	Advanced	Chipset	Boot	Security	Save & Exit
Microcode Revision					
GT Info	1c				
	GT2 (400 MHz)				
IGFX VBIOS Version					
Memory RC Version	1039				
Total Memory	1.9.0.0				
Memory Frequency	4096 MB (DDR3)				
	1333 MHz				
PCH Information					
Name	LynxPoint-LP				
PCH SKU	Premium SKU				
Stepping	04/B2				
LAN PHY Revision	N/A				
ME FW Version					
ME Firmware SKU	9.35.1862				
	1.5MB				
SPI Clock Frequency					
DOFR Support	Supported				
Read Status Clock Frequency	50 MHz				
Write Status Clock Frequency	50 MHz				
Fast Read Status Clock Frequency	50 MHz				
System Date					
System Time	[Wed 09/06/2017]				
	[15:50:00]				

Version 2.17.1246. Copyright (C) 2015 American Megatrends, Inc.

System Date

The date format is <day>, <month>, <date>, <year>. Day displays a day, from Monday to Sunday. Month displays the month, from January to December. Date displays the date, from 1 to 31. Year displays the year, from 1999 to 2099.

System Time

The time format is <hour>, <minute>, <second>. The time is based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00. Hour displays hours from 00 to 23. Minute displays minutes from 00 to 59. Second displays seconds from 00 to 59.

Advanced

The Advanced menu allows you to configure your system for basic operation. Some entries are defaults required by the system board, while others, if enabled, will improve the performance of your system or let you set some features according to your preference.




Setting incorrect field values may cause the system to malfunction.



CPU Configuration

This section is used to configure the CPU.

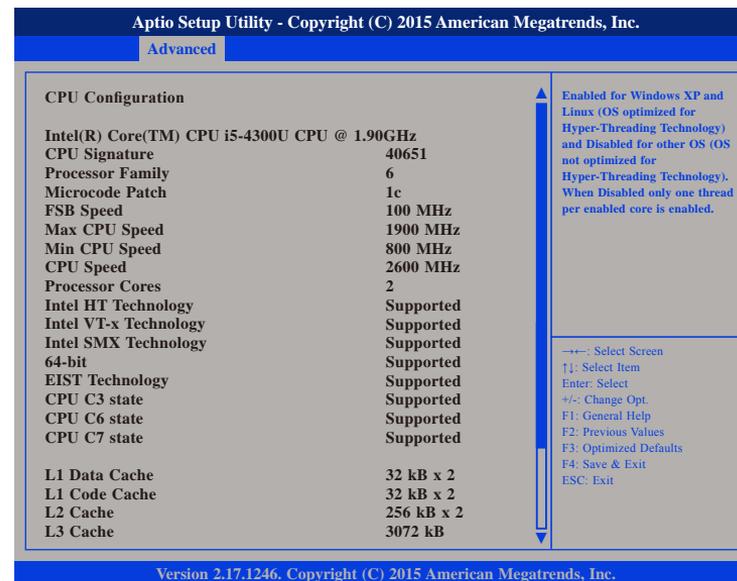

Hyper Threading


Enables or disables hyper-threading technology.

Active Processor Cores

Select the number of cores to enable in each processor package.

Limit CPUID Maximum

The CPUID instruction of some newer CPUs will return a value greater than 3. The default is Disabled because this problem does not exist in the Windows series operating systems. If you are using an operating system other than Windows, this problem may occur. To avoid this problem, enable this field to limit the return value to 3 or lesser than 3.

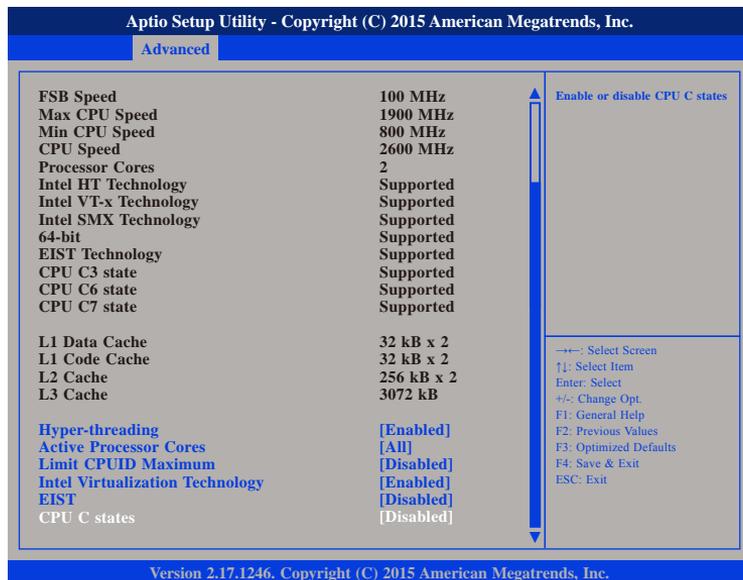

Intel® Virtualization Technology

Enables or disables Intel® Virtualization technology.

EIST

Enables or disables Intel® SpeedStep.

CPU C States

Enable CPU C States Support for power saving. It is recommended to keep C3, C6 and C7 all enabled for better power saving.

SATA Configuration

This section is used to configure the SATA drives.



SATA Controller(s)

Enables or disables the SATA controller.

AMT Configuration

This section is used to configure AMT settings.




Intel® AMT

Enables or disables Intel® Active Management Technology.

USB Configuration

This section is used to configure the USB.

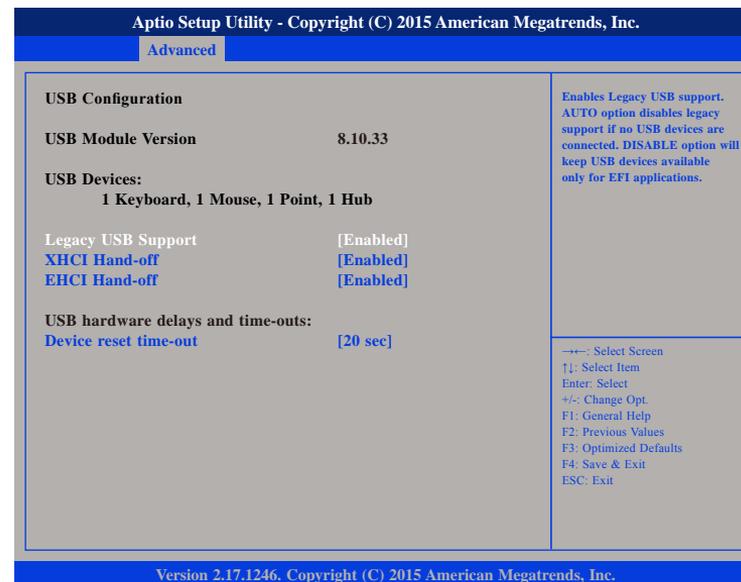

Legacy USB Support

Enabled Enables Legacy USB.

Auto Disables support for Legacy when no USB devices are connected.

Disabled Keeps USB devices available only for EFI applications.

XHCI Hand-off and EHCI Hand-off

This is a workaround for OSs that does not support XHCI hand-off and EHCI hand-off. The XHCI and EHCI ownership change should be claimed by the XHCI and EHCI driver respectively.

Device Reset Time-out

Selects the USB mass storage device's start unit command timeout.

IT8528 Super IO Configuration

This section is used to configure the serial port of the super IO.



Serial Port 0 Configuration

Enters the sub-menu of serial port 0 configuration.

Serial Port 0 Configuration



Serial Port

Enables or disables the serial port.

Onboard Serial Port Mode

Configures the serial port mode to RS232, RS422 or RS485.

Terminal 120 Ohm

Enables or disables serial port terminal resistance.

IT8528 HW Monitor

This section is used to monitor hardware status such as temperature, fan speed and voltages.



The screenshot shows the 'Advanced' tab of the Aptio Setup Utility. The 'PC Health Status' section displays the following information:

PC Health Status		Smart Fan Mode Select
Smart Fan Mode	[Automatic Mode]	
FAN Speed 30% under Temp:	[35 C/ 95 F]	
FAN Speed 100% above Temp:	[75 C/167 F]	
System temperature	: +46 C	
CPU Core Temp. (DTS)	: +22 C	
FAN Speed	: N/A	
Vcore	: +1.773 V	
Vcc(+12V)	: +11.970 V	
Vcc(+5V)	: +5.182 V	
Vcc(+3V)	: +3.291 V	

Navigation instructions on the right side of the screen:

- ←: Select Screen
- ↑↓: Select Item
- Enter: Select
- +/-: Change Opt.
- F1: General Help
- F2: Previous Values
- F3: Optimized Defaults
- F4: Save & Exit
- ESC: Exit

Version 2.17.1246. Copyright (C) 2015 American Megatrends, Inc.

CPU Core Temp. (DTS)

Detects and displays the current CPU temperature.

FAN Speed

Detects and displays the current fan speed.

Vcore to Vcc(+3V)

Detects and displays the output voltages.

Smart Fan Mode

Selects the mode of the fan, the options are Full on Mode and Automatic Mode.

FAN Speed 30% under Temp

Configures the temperature for the fan speed to operate at 30% efficiency.

System Temperature

Detects and displays the current system temperature.

Chipset

This section gives you functions to configure the system based on the specific features of the chipset. The chipset manages bus speeds and access to system memory resources.



PCH-IO Configuration



Restore on AC Power Loss

Select AC power state when power is re-applied after a power failure.

PCH Azalia Configuration



Azalia

Control detection of the Azalia device.

- Disabled Azalia will be unconditionally disabled
- Enabled Azalia will be unconditionally enabled
- Auto Azalia will be enabled if present, disabled otherwise.

System Agent (SA) Configuration



VT-d

Enables or disables VT-d function on MCH.

Graphics Configuration



Primary IGFX Boot Display

Select the video device which will be activated during POST. Has no effect if external graphics is present. Secondary boot display selection will appear based on your selection. VGA modes will be supported only on primary display.

Secondary IGFX Boot Display

Select the secondary display device.

Primary Display

Select which graphics device should be primary display or select SG for switchable GFX.


Internal Graphics

Keep IGD enabled based on the setup options.

DVMT Total Gfx Mem


Select DVMT5.0 Total Graphic Memory size used by the Internal Graphics Device.

Memory Configuration

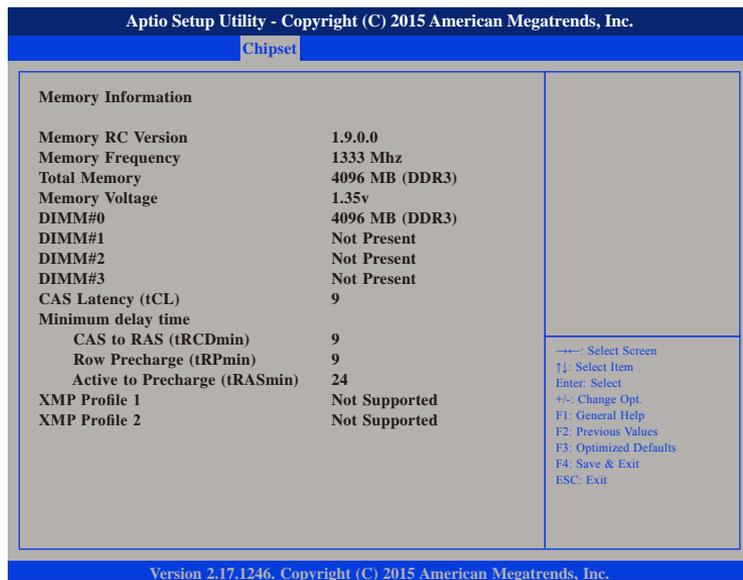

Detects and displays the information on the memory installed.

Boot

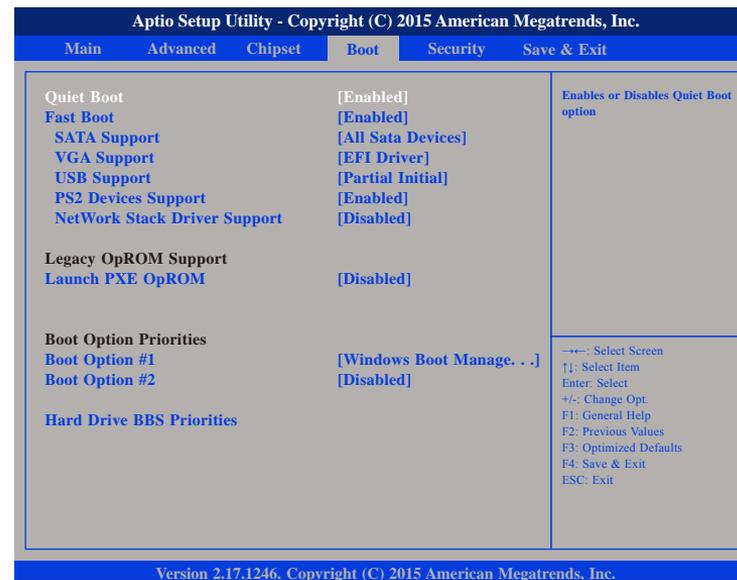

Quiet Boot

Enabled Displays OEM logo instead of the POST messages.
Disabled Displays normal POST messages.

Fast Boot

Enables or disables fast boot technology to speed up the system boot time. This is achieved by skipping specific tests during BIOS POST routine.

SATA Support

Options for including SATA device check during POST routine. The options are Last Boot HDD Only and All SATA Devices. This menu item is only available when Fast Boot is enabled.

VGA Support

If set to Auto, only install Legacy OpRom with Legacy OS and logo would not be shown during POST. EFI driver will still be installed with EFI. This menu item is only available when Fast Boot is enabled.

USB Support

Disabled All USB devices will not be available until after OS boot.
 Partial Initial Specific USB port/device will not be available before OS boot.
 Full Initial All USB devices will be available in OS and POST.

This menu item is only available when Fast Boot is enabled.

PS2 Devices Support

If set to Disabled, PS2 devices will be skipped during POST. This menu item is only available when Fast Boot is enabled.

Network Stack Driver Support

If set to Disabled, network stack drivers will be skipped during POST. This menu item is only available when Fast Boot is enabled.

Launch PXE OpROM

Enables or disables the boot option for legacy network devices.


Boot Option Priorities

Adjust the boot sequence of the system. Boot Option #1 is the first boot device that the system will boot from, next will be #2 and so forth.

Hard Drive BBS Priorities

Adjust the boot sequence of legacy devices.

Security

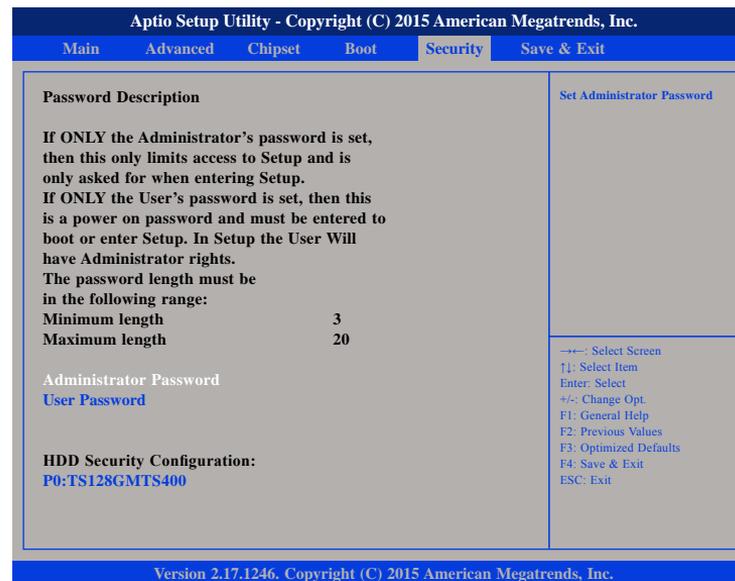

Administrator Password

Select this to reconfigure the administrator's password.

User Password

Select this to reconfigure the user's password.

Save & Exit



Save Changes and Reset

To save the changes and reset, select this field then press <Enter>. A dialog box will appear. Confirm by selecting Yes.

Discard Changes and Reset

To exit the Setup utility and reset without saving the changes, select this field then press <Enter>. You may be prompted to confirm again before exiting.

Restore Defaults

To restore the BIOS to default settings, select this field then press <Enter>. A dialog box will appear. Confirm by selecting Yes.

APPENDIX A: POWER CONSUMPTION

Power Consumption Management

Purpose

The purpose of the power consumption test is to verify the power dissipation of the system and the load of the power supply.

Test Data

System	Sys#1 (M)PPC-240T-HW-01
Modes	+24V
Sleep Mode	0.31A
Total Watts	7.44W
Idle Mode	2.32A
Total Watts	55.68W
Full-Loading Mode	3.31A
Total Watts	79.44W

APPENDIX B: WATCHDOG

1.1 Command Register and Address Description:

Command	Description
0x88	Read watchdog time interval
0x89	Reset watchdog time interval
0x28	Start watchdog
0x29	Stop watchdog
0x2A	Reset watchdog

Address for watchdog:

Watchdog is used to set up time interval and also keep event status. Unit time interval is 1ms. Time setting requires a word (8 bit) long length. You can set up watchdog event time from 0 to 0xFFFFFFFF. Write 0xFFFFFFFF to time interval setting means disable watchdog event. The interval time range is from 0ms to 497 day (0~0xFFFFFFFF)

Address	Description
0x50-0x53	0~0xFFFFFFFF

1.2 Set up Watchdog Time Interval Description:

Step	Action	Description	RW Sample Code Command
0	Wait IBF clear		x
1	Write 0x89 to 0x66	Send read command	>o 0x66 0x89
2	Wait IBF clear		x
3	Write RAM address to 0x62 port	Send Watchdog address 0x50~0x53.	>o 0x62 0x50
4	Wait OBF set		x
5	Write watchdog time interval value to 0x62	Values from 0~0xFFFFFFFF, but two bit in each address, please refer to sample code explanation.	>o 0x62 0x90

Sample explanation:

To set up watchdog time interval to 4 seconds, here are the values that should be filled in each address.

4sec = 400ms (decimal) = 190 (hexadecimal)

Address	0x50	0x51	0x52	0x53
Data	0x00	0x00	0x01	0x90

Complete command set sequence:

Further Description	Command	Address	Data
Set watchdog interval, write to address 0x50~0x53 and Data "00000190"	①>o 0x66 0x89	②>o 0x62 0x50	③>o 0x00
	④>o 0x66 0x89	⑤>o 0x62 0x51	⑥>o 0x00
	⑦>o 0x66 0x89	⑧>o 0x62 0x52	⑨>o 0x01
	⑩>o 0x66 0x89	⑪>o 0x62 0x53	⑫>o 0x90

1.3 Read Watchdog Time Interval Description:

Step	Action	Description	RW Sample Code Command
0	Wait IBF clear		x
1	Write 0x88 to 0x66	Send read command	>o 0x66 0x88
2	Wait IBF clear		x
3	Write RAM address to 0x62 port	Send watchdog address 0x50~0x53	>o 0x62 0x50
4	Wait OBF set		x
5	Read 0x62 port	Get Light sensor data in current address	>i 0x62

Please note different address cannot read continuously, you should run read command steps all over again till the last address location.

Further Description	Command	Address	Read
Send cmd to read address 0x50	①>o 0x66 0x88	②>o 0x62 0x50	③>i 0x62
Send cmd to read address 0x51	④>o 0x66 0x88	⑤>o 0x62 0x51	⑥>i 0x62
Send cmd to read address 0x52	⑦>o 0x66 0x88	⑧>o 0x62 0x52	⑨>i 0x62
Send cmd to read address 0x53	⑩>o 0x66 0x88	⑪>o 0x62 0x53	⑫>i 0x62

To complete read 0x50 ~ 0x53 address, you have to complete the commands from 1~12.

1.4 Reset Watchdog Time Interval Description:

This command is used to reset watchdog time.

Step	Action	Description	RW Sample Code Command
0	Wait IBF clear		x
1	Write 0x2A to 0x66	Send reset watchdog command	>o 0x66 0x2A
2	Wait OBF set		x
3	Read 0x62 port	If setup successfully, EC will return 0x03.	x (check 0x03 output on display)

1.5 Start Watchdog Description:

Step	Action	Description	RW Sample Code Command
0	Wait IBF clear		x
1	Write 0x28 to 0x66	Send start watchdog command	>o 0x66 0x28
2	Wait IBF clear		x
3	Write 0x01 to 0x62		>o 0x62 0x01 (check 0x03 output on display)
4	Wait OBF set		x
5	Read 0x62 port	If setup successfully, EC will return 0x01.	x (check 0x01 output on display)

1.6 Stop Watchdog Description:

Step	Action	Description	RW Sample Code Command
0	Wait IBF clear		x
1	Write 0x29 to 0x66	Send stop watchdog command	>o 0x66 0x29
2	Wait OBF set		x
3	Read 0x62 port	If setup successfully, EC will return 0x02.	x (check 0x02 output on display)