



NexAIoT Co., Ltd.

IoT Automation Solutions Business Group

Industrial Fanless Computer

NISE 3910 Series

User Manual

NexAIoT Co., Ltd.

Published January 2026

www.nexaiot.com

CONTENTS

Preface

| | |
|--|------|
| Copyright | iv |
| Disclaimer | iv |
| Acknowledgements | iv |
| Regulatory Compliance Statements | iv |
| Declaration of Conformity | iv |
| RoHS Compliance | v |
| Warranty and RMA | vi |
| Installation Recommendations | vii |
| Safety Information | viii |
| Safety Precautions | ix |
| Technical Support and Assistance | x |
| Conventions Used in this Manual | x |
| Global Service Contact Information | xi |
| Package Contents | xiii |
| Ordering Information | xix |

Chapter 1: Product Introduction

| | |
|--|---|
| NISE 3910E | 1 |
| NISE 3910E Key Features | 1 |
| NISE 3910E Hardware Specifications | 2 |
| NISE 3910E Parts | 4 |
| NISE 3910E Mechanical Dimensions | 6 |
| NISE 3910E16/E2/P2/P2E | 7 |
| Key Features | 7 |
| NISE 3910E16/E2/P2/P2E Hardware Specifications | 8 |

| | |
|--|----|
| NISE 3910E16/E2/P2/P2E Parts | 10 |
| NISE 3910E16/E2/P2/P2E Mechanical Dimensions | 12 |
| NISE 3910R | 13 |
| Key Features | 13 |
| NISE 3910R Hardware Specifications | 14 |
| NISE 3910R Parts | 16 |
| NISE 3910R Mechanical Dimensions | 18 |

Chapter 2: Jumpers and Connectors

| | |
|--|----|
| Before You Begin | 19 |
| Precautions | 19 |
| Jumper Settings | 20 |
| Locations of the Jumpers and Connectors for the NISE 3910 Series | 21 |
| Top View | 21 |
| Bottom View | 22 |
| Jumpers and DIP Switch Settings | 23 |
| COM3 Power Output Select | 23 |
| AT/ATX Power Select | 23 |
| PCIe Select | 24 |
| Clear CMOS | 24 |
| Connector Pin Definitions | 25 |
| External I/O Interfaces - Front Panel | 25 |
| USB 2.0 Ports | 25 |
| DisplayPort | 26 |
| LED Indicators | 26 |
| Power Button | 29 |

| | |
|---|----|
| External I/O Interfaces - Rear Panel..... | 30 |
| 9V - 30V DC Power Input..... | 30 |
| External I/O Interfaces - Rear Panel..... | 30 |
| DC Power Input..... | 30 |
| Remote Power On/Off | 30 |
| LAN Port 1 | 31 |
| LAN Port 2 + USB 3.1 Gen1..... | 32 |
| LAN Port 3 + USB 3.1 Gen1..... | 33 |
| LAN Port 4 + USB 3.1 Gen1..... | 34 |
| VGA + HDMI® | 35 |
| Internal Connectors - Top Side..... | 36 |
| Audio Connectors..... | 36 |
| RTC Battery Connector..... | 37 |
| M.2 Key B..... | 38 |
| M.2 Key M..... | 40 |
| Mini PCIe Connector..... | 42 |
| USB Dongle Connector | 43 |
| COM Port 1..... | 43 |
| COM Port 2..... | 44 |
| COM Port 3..... | 44 |
| COM Port 4..... | 45 |
| COM4_RS422 (Optional) | 45 |
| Fan Connectors | 46 |
| BIOS FW Connector..... | 46 |
| GPIO Connector | 47 |
| LED Connector | 47 |
| SMBUS Connector | 48 |
| Power Module Connector | 49 |
| SMBUS Connector | 50 |
| Internal Connectors - Bottom Side | 51 |
| SIM Card Slot..... | 51 |
| SATA Power Connector | 51 |

| | |
|-----------------------|----|
| PCIe X16 Slot..... | 52 |
| SATA Connectors | 54 |

Chapter 3: System Setup

| | |
|---|----|
| Removing the Top Cover | 55 |
| Removing the Bottom Cover | 57 |
| Installing a CPU | 58 |
| Installing a SO-DIMM Memory Module | 61 |
| Installing a Mini PCIe Module..... | 62 |
| Installing a SIM Card | 64 |
| Installing an M.2 Module (External) | 65 |
| Installing an M.2 Module (Internal) | 67 |
| Installing an Internal SATA Storage Drive (NISE 3910E/E16/E2/P2/P2E)..... | 68 |
| Installing an Internal SATA Storage Drive (NISE 3910R) | 70 |
| Wallmount Brackets..... | 71 |

Chapter 4: BIOS Setup

| | |
|---------------------------------|----|
| About BIOS Setup | 72 |
| When to Configure the BIOS..... | 72 |
| Default Configuration..... | 73 |
| Entering Setup | 73 |
| Legends | 73 |
| BIOS Setup Utility | 75 |
| Main | 75 |
| Advanced | 76 |
| Chipset | 83 |
| Security | 87 |
| Boot | 88 |
| Save & Exit | 89 |
| MEBx | 90 |

PREFACE

Copyright

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written consent from NexAIoT Co., Ltd.

Disclaimer

The information in this document is subject to change without prior notice and does not represent commitment from NexAIoT Co., Ltd. However, users may update their knowledge of any product in use by constantly checking its manual posted on our website: <http://www.nexaiot.com>. NexAIoT shall not be liable for direct, indirect, special, incidental, or consequential damages arising out of the use of any product, nor for any infringements upon the rights of third parties, which may result from such use. Any implied warranties of merchantability or fitness for any particular purpose is also disclaimed.

Acknowledgements

NISE 3910 series products are the trademarks of NexAIoT Co., Ltd. All other product names mentioned herein are registered trademarks of their respective owners.

Regulatory Compliance Statements

This section provides the FCC compliance statement for Class A devices and describes how to keep the system CE compliant.

Declaration of Conformity

FCC

This equipment has been tested and verified to comply with the limits for a Class A digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area (domestic environment) is likely to cause harmful interference, in which case the user will be required to correct the interference (take adequate measures) at their own expense.

CE

The product(s) described in this manual complies with all applicable European Union (CE) directives if it has a CE marking. For computer systems to remain CE compliant, only CE-compliant parts may be used. Maintaining CE compliance also requires proper cable and cabling techniques.

RoHS Compliance



NexAIoT RoHS Environmental Policy and Status Update

NexAIoT is a global citizen for building the digital infrastructure. We are committed to providing green products and services, which are compliant with European Union RoHS (Restriction on Use of Hazardous Substance in Electronic Equipment) directive 2011/65/EU, to be your trusted green partner and to protect our environment.

RoHS restricts the use of Lead (Pb) < 0.1% or 1,000ppm, Mercury (Hg) < 0.1% or 1,000ppm, Cadmium (Cd) < 0.01% or 100ppm, Hexavalent Chromium (Cr6+) < 0.1% or 1,000ppm, Polybrominated biphenyls (PBB) < 0.1% or 1,000ppm, and Polybrominated diphenyl Ethers (PBDE) < 0.1% or 1,000ppm.

In order to meet the RoHS compliant directives, NexAIoT has established an engineering and manufacturing task force to implement the introduction of green products. The task force will ensure that we follow the standard NexAIoT development procedure and that all the new RoHS components and new manufacturing processes maintain the highest industry quality levels for which NexAIoT are renowned.

The model selection criteria will be based on market demand. Vendors and suppliers will ensure that all designed components will be RoHS compliant.

How to recognize NexAIoT RoHS Products?

For existing products where there are non-RoHS and RoHS versions, the suffix "(LF)" will be added to the compliant product name.

All new product models launched after January 2013 will be RoHS compliant. They will use the usual NexAIoT naming convention.

Warranty and RMA

NexAIoT Warranty Period

NexAIoT manufactures products that are new or equivalent to new in accordance with industry standard. NexAIoT warrants that products will be free from defect in material and workmanship for 2 years, beginning on the date of invoice by NexAIoT.

NexAIoT Return Merchandise Authorization (RMA)

- Customers shall enclose the "NexAIoT RMA Service Form" with the returned packages.
- Customers must collect all the information about the problems encountered and note anything abnormal or, print out any on-screen messages, and describe the problems on the "NexAIoT RMA Service Form" for the RMA number apply process.
- Customers can send back the faulty products with or without accessories (manuals, cable, etc.) and any components from the card, such as CPU and RAM. If the components were suspected as part of the problems, please note clearly which components are included. Otherwise, NexAIoT is not responsible for the devices/parts.
- Customers are responsible for the safe packaging of defective products, making sure it is durable enough to be resistant against further damage and deterioration during transportation. In case of damages occurred during transportation, the repair is treated as "Out of Warranty."
- Any products returned by NexAIoT to other locations besides the customers' site will bear an extra charge and will be billed to the customer.

Repair Service Charges for Out-of-Warranty Products

NexAIoT will charge for out-of-warranty products in two categories, one is basic diagnostic fee and another is component (product) fee.

System Level

- Component fee: NexAIoT will only charge for main components such as SMD chip, BGA chip, etc. Passive components will be repaired for free, ex: resistor, capacitor.
- Items will be replaced with NexAIoT products if the original one cannot be repaired. Ex: motherboard, power supply, etc.
- Replace with 3rd party products if needed.
- If RMA goods can not be repaired, NexAIoT will return it to the customer without any charge.

Board Level

- Component fee: NexAIoT will only charge for main components, such as SMD chip, BGA chip, etc. Passive components will be repaired for free, ex: resistors, capacitors.
- If RMA goods can not be repaired, NexAIoT will return it to the customer without any charge.

Warnings

Read and adhere to all warnings, cautions, and notices in this guide and the documentation supplied with the chassis, power supply, and accessory modules. If the instructions for the chassis and power supply are inconsistent with these instructions or the instructions for accessory modules, contact the supplier to find out how you can ensure that your computer meets safety and regulatory requirements.

Cautions

Electrostatic discharge (ESD) can damage system components. Do the described procedures only at an ESD workstation. If no such station is available, you can provide some ESD protection by wearing an antistatic wrist strap and attaching it to a metal part of the computer chassis.

Installation Recommendations

Ensure you have a stable, clean working environment. Dust and dirt can get into components and cause a malfunction. Use containers to keep small components separated.

Adequate lighting and proper tools can prevent you from accidentally damaging the internal components. Most of the procedures that follow require only a few simple tools, including the following:

- A Philips screwdriver
- A flat-tipped screwdriver
- A grounding strap
- An anti-static pad

Using your fingers can disconnect most of the connections. It is recommended that you do not use needle-nose pliers to disconnect connections as these can damage the soft metal or plastic parts of the connectors.

Field wiring shall be conducted by skilled persons

- Insert the positive and negative wires into the V+ and V- contacts on the terminal block connector.
- Tighten the wire-clamps screws to prevent the DC wires coming loose.

Take into consideration the following guidelines before wiring the device

- The Input connector is suitable for 30-12 AWG (min.10A). Torque value 5 lb-in.
- Please choose Copper wire.

Safety Information

Before installing and using the device, note the following precautions:

- Read all instructions carefully.
- Do not place the unit on an unstable surface, cart, or stand.
- Follow all warnings and cautions in this manual.
- When replacing parts, ensure that your service technician uses parts specified by the manufacturer.
- Avoid using the system near water, in direct sunlight, or near a heating device.
- The load of the system unit does not solely rely for support from the rackmounts located on the sides. Firm support from the bottom is highly necessary in order to provide balance stability.
- The computer is provided with a battery-powered real-time clock circuit. There is a danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.



- Danger of explosion if battery is incorrectly replaced. Replace with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.
- Before equipment installation begins, ensure that a skilled personnel has attached an appropriate power cable supplied.
- Risk of explosion if the battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Safety Precautions

1. Read these safety instructions carefully.
2. Keep this User Manual for later reference.
3. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a stable surface during installation. Dropping it or letting it fall may cause damage.
7. The openings on the enclosure are for air convection to protect the equipment from overheating. DO NOT COVER THE OPENINGS.
8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
9. Place the power cord in a way so that people will not step on it. Do not place anything on top of the power cord. Use a power cord that has been approved for use with the product and that it matches the voltage and current marked on the product's electrical range label. The voltage and current rating of the cord must be greater than the voltage and current rating marked on the product.
10. All cautions and warnings on the equipment should be noted.
11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
12. Never pour any liquid into an opening. This may cause fire or electrical shock.
13. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
14. If one of the following situations arises, get the equipment checked by service personnel:
 - a. The power cord or plug is damaged.
 - b. Liquid has penetrated into the equipment.
 - c. The equipment has been exposed to moisture.
 - d. The equipment does not work well, or you cannot get it to work according to the user's manual.
 - e. The equipment has been dropped and damaged.
 - f. The equipment has obvious signs of breakage.
15. Do not place heavy objects on the equipment.
16. The equipment is intended to be supplied by DC mains, input voltage tolerance should be within 9-30Vdc and without PE connection.
17. **CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER. DISCARD USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.**
18. Direct contact to metal enclosure should be less than 1 second time.

Technical Support and Assistance

1. For the most updated information of NexAIoT products, visit NexAIoT's website at www.nexaiot.com.
2. For technical issues that require contacting our technical support team or sales representative, please have the following information ready before calling:
 - Product name and serial number
 - Detailed information of the peripheral devices
 - Detailed information of the installed software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wordings of the error messages

Warning!

1. Handling the unit: carry the unit with both hands and handle it with care.
2. Maintenance: to keep the unit clean, use only approved cleaning products or clean with a dry cloth.
3. CompactFlash: Turn off the unit's power before inserting or removing a CompactFlash storage card.

Conventions Used in this Manual



Warning:

Information about certain situations, which if not observed, can cause personal injury. This will prevent injury to yourself when performing a task.



Caution:

Information to avoid damaging components or losing data.



Note:

Provides additional information to complete a task easily.



Safety Warning: This equipment is intended for installation in a Restricted Access Location only.

Global Service Contact Information

Headquarters

NEXCOM International Co., Ltd.

9F, No. 920, Zhongzheng Rd.,
Zhonghe District, New Taipei City, 235015,
Taiwan, R.O.C.
Tel: +886-2-8226-7786
Fax: +886-2-8226-7782
www.nexcom.com

Asia

Taiwan

NexAIoT Headquarters

Industry 4.0 and Cloud Services

13F, No.922, Zhongzheng Rd.,
Zhonghe District, New Taipei City,
235015, Taiwan, R.O.C.
Tel: +886-2-8226-7796
Fax: +886-2-8226-7926
Email: contact@nexcom.com.tw
www.nexaiot.com

NexAIoT Co., Ltd.

Taichung Office

16F, No.250, Sec.2, Chongde Rd.,
Beitun District,
Taichung City, 406503, Taiwan, R.O.C.
Tel: +886-4-2249-1179
Fax: +886-4-2249-1172
Email: contact@nexcom.com.tw
www.nexaiot.com

NexCOBOT Taiwan Co., Ltd.

13F, No.916, Zhongzheng Rd.,
Zhonghe District,
New Taipei City, 235015, Taiwan, R.O.C.
Tel: +886-2-8226-7786
Fax: +886-2-8226-7926
Email: contact@nexcom.com.tw
www.nexcobot.com

GreenBase Technology Corp.

13F, No.922, Zhongzheng Rd.,
Zhonghe District,
New Taipei City, 235015, Taiwan, R.O.C.
Tel: +886-2-8226-7786
Fax: +886-2-8226-7900
Email: info@greenbase.com.tw
www.nexcom.com.tw

DivioTec Inc.

29F-1A, No.97, Sec.4, ChongXin Rd.,
Sanchong District,
New Taipei City, 24161, Taiwan, R.O.C.
Tel: +886-2-8976-3077
Email: sales@diviotec.com
www.diviotec.com

AIoT Cloud Corp.

13F, No.922, Zhongzheng Rd.,
Zhonghe District,
New Taipei City, 23586, Taiwan, R.O.C.
Tel: +886-2-8226-7786
Fax: +886-2-8226-7782
Email: alantsai@aiotcloud.net
www.aiotcloud.dev

EMBUX TECHNOLOGY CO., LTD.

13F, No.916, Zhongzheng Rd.,
Zhonghe District,
New Taipei City, 235015, Taiwan, R.O.C.
Tel: +886-2-8226-7786
Fax: +886-2-8226-7782
Email: info@embux.com
www.embux.com

TMR TECHNOLOGIES CO., LTD.

13F, No.916, Zhongzheng Rd.,
Zhonghe District,
New Taipei City, 23586, Taiwan, R.O.C.
Tel: +886-2-8226-7786
Fax: +886-2-8226-7782
Email: services@tmrtek.com
www.tmrtek.com

NEXCOM Surveillance Technology Corp.

Floor 8, Building B3, Xiufeng Industrial Zone, Gan-Keng Community, Buji Street, LongGang District, ShenZhen, 518112, China
 Tel: +86-755-8364-7768
 Fax: +86-755-8364-7738
 Email: info@greenbase.com.tw
www.nexcom.cn

NEXCOM United System Service

Room 603/604, Huiyinmingzun Plaza Bldg. 1, No. 609, Yunlin East Rd., Shanghai, 200062, China
 Tel: +86-21-5278-5868
 Fax: +86-21-3251-6358
 Email: renwang@nexcom.com.tw
www.nexcom.cn

NEXGOL Chongqing

1st Building No.999, Star Boulevard, Yongchuan Dist, Chongqing City, 402160, China
 Tel: +86-23-4960-9080
 Fax: +86-23-4966-5855
 Email: sales@nexgol.com.cn
<https://www.nexgol.com/>

NexCOBOT China

Room 501, Building 1, Haichuang Building, No.7 Qingyi Road, Guicheng Street, Nanhai District, Foshan City, Guangdong Province, 528314, China
 Tel: +86-757-8625-7118
 Email: sales@nexcobot.com
www.nexcobot.com.cn

Beijing NexGemo Technology Co.,Ltd.

5F, Gemotech Building, No.1, Development Rd., Changping International Information Industry Base, Changping District, Beijing, 102206, China
 Tel: +86-10-8190-9328
 Fax: +86-10-8190-9456
 Email: sales@gemotech.cn
www.nexgemo.cn

Japan

NEXCOM Japan

9F, Tamachi Hara Bldg., 4-11-5, Shiba Minato-ku, Tokyo, 108-0014, Japan
 Tel: +81-3-5419-7830
 Fax: +81-3-5419-7832
 Email: sales@nexcom-jp.com
www.nexcom-jp.com

America

USA NEXCOM USA

41300 Boyce Rd., Fremont CA 94538, USA
 Tel: +1-510-656-2248
 Fax: +1-510-656-2158
 Email: sales@nexcom.com
www.nexcomusa.com

Package Contents

Before continuing, verify that the NISE 3910 series package that you received is complete. Your package should have all the items listed in the following tables.

| | Item | Part Number | Description | Qty |
|------------|-------------|--------------------|--|------------|
| NISE 3910E | 1 | 5060900292X00 | WALL MOUNT BRACKET FOR NISE3600 VER:A CHYUAN-JYH | 2 |
| | 2 | 50311F0317X00 | ROUND HEAD SCREW LONG FEI:T30 P6x 10 ISO/SW13x1 with Nylok | 8 |
| | 3 | 60233AT108X00 | 7P+15P SATA CABLE ST:MD-6101108 | 1 |
| | 4 | 5060600171X00 | (H)2.5 HDD MYLAR E-LIN | 1 |
| | 5 | 4NCPM00302X00 | (T)TERMINAL BLOCKS 3P PHOENIX CONTACT:1777992 | 1 |
| | 6 | 4NCPF00310X00 | TERMINAL BLOCKS 3P PHOENIX CONTACT:1803581 | 1 |
| | 7 | 5061600245X00 | WASHER KANGYANG:TW-320-01 | 12 |
| | 8 | 5061711760X00 | MINI PCI-E BRACKET FOR NISE106 SERIES VER:A ASDA | 1 |
| | 9 | 5044440181X00 | CERAMIC THERMAL PAD FOR NDiSP2210 T.G.:XL-25 | 2 |
| | 10 | 50311P0001X00 | PRICE FOR PLASTIC SCREW | 1 |
| | 11 | 50322P0002X00 | PLASTIC NUT GIN LIAN:M6HW | 1 |
| | 12 | 50311P0020X00 | F HEAD SCREW KANG YANG:M3-6F(B) | 4 |
| | 13 | 50311F0330X00 | ROUND HEAD SCREW LONG FEI:P2x3 ISO+NYLON | 2 |
| | 14 | 50311F0295X00 | FLAT HEAD SCREW LONG FEI:F2x4 NYLOK NIGP | 1 |
| | 15 | 50344C0379X00 | COPPER POST FOR NISE53 SERIES VER:A LONG FEI | 1 |
| | 16 | 50311F0396X00 | I HEAD SCREW LONG FEI:I3x3 ISO+NYLOK BLACK | 1 |
| | 17 | 50311F0213X00 | FLAT HEAD SCREW LONG FEI:F3x4ISO+NYLOK NIGP | 4 |
| | 18 | 50311F0144X00 | I HEAD SCREW LONG FEI: | 2 |
| | 19 | 5050300264X00 | HEAT SINK Shyung Shuhm:SH20200618-1 | 1 |
| | 20 | 5060200111X00 | THERMAL PAD E-LIN | 1 |
| | 21 | 5060200685X00 | THERMAL PAD T-GLOBAL | 1 |

| | Item | Part Number | Description | Qty |
|-------------|-------------|--------------------|--|------------|
| NISE 3910E2 | 1 | 5060900292X00 | WALL MOUNT BRACKET FOR NISE3600 VER:A CHYUAN-JYH | 2 |
| | 2 | 50311F0317X00 | ROUND HEAD SCREW LONG FEI:T30 P6x 10 ISO/SW13x1 with Nylok | 8 |
| | 3 | 60233AT108X00 | 7P+15P SATA CABLE ST:MD-6101108 | 1 |
| | 4 | 5060600171X00 | (H)2.5 HDD MYLAR E-LIN | 1 |
| | 5 | 4NCPM00302X00 | (T)TERMINAL BLOCKS 3P PHOENIX CONTACT:1777992 | 1 |
| | 6 | 4NCPF00310X00 | TERMINAL BLOCKS 3P PHOENIX CONTACT:1803581 | 1 |
| | 7 | 5061600245X00 | WASHER KANGYANG:TW-320-01 | 12 |
| | 8 | 5061711760X00 | MINI PCI-E BRACKET FOR NISE106 SERIES VER:A ASDA | 1 |
| | 9 | 5044440181X00 | CERAMIC THERMAL PAD FOR NDISP2210 T.G.:XL-25 | 2 |
| | 10 | 50311P0001X00 | PRICE FOR PLASTIC SCREW | 2 |
| | 11 | 50322P0002X00 | PLASTIC NUT GIN LIAN:M6HW | 2 |
| | 12 | 50311P0020X00 | F HEAD SCREW KANG YANG:M3-6F(B) | 4 |
| | 13 | 50311F0330X00 | ROUND HEAD SCREW LONG FEI:P2x3 ISO+NYLON | 2 |
| | 14 | 50311F0295X00 | FLAT HEAD SCREW LONG FEI:F2x4 NYLOK NIGP | 1 |
| | 15 | 50344C0379X00 | COPPER POST FOR NISE53 SERIES VER:A LONG FEI | 1 |
| | 16 | 50311F0396X00 | I HEAD SCREW LONG FEI:I3x3 ISO+NYLOK BLACK | 1 |
| | 17 | 50311F0213X00 | FLAT HEAD SCREW LONG FEI:F3x4ISO+NYLOK NIGP | 4 |
| | 18 | 50311F0144X00 | I HEAD SCREW LONG FEI: | 2 |
| | 19 | 5050300264X00 | HEAT SINK Shyung Shuhm:SH20200618-1 | 1 |
| | 20 | 5060200111X00 | THERMAL PAD E-LIN | 1 |
| | 21 | 5060200685X00 | THERMAL PAD T-GLOBAL | 1 |

| | Item | Part Number | Description | Qty |
|-------------|-------------|--------------------|--|------------|
| NISE 3910P2 | 1 | 5060900292X00 | WALL MOUNT BRACKET FOR NISE3600 VER:A CHYUAN-JYH | 2 |
| | 2 | 50311F0317X00 | ROUND HEAD SCREW LONG FEI:T30 P6x 10 ISO/SW13x1 with Nylok | 8 |
| | 3 | 60233AT108X00 | 7P+15P SATA CABLE ST:MD-6101108 | 1 |
| | 4 | 5060600171X00 | (H)2.5 HDD MYLAR E-LIN | 1 |
| | 5 | 4NCPM00302X00 | (T)TERMINAL BLOCKS 3P PHOENIX CONTACT:1777992 | 1 |
| | 6 | 4NCPF00310X00 | TERMINAL BLOCKS 3P PHOENIX CONTACT:1803581 | 1 |
| | 7 | 5061600245X00 | WASHER KANGYANG:TW-320-01 | 12 |
| | 8 | 5061711760X00 | MINI PCI-E BRACKET FOR NISE106 SERIES VER:A ASDA | 1 |
| | 9 | 5044440181X00 | CERAMIC THERMAL PAD FOR NDISP2210 T.G.:XL-25 | 2 |
| | 10 | 50311P0001X00 | PRICE FOR PLASTIC SCREW | 2 |
| | 11 | 50322P0002X00 | PLASTIC NUT GIN LIAN:M6HW | 2 |
| | 12 | 50311P0020X00 | F HEAD SCREW KANG YANG:M3-6F(B) | 4 |
| | 13 | 50311F0330X00 | ROUND HEAD SCREW LONG FEI:P2x3 ISO+NYLON | 2 |
| | 14 | 50311F0295X00 | FLAT HEAD SCREW LONG FEI:F2x4 NYLOK NIGP | 1 |
| | 15 | 50344C0379X00 | COPPER POST FOR NISE53 SERIES VER:A LONG FEI | 1 |
| | 16 | 50311F0396X00 | I HEAD SCREW LONG FEI:I3x3 ISO+NYLOK BLACK | 1 |
| | 17 | 50311F0213X00 | FLAT HEAD SCREW LONG FEI:F3x4ISO+NYLOK NIGP | 4 |
| | 18 | 50311F0144X00 | I HEAD SCREW LONG FEI: | 2 |
| | 19 | 5050300264X00 | HEAT SINK Shyung Shuhm:SH20200618-1 | 1 |
| | 20 | 5060200111X00 | THERMAL PAD E-LIN | 1 |
| | 21 | 5060200685X00 | THERMAL PAD T-GLOBAL | 1 |

| | Item | Part Number | Description | Qty |
|--------------|-------------|--------------------|--|------------|
| NISE 3910P2E | 1 | 5060900292X00 | WALL MOUNT BRACKET FOR NISE3600 VER:A CHYUAN-JYH | 2 |
| | 2 | 50311F0317X00 | ROUND HEAD SCREW LONG FEI:T30 P6x 10 ISO/SW13x1 with Nylok | 8 |
| | 3 | 60233AT108X00 | 7P+15P SATA CABLE ST:MD-6101108 | 1 |
| | 4 | 5060600171X00 | (H)2.5 HDD MYLAR E-LIN | 1 |
| | 5 | 5061600245X00 | WASHER KANGYANG:TW-320-01 | 12 |
| | 6 | 4NCPM00302X00 | (T)TERMINAL BLOCKS 3P PHOENIX CONTACT:1777992 | 1 |
| | 7 | 4NCPF00310X00 | TERMINAL BLOCKS 3P PHOENIX CONTACT:1803581 | 1 |
| | 8 | 5061711760X00 | MINI PCI-E BRACKET FOR NISE106 SERIES VER:A ASDA | 1 |
| | 9 | 5044440181X00 | CERAMIC THERMAL PAD FOR NDiSP2210 T.G.:XL-25 | 2 |
| | 10 | 50311P0001X00 | PRICE FOR PLASTIC SCREW | 2 |
| | 11 | 50322P0002X00 | PLASTIC NUT GIN LIAN:M6HW | 2 |
| | 12 | 50311P0020X00 | F HEAD SCREW KANG YANG:M3-6F(B) | 4 |
| | 13 | 50311F0330X00 | ROUND HEAD SCREW LONG FEI:P2x3 ISO+NYLON | 2 |
| | 14 | 50311F0213X00 | FLAT HEAD SCREW LONG FEI:F3x4ISO+NYLOK NIGP | 4 |
| | 15 | 50311F0295X00 | FLAT HEAD SCREW LONG FEI:F2x4 NYLOK NIGP | 1 |
| | 16 | 50344C0379X00 | COPPER POST FOR NISE53 SERIES VER:A LONG FEI | 1 |
| | 17 | 50311F0396X00 | I HEAD SCREW LONG FEI:I3x3 ISO+NYLOK BLACK | 1 |
| | 18 | 50311F0144X00 | I HEAD SCREW LONG FEI: | 2 |
| | 19 | 5050300264X00 | HEAT SINK Shyung Shuhm:SH20200618-1 | 1 |
| | 20 | 5060200111X00 | THERMAL PAD E-LIN | 1 |
| | 21 | 5060200685X00 | THERMAL PAD T-GLOBAL | 1 |

| | Item | Part Number | Description | Qty |
|--------------|-------------|--------------------|--|------------|
| NISE 3910E16 | 1 | 6013301933X00 | PAPER FOLDING FOR NISE3910E SERIES VER:A KUANGANG | 2 |
| | 2 | 5060900292X00 | WALL MOUNT BRACKET FOR NISE3600 VER:A CHYUAN-JYH | 2 |
| | 3 | 50311F0317X00 | ROUND HEAD SCREW LONG FEI:T30 P6x 10 ISO/SW13x1 with Nylok | 8 |
| | 4 | 60233AT108X00 | 7P+15P SATA CABLE ST:MD-6101108 | 1 |
| | 5 | 5060600171X00 | (H)2.5 HDD MYLAR E-LIN | 1 |
| | 6 | 4NCPM00302X00 | (T)TERMINAL BLOCKS 3P PHOENIX CONTACT:1777992 | 1 |
| | 7 | 4NCPF00310X00 | TERMINAL BLOCKS 3P PHOENIX CONTACT:1803581 | 1 |
| | 8 | 5061600245X00 | WASHER KANGYANG:TW-320-01 | 12 |
| | 9 | 5061711760X00 | MINI PCI-E BRACKET FOR NISE106 SERIES VER:A ASDA | 1 |
| | 10 | 5044440181X00 | CERAMIC THERMAL PAD FOR NDISP2210 T.G.:XL-25 | 2 |
| | 11 | 50311P0001X00 | PRICE FOR PLASTIC SCREW | 2 |
| | 12 | 50322P0002X00 | PLASTIC NUT GIN LIAN:M6HW | 2 |
| | 13 | 50311P0020X00 | F HEAD SCREW KANG YANG:M3-6F(B) | 4 |
| | 14 | 50311F0330X00 | ROUND HEAD SCREW LONG FEI:P2x3 ISO+NYLON | 2 |
| | 15 | 50311F0295X00 | FLAT HEAD SCREW LONG FEI:F2x4 NYLOK NIGP | 1 |
| | 16 | 50344C0379X00 | COPPER POST FOR NISE53 SERIES VER:A LONG FEI | 1 |
| | 17 | 50311F0396X00 | I HEAD SCREW LONG FEI:I3x3 ISO+NYLOK BLACK | 1 |
| | 18 | 50311F0213X00 | FLAT HEAD SCREW LONG FEI:F3x4ISO+NYLOK NIGP | 4 |
| | 19 | 50311F0144X00 | I HEAD SCREW LONG FEI: | 2 |
| | 20 | 5050300264X00 | HEAT SINK Shyung Shuhm:SH20200618-1 | 1 |
| | 21 | 5060200111X00 | THERMAL PAD E-LIN | 1 |
| | 22 | 5060200685X00 | THERMAL PAD T-GLOBAL | 1 |

| | Item | Part Number | Description | Qty |
|------------|-------------|--------------------|--|------------|
| NISE 3910R | 1 | 5060900292X00 | WALL MOUNT BRACKET FOR NISE3600 VER:A CHYUAN-JYH | 2 |
| | 2 | 50311F0317X00 | ROUND HEAD SCREW LONG FEI:T30 P6x 10 ISO/SW13x1 with Nylok | 8 |
| | 3 | 4NCPM00302X00 | (T)TERMINAL BLOCKS 3P PHOENIX CONTACT:1777992 | 1 |
| | 4 | 4NCPF00310X00 | TERMINAL BLOCKS 3P PHOENIX CONTACT:1803581 | 1 |
| | 5 | 5061600245X00 | WASHER KANGYANG:TW-320-01 | 12 |
| | 6 | 5061711760X00 | MINI PCI-E BRACKET FOR NISE106 SERIES VER:A ASDA | 1 |
| | 7 | 5044440181X00 | CERAMIC THERMAL PAD FOR NDISP2210 T.G.:XL-25 | 2 |
| | 8 | 50311P0020X00 | F HEAD SCREW KANG YANG:M3-6F(B) M3x6mm PLASTICS (For the system isolation function, the screw locking force is 1.5 ~ 2.0 kg-f.) | 8 |
| | 9 | 50311F0330X00 | ROUND HEAD SCREW LONG FEI:P2x3 ISO+NYLON | 2 |
| | 10 | 50311F0295X00 | FLAT HEAD SCREW LONG FEI:F2x4 NYLOK NIGP | 1 |
| | 11 | 50344C0379X00 | COPPER POST FOR NISE53 SERIES VER:A LONG FEI | 1 |
| | 12 | 50311F0396X00 | I HEAD SCREW LONG FEI:I3x3 ISO+NYLOK BLACK | 1 |
| | 13 | 5050300264X00 | HEAT SINK Shyung Shuhm:SH20200618-1 | 1 |
| | 14 | 5060200111X00 | THERMAL PAD E-LIN | 1 |
| | 15 | 5060200685X00 | THERMAL PAD T-GLOBAL | 1 |
| | 16 | 50311F0213X00 | FLAT HEAD SCREW LONG FEI:F3x4ISO+NYLOK NIGP F3x4 NI NYLOK | 8 |

Ordering Information

The following information below provides ordering information for the NISE 3910 series.

- **Barebone**

NISE 3910E (P/N: 10J00391000X0)

Intel® 14th/13th/12th Gen Core™ i9/i7/i5/i3 fanless system with one PCIe x4 expansion

NISE 3910E16 (P/N: 10J00391002X0)

Intel® 14th/13th/12th Gen Core™ i9/i7/i5/i3 fanless system with one PCIe x16 expansion

NISE 3910E2 (P/N: 10J00391001X0)

Intel® 14th/13th/12th Gen Core™ i9/i7/i5/i3 fanless system with two PCIe x4 expansions

NISE 3910P2 (P/N: 10J00391003X0)

Intel® 14th/13th/12th Gen Core™ i9/i7/i5/i3 fanless system with two PCI expansions

NISE 3910P2E (P/N: 10J00391004X0)

Intel® 14th/13th/12th Gen Core™ i9/i7/i5/i3 fanless system with one PCI & one PCIe x4 expansions

NISE 3910R (P/N: 10J00391005X0)

Intel® 14th/13th/12th Gen Core™ i9/i7/i5/i3 fanless system with two outside accessible 2.5" HDD/SSD tray, support RAID 0/1

24V, 120W AC to DC power adapter w/o power cord (P/N: 7400120029X00)**24V, 180W AC to DC power adapter w/o power cord (P/N: 7400180012X00)**

CHAPTER 1: PRODUCT INTRODUCTION

NISE 3910E



Front View



Rear View

NISE 3910E Key Features

- Support 14th/13th/12th Gen Intel® Core™ i3/i5/i7/i9 LGA1700 socket type embedded processor
- Intel® Q670E PCH
- Support 2 x DDR5 SO-DIMM socket, up to 64GB
- Four Intel® i226-IT LAN ports, support WoL and PXE
- 1 x DP, 1 x HDMI®, and 1 x VGA with independent display
- 1 x M.2 3042/3052 Key B support LTE/5G module
- 1 x Outside accessible M.2 2242 Key M with PCIe x4, support NVMe
- 6 x USB 3.1 Gen 1, 4 x USB 2.0
- 2 x Isolated RS-232/422/485 with auto-flow and 2 x RS-232
- 1 x Mini PCIe slot, support optional Wi-Fi, 3.5G, 4G LTE
- 1 x 2.5" SATA HDD/SSD (additional 1 x 2.5" SATA upon request)
- TPM 2.0 default onboard

NISE 3910E Hardware Specifications

CPU Support

- Support 14th/13th/12th Gen Intel® Core™ i3/i5/i7/i9 LGA1700 socket type embedded processors
 - Intel® Core™ i7-14700T, 8P+12E, 1.3GHz, 33M Cache
 - Intel® Core™ i5-14500T, 6P+8E, 1.7GHz, 24M Cache
 - Intel® Core™ i3-14100T, 4P+4E, 2.7GHz, 12M Cache
 - Intel® Core™ i9-13900TE, 8P+16E, 1.0GHz, 36M Cache
 - Intel® Core™ i7-13700TE, 8P+8E, 1.1GHz, 30M Cache
 - Intel® Core™ i5-13500TE, 6P+8E, 1.3GHz, 24M Cache
 - Intel® Core™ i3-13100TE, 4P+4E, 2.4GHz, 12M Cache
 - Intel® Core™ i9-12900TE, 8P+8E, 1.1GHz, 30M Cache
 - Intel® Core™ i7-12700TE, 8P+4E, 1.4GHz, 25M Cache
 - Intel® Core™ i5-12500TE, 6P+6E, 1.9GHz, 18M Cache
 - Intel® Core™ i3-12100TE, 4P+4E, 2.1GHz, 12M Cache

Main Memory

- DDR5 4800 SO-DIMM socket, supports up to 64GB

Display Option

- Three independent display: HDMI®, DP, VGA

I/O Interface-Front

- 1 x ATX power on/off switch
- LED indicators:
 - 4 x LAN active
 - 1 x GPO status
 - 4 x COM Tx/Rx
 - 1 x HDD/SSD status
 - 1 x Battery low
 - 1 x M.2

- 1 x DP
- 2 x Antenna holes
- 1 x Outside accessible M.2 2242 Key M (PCIe x4, SATA)
- 1 x SIM card holder
- 4 x USB 2.0 Type A (500mA/port)
- 1 x Line out and 1 x mic-in

I/O Interface-Rear

- 1 x HDMI®
- 1 x VGA port
- 6 x USB 3.1 Gen1 Type A (900mA per each)
- 4 x Intel® I226-IT 2.5GbE LAN ports; support WoL & PXE
- 2 x Isolated RS-232/422/485
- 1 x RS-232
- 1 x 3-pin DC input, support +12 to 30VDC input
- 1 x 3-pin remote power on/off switch

I/O Interface-Internal

- 8 x GPI and 8 x GPO (5V, TTL type)
- 1 x M.2 Key B 2242/3042/3052 (PCIe x2, SATA, USB3.0)
- 1 x Mini PCIe (PCIe x1, USB 3.0, SATA) on/off switch

Storage Device

- 1 x 2.5" HDD/SSD (Additional 1 x 2.5" tray upon request)
- 1 x M.2 2242 Key M, 1 x M.2 2242 Key B
- 1 x mSATA



Expansion Slot

- 1 x PCIe 4.0 x4 up to 25W/slot, Max. length: 169mm

Power Requirements

- AT/ATX power mode (Default ATX mode)
- Power input: +9 to 30VDC

Dimensions

- 215mm (W) x 272mm (D) x 94mm (H) without wall-mount bracket
(8.46" x 10.7" x 3.7")

Weight

- Net Weight: 5.2kg
- Gross Weight: 7.1kg

Construction

- Aluminum chassis with fanless design

Environment

- Operating temperature: Ambient with air flow: -20°C to 60°C (according to IEC60068-2-1, IEC60068-2-2, IEC60068-2-14)
- Storage temperature: -20°C to 80°C
- Relative humidity: 10% to 95% (non-condensing)
- Shock protection:
 - HDD: 20G@wallmount, half sine, 11ms(operation), IEC600682-27
 - SSD: 50G@wallmount, half sine, 11ms(operation), IEC600682-27
- Vibration protection w/ HDD condition:
 - Random: 0.5Grms@5~500Hz, IEC60068-2-64
 - Sinusoidal: 0.5Grms@5~500Hz, IEC60068-2-6
- Vibration protection w/ SSD condition:
 - Random: 2Grms@5~500 Hz, IEC60068-2-64
 - Sinusoidal: 2Grms@5~500 Hz, IEC60068-2-6

Certifications


- CE
- FCC Class A
- UL

OS Support List

- Windows 11
- Windows 10 IoT Enterprise, 64-bit

NISE 3910E Parts

Front Panel

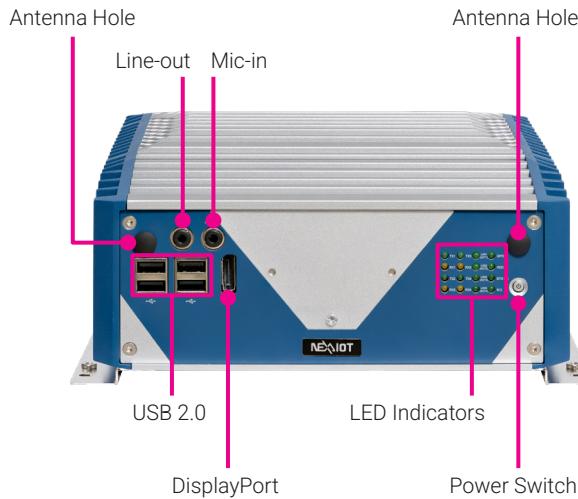

Antenna Hole

The external antenna mounting holes are used to mount and connect optional external antennas.

Line out

Used to connect a headphone or a speaker.

Mic in

Used to connect an external microphone.

USB 2.0

Used to connect USB 2.0/1.1 devices.

DisplayPort

Used to connect a DisplayPort interface monitor.

LED Indicators


Indicate the COM port, LAN, GPO, storage, and M.2 activity as well as the low battery status of the system.

Power Switch

Press to power-on or power-off the system.



Rear Panel

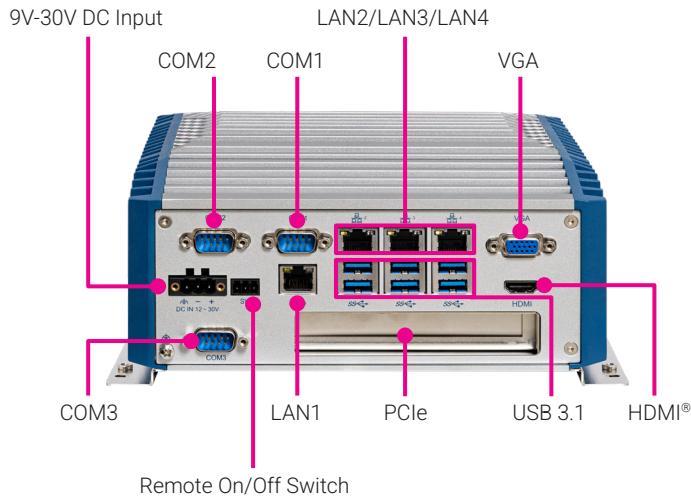

LAN1 and LAN2 support the Preboot eXecution Environment (PXE), defaulted to disabled in BIOS for booting from the LAN, as well as Wake-on-LAN (WoL) functionality.

9V-30V DC Input

Used to plug a DC power cord.

COM1 and COM2

DB9 ports used to connect RS-232/422/485 compatible devices.

LAN2*/LAN3/LAN4

Used to connect the system to a local area network.

VGA

Used to connect a VGA interface monitor.

COM3

DB9 port used to connect RS-232 device.

Remote On/Off Switch

Used to connect a remote to power on/off the system.

LAN1*

Used to connect the system to a local area network.

PCIe Expansion Slot

Used to install a PCIe add-on card.

USB 3.1 Gen 1


Used to connect USB 3.1/2.0 devices.

HDMI®

Used to connect an HDMI® interface monitor.



NISE 3910E Mechanical Dimensions

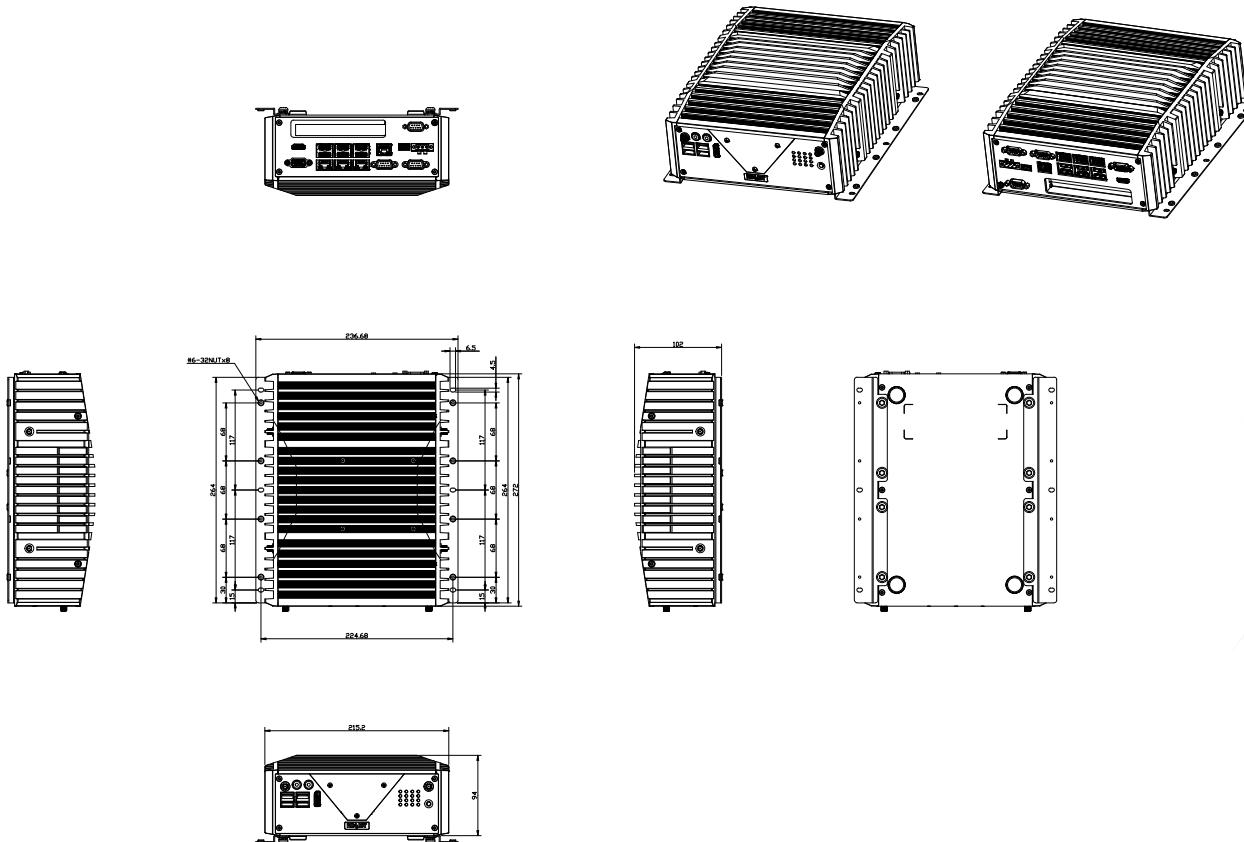

NISE 3910E16/E2/P2/P2E



Front View



Rear View

Key Features

- Support 14th/13/12th Gen Intel® Core™ i3/i5/i7/i9 LGA1700 socket type embedded processor
- Intel® Q670E PCH
- Support 2 x DDR5 SO-DIMM socket, up to 64GB
- Four Intel® i226-IT LAN ports, support WoL and PXE
- 1 x DP, 1 x HDMI®, and 1 x VGA with independent display
- 1 x M.2 3042/3052 Key B support LTE/5G module
- 1 x Outside accessible M.2 2242 Key M with PCIe x4, support NVMe
- 6 x USB 3.1 Gen 1, 4 x USB 2.0
- 2 x Isolated RS-232/422/485 with auto-flow and 2 x RS-232
- 1 x Mini PCIe slot, support optional Wi-Fi, 3.5G, 4G LTE
- 1 x 2.5" SATA HDD/SSD (additional 1 x 2.5" SATA upon request)
- TPM 2.0 default onboard

NISE 3910E16/E2/P2/P2E Hardware Specifications

CPU Support

- Support 14th/13th/12th Gen Intel® Core™ i3/i5/i7/i9 LGA1700 socket type embedded processors
 - Intel® Core™ i7-14700T, 8P+12E, 1.3GHz, 33M Cache
 - Intel® Core™ i5-14500T, 6P+8E, 1.7GHz, 24M Cache
 - Intel® Core™ i3-14100T, 4P+4E, 2.7GHz, 12M Cache
 - Intel® Core™ i9-13900TE, 8P+16E, 1.0GHz, 36M Cache
 - Intel® Core™ i7-13700TE, 8P+8E, 1.1GHz, 30M Cache
 - Intel® Core™ i5-13500TE, 6P+8E, 1.3GHz, 24M Cache
 - Intel® Core™ i3-13100TE, 4P+4E, 2.4GHz, 12M Cache
 - Intel® Core™ i9-12900TE, 8P+8E, 1.1GHz, 30M Cache
 - Intel® Core™ i7-12700TE, 8P+4E, 1.4GHz, 25M Cache
 - Intel® Core™ i5-12500TE, 6P+6E, 1.9GHz, 18M Cache
 - Intel® Core™ i3-12100TE, 4P+4E, 2.1GHz, 12M Cache

Main Memory

- DDR5 4800 SO-DIMM socket, supports up to 64GB

Display Option

- Three independent display: HDMI®, DP, VGA

I/O Interface-Front

- 1 x ATX power on/off switch
- LED indicators:
 - 4 x LAN active
 - 1 x GPO status
 - 4 x COM Tx/Rx
 - 1 x HDD/SSD status
 - 1 x Battery low
 - 1 x M.2

- 1 x DP
- 2 x Antenna holes
- 1 x Outside accessible M.2 2242 Key M (PCIe x4, SATA)
- 1 x SIM card holder
- 4 x USB 2.0 Type A (500mA/port)
- 1 x Line out and 1 x mic-in

I/O Interface-Rear

- 1 x HDMI®
- 1 x VGA port
- 6 x USB3.1 Gen 1 Type A (900mA per each)
- 4 x Intel® I226-IT 2.5GbE LAN ports; support WoL & PXE
- 2 x Isolated RS-232/422/485
- 2 x RS-232
- 1 x 3-pin DC input, support +12 to 30VDC input
- 1 x 3-pin remote power on/off switch

I/O Interface-Internal

- 8 x GPI and 8 x GPO (5V, TTL type)
- 1 x M.2 Key B 2242/3042/3052 (PCIe x2, SATA, USB3.0)
- 1 x Mini PCIe (PCIe x1, USB 3.0, SATA)

Storage Device

- 1 x 2.5" HDD/SSD (Additional 1 x 2.5" tray upon request)
- 1 x M.2 2242 Key M, 1 x M.2 2242 Key B
- 1 x mSATA



Expansion Slot

- 1 x PCIe 4.0 x16 (NISE 3910E16) up to 75W, Max. length: 240mm
- 2 x PCIe 4.0 x4 (NISE 3910E2) up to 10W/slot, Max. length: 169mm & 240mm
- 2 x PCI (NISE 3910P2) up to 10W/slot, Max. length: 169mm & 240mm
- 1 x PCIe 4.0 x4 + 1 x PCI (NISE 3910P2E) up to 10W/slot, Max. length: 169mm & 240mm

Power Requirements

- AT/ATX power mode (Default ATX mode)
- Power input: +9 to 30VDC

Dimensions

- 215mm (W) x 272mm (D) x 115mm (H) without wall-mount bracket
(8.46" x 10.7" x 4.5")

Weight

- Net Weight: 5.5kg (NISE 3910E2/P2/P2E), 5.6kg (NISE3910E16)
- Gross Weight: 7kg (NISE 3910E2/P2/P2E), 7.4kg (NISE3910E16)

Construction

- Aluminum chassis with fanless design

Environment

- Operating temperature: Ambient with air flow: -20°C to 60°C (according to IEC60068-2-1, IEC60068-2-2, IEC60068-2-14)
- Storage temperature: -20°C to 80°C
- Relative humidity: 10% to 95% (non-condensing)
- Shock protection:
 - HDD: 20G@wallmount, half sine, 11ms(operation), IEC600682-27
 - SSD: 50G@wallmount, half sine, 11ms(operation), IEC600682-27

Vibration protection w/ HDD condition:

- Random: 0.5Grms@5~500Hz, IEC60068-2-64
- Sinusoidal: 0.5Grms@5~500Hz, IEC60068-2-6

Vibration protection w/ SSD condition:

- Random: 2Grms@5~500 Hz, IEC60068-2-64
- Sinusoidal: 2Grms@5~500 Hz, IEC60068-2-6

Certifications


- CE
- FCC Class A
- UL

OS Support List

- Windows 11
- Windows 10 IoT Enterprise, 64-bit

NISE 3910E16/E2/P2/P2E Parts

Front Panel

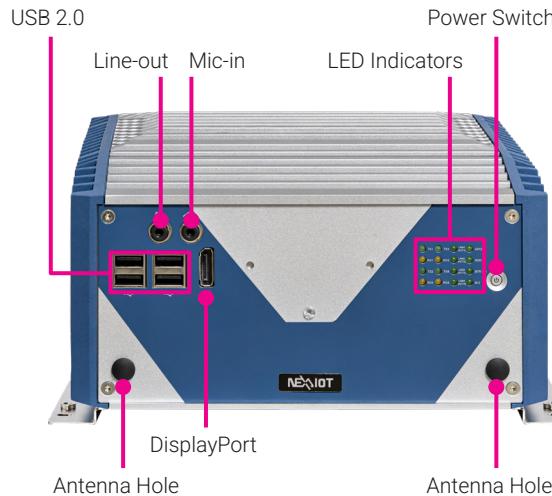

USB 2.0

Used to connect USB 2.0/1.1 devices.

Line out

Used to connect a headphone or a speaker.

Mic in

Used to connect an external microphone.

LED Indicators

Indicate the COM port, LAN, GPO, storage, and M.2 activity as well as the low battery status of the system.

Power Switch

Press to power-on or power-off the system.


Antenna Hole

The external antenna mounting holes are used to mount and connect optional external antennas.

DisplayPort

Used to connect a DisplayPort interface monitor.

Rear Panel

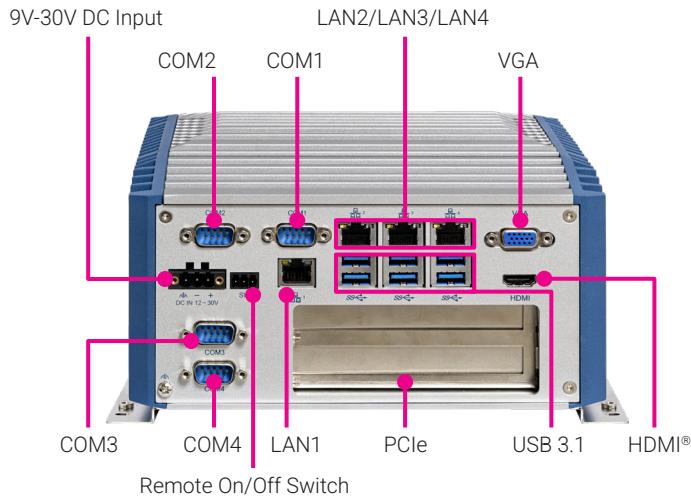

LAN1 and LAN2 support the Preboot eXecution Environment (PXE), defaulted to disabled in BIOS for booting from the LAN, as well as Wake-on-LAN (WoL) functionality.

9V-30V DC Input

Used to plug a DC power cord.

COM1 and COM2

DB9 ports used to connect RS-232/422/485 compatible devices.

LAN2*/LAN3/LAN4

Used to connect the system to a local area network.

VGA

Used to connect a VGA interface monitor.

COM3 and COM4

DB9 ports used to connect RS-232 device.

Remote On/Off Switch

Used to connect a remote to power on/off the system.

LAN1*

Used to connect the system to a local area network.

PCIe Expansion Slot

Used to install PCIe add-on cards.


USB 3.1 Gen 1

Used to connect USB 3.1/2.0 devices.

HDMI®

Used to connect an HDMI® interface monitor.

NISE 3910E16/E2/P2/P2E Mechanical Dimensions

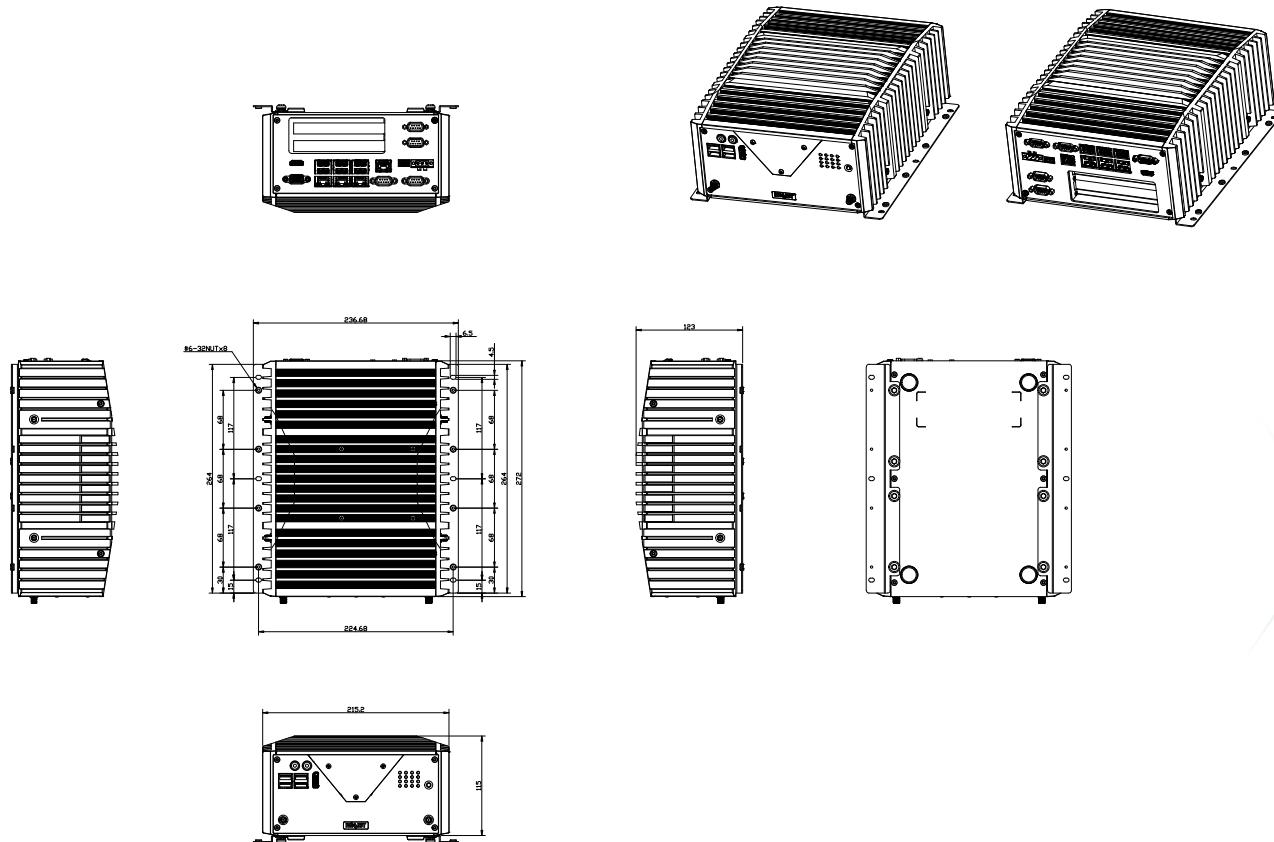

NISE 3910R



Front View



Rear View

Key Features

- Support 14th/13th/12th Gen Intel® Core™ i3/i5/i7/i9 LGA1700 socket type embedded processor
- Intel® Q670E PCH
- Support 2 x DDR5 SO-DIMM socket, up to 64GB
- Four Intel® i226-IT LAN ports, support WoL and PXE
- 1 x DP, 1 x HDMI®, and 1 x VGA with independent display
- 1 x M.2 3042/3052 Key B support LTE/5G module
- 1 x Outside accessible M.2 2242 Key M with PCIe x4, support NVMe
- 6 x USB 3.1 Gen 1, 4 x USB 2.0
- 2 x Isolated RS-232/422/485 with auto-flow
- 1 x Mini PCIe slot, support optional Wi-Fi, 3.5G, 4G LTE
- 2 x 2.5" SATA HDD/SSD
- TPM 2.0 default onboard

NISE 3910R Hardware Specifications

CPU Support

- Support 14th/13th/12th Gen Intel® Core™ i3/i5/i7/i9 LGA1700 socket type embedded processors
 - Intel® Core™ i7-14700T, 8P+12E, 1.3GHz, 33M Cache
 - Intel® Core™ i5-14500T, 6P+8E, 1.7GHz, 24M Cache
 - Intel® Core™ i3-14100T, 4P+4E, 2.7GHz, 12M Cache
 - Intel® Core™ i9-13900TE, 8P+16E, 1.0GHz, 36M Cache
 - Intel® Core™ i7-13700TE, 8P+8E, 1.1GHz, 30M Cache
 - Intel® Core™ i5-13500TE, 6P+8E, 1.3GHz, 24M Cache
 - Intel® Core™ i3-13100TE, 4P+4E, 2.4GHz, 12M Cache
 - Intel® Core™ i9-12900TE, 8P+8E, 1.1GHz, 30M Cache
 - Intel® Core™ i7-12700TE, 8P+4E, 1.4GHz, 25M Cache
 - Intel® Core™ i5-12500TE, 6P+6E, 1.9GHz, 18M Cache
 - Intel® Core™ i3-12100TE, 4P+4E, 2.1GHz, 12M Cache

Main Memory

- DDR5 4800 SO-DIMM socket, supports up to 64GB

Display Option

- Three independent display: HDMI®, DP, VGA

I/O Interface-Front

- 1 x ATX power on/off switch
- LED indicators:
 - 4 x LAN active
 - 1 x GPO status
 - 4 x COM Tx/Rx
 - 1 x HDD/SSD status
 - 1 x Battery low
 - 1 x M.2

- 1 x DP
- 2 x Antenna holes
- 1 x Outside accessible M.2 2242 Key M (PCIe x4, SATA)
- 1 x SIM card holder
- 4 x USB 2.0 Type A (500mA/port)
- 1 x Line out and 1 x mic-in

I/O Interface-Rear

- 1 x HDMI®
- 1 x VGA port
- 6 x USB 3.1 Gen1 Type A (900mA per each)
- 4 x Intel® I226-IT 2.5GbE LAN ports; support WoL & PXE
- 2 x Isolated RS-232/422/485
- 1 x 3-pin DC input, support +12 to 30VDC input
- 1 x 3-pin remote power on/off switch

I/O Interface-Internal

- 8 x GPI and 8 x GPO (5V, TTL type)
- 1 x M.2 Key B 2242/3042/3052 (PCIe x2, SATA, USB 3.0)
- 1 x Mini PCIe (PCIe x1, USB 3.0, SATA)

Storage Device

- 2 x 2.5" HDD/SSD
- 1 x M.2 2242 Key M, 1 x M.2 2242 Key B
- 1 x mSATA

Power Requirements

- AT/ATX power mode (Default ATX mode)
- Power input: +9 to 30VDC



Dimensions

- 215mm (W) x 272mm (D) x 94mm (H) without wall-mount bracket
(8.46" x 10.7" x 3.7")

Weight

- Net Weight: 5.3kg
- Gross Weight: 7.2kg

Construction

- Aluminum chassis with fanless design

Environment

- Operating temperature: Ambient with air flow: -20°C to 60°C (according to IEC60068-2-1, IEC60068-2-2, IEC60068-2-14)
- Storage temperature: -20°C to 80°C
- Relative humidity: 10% to 95% (non-condensing)
- Shock protection:
 - HDD: 20G@wallmount, half sine, 11ms(operation), IEC600682-27
 - SSD: 50G@wallmount, half sine, 11ms(operation), IEC600682-27
- Vibration protection w/ HDD condition:
 - Random: 0.5Grms@5~500Hz, IEC60068-2-64
 - Sinusoidal: 0.5Grms@5~500Hz, IEC60068-2-6
- Vibration protection w/ SSD condition:
 - Random: 2Grms@5~500 Hz, IEC60068-2-64
 - Sinusoidal: 2Grms@5~500 Hz, IEC60068-2-6

Certifications


- CE
- FCC Class A
- UL

OS Support List

- Windows 11
- Windows 10 IoT Enterprise, 64-bit

NISE 3910R Parts

Front Panel

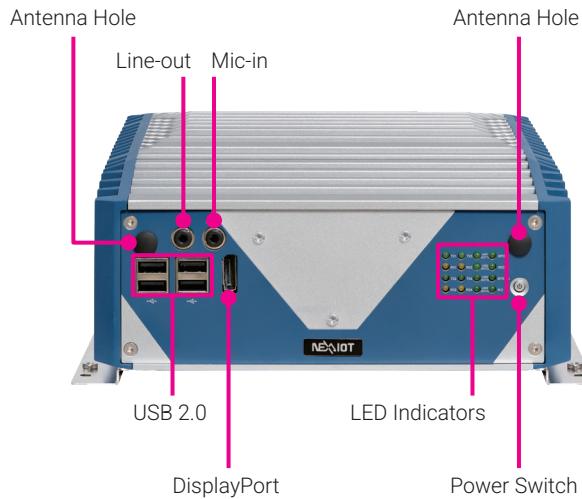

Antenna Hole

The external antenna mounting holes are used to mount and connect optional external antennas.

Line-out

Used to connect a headphone or a speaker.

Mic-in

Used to connect an external microphone.

USB 2.0

Used to connect USB 2.0/1.1 devices.

DisplayPort

Used to connect a DisplayPort interface monitor.

LED Indicators


Indicate the COM port, LAN, GPO, storage, and M.2 activity as well as the low battery status of the system.

Power Switch

Press to power-on or power-off the system.



Rear Panel

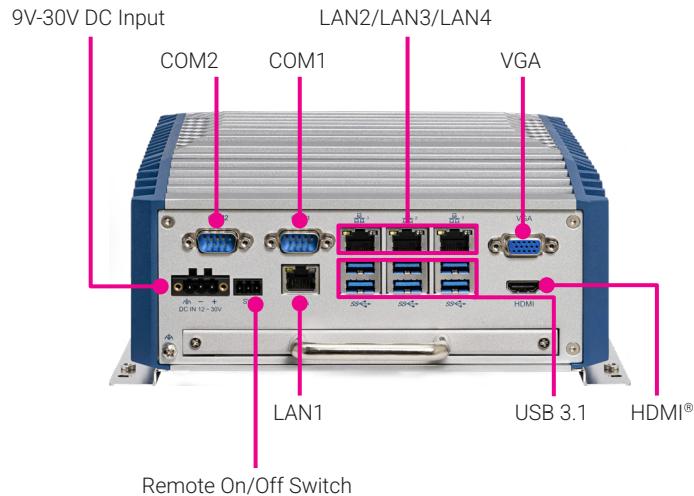

LAN1 and LAN2 support the Preboot eXecution Environment (PXE), defaulted to disabled in BIOS for booting from the LAN, as well as Wake-on-LAN (WoL) functionality.

COM1 and COM2

DB9 ports used to connect RS-232/422/485 compatible devices.

LAN2*/LAN3/LAN4

Used to connect the system to a local area network.

VGA

Used to connect a VGA interface monitor.

9V-30V DC Input

Used to plug a DC power cord.

Remote On/Off Switch

Used to connect a remote to power on/off the system.

LAN1*

Used to connect the system to a local area network.


USB 3.1 Gen 1

Used to connect USB 3.1/2.0 devices.

HDMI®

Used to connect an HDMI® interface monitor.

NISE 3910R Mechanical Dimensions

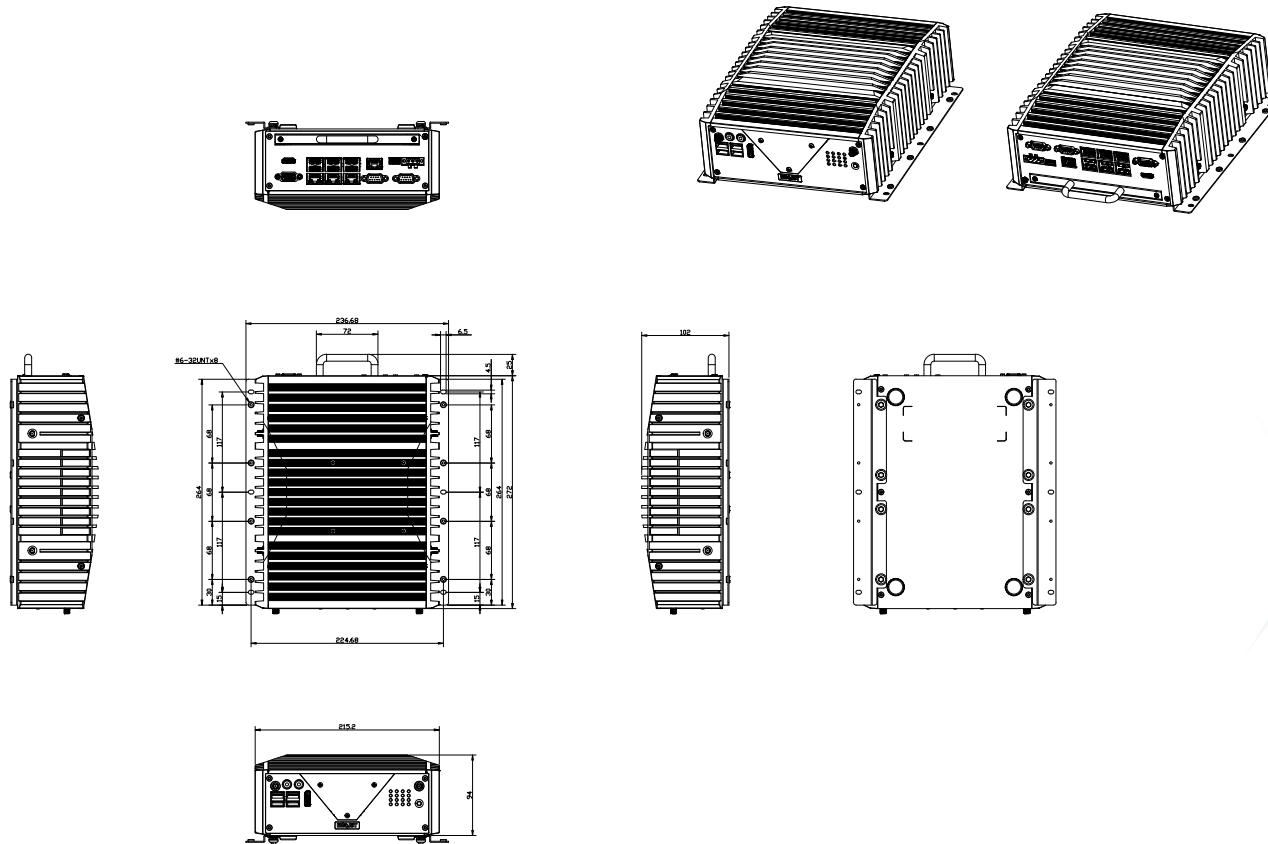

CHAPTER 2: JUMPERS AND CONNECTORS

This chapter describes how to set the jumpers and connectors on the NISE 3910 series motherboard.

Before You Begin

- Ensure you have a stable, clean working environment. Dust and dirt can get into components and cause a malfunction. Use containers to keep small components separated.
- Adequate lighting and proper tools can prevent you from accidentally damaging the internal components. Most of the procedures that follow require only a few simple tools, including the following:
 - A Philips screwdriver
 - A flat-tipped screwdriver
 - A set of jewelers screwdrivers
 - A grounding strap
 - An anti-static pad
- Using your fingers can disconnect most of the connections. It is recommended that you do not use needle-nosed pliers to disconnect connections as these can damage the soft metal or plastic parts of the connectors.
- Before working on internal components, make sure that the power is off. Ground yourself before touching any internal components, by touching a metal object. Static electricity can damage many of the electronic components. Humid environments tend to have less static electricity

than dry environments. A grounding strap is warranted whenever danger of static electricity exists.

Precautions

Computer components and electronic circuit boards can be damaged by discharges of static electricity. Working on computers that are still connected to a power supply can be extremely dangerous.

Follow the guidelines below to avoid damage to your computer or yourself:


- Always disconnect the unit from the power outlet whenever you are working inside the case.
- If possible, wear a grounded wrist strap when you are working inside the computer case. Alternatively, discharge any static electricity by touching the bare metal chassis of the unit case, or the bare metal body of any other grounded appliance.
- Hold electronic circuit boards by the edges only. Do not touch the components on the board unless it is necessary to do so. Don't flex or stress the circuit board.
- Leave all components inside the static-proof packaging that they shipped with until they are ready for installation.
- Use correct screws and do not over tighten screws.

Jumper Settings


A jumper is the simplest kind of electric switch. It consists of two metal pins and a cap. When setting the jumpers, ensure that the jumper caps are placed on the correct pins. When the jumper cap is placed on both pins, the jumper is short. If you remove the jumper cap, or place the jumper cap on just one pin, the jumper is open.

Refer to the illustrations below for examples of what the 2-pin and 3-pin jumpers look like when they are short (on) and open (off).

Two-Pin Jumpers: Open (Left) and Short (Right)

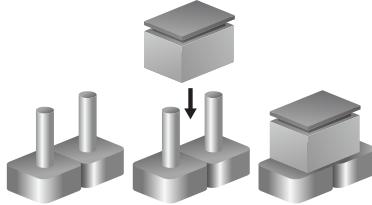


Three-Pin Jumpers: Pins 1 and 2 are Short

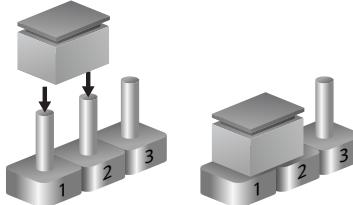

Locations of the Jumpers and Connectors for the NISE 3910 Series


The following figures show the motherboard used in the NISE 3910 series, indicating the locations of jumpers and connectors. Refer to this chapter for detailed pin settings and definitions of connectors marked in pink on these figures.

Top View

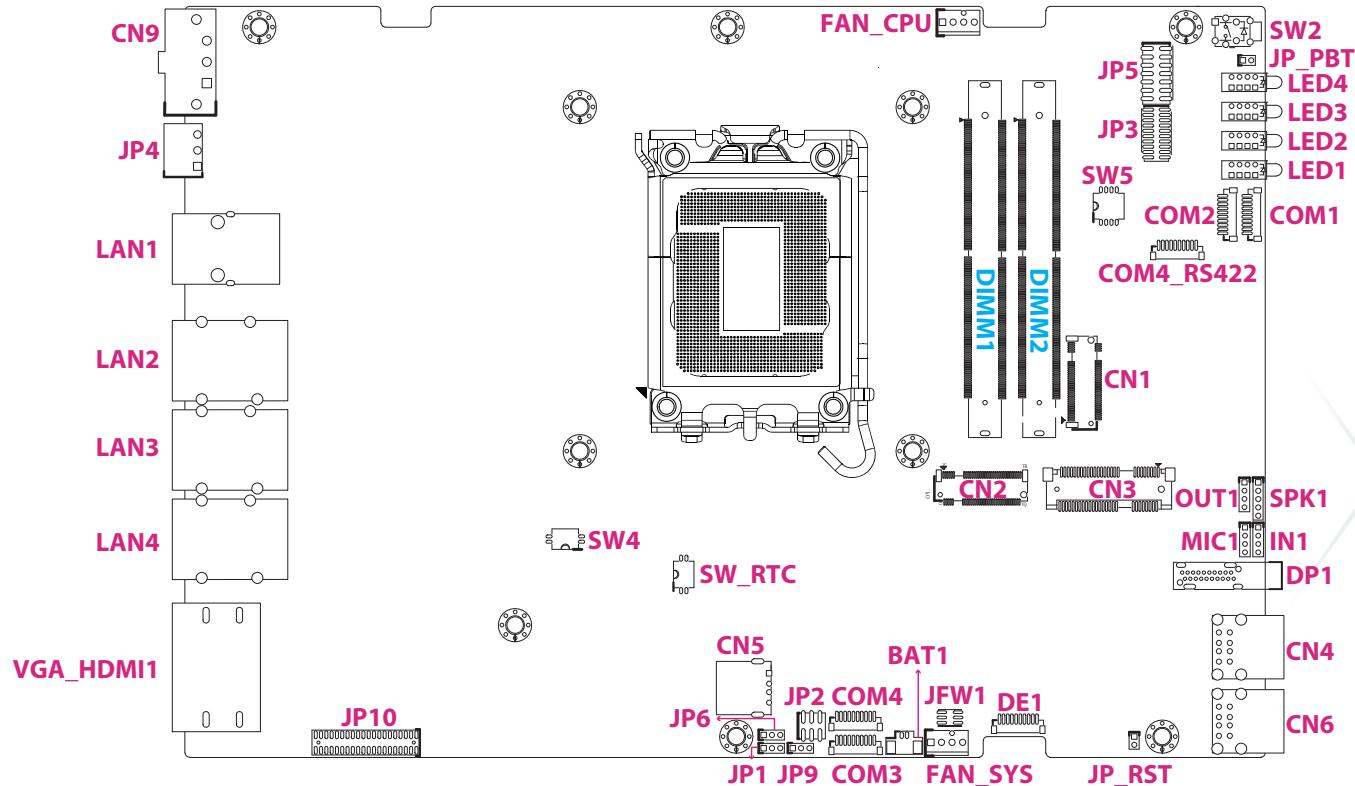



Bottom View

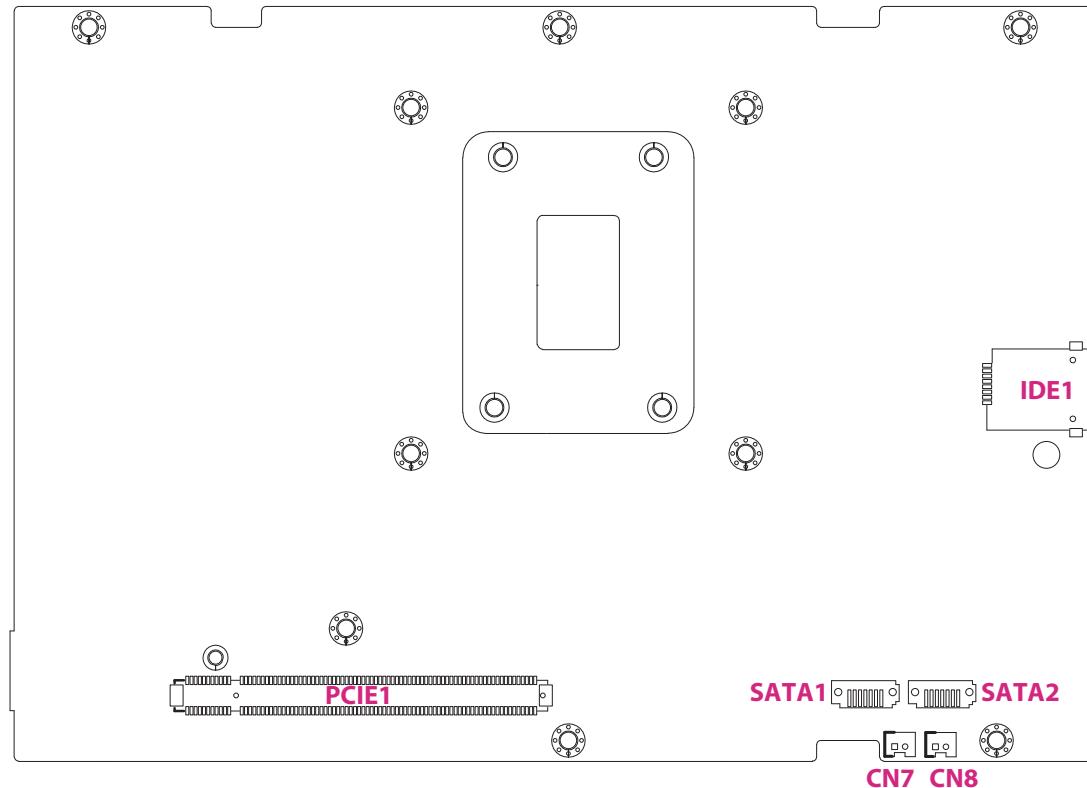




Jumpers and DIP Switch Settings

COM3 Power Output Select

Connector location: JP2

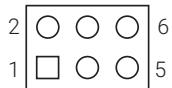

| Pin | Settings |
|--------|----------|
| 1-2 On | 5V |
| 3-4 On | 12V |
| 5-6 On | RI |

| Pin | Definition |
|-----|---------------|
| 1 | VCC5 |
| 2 | RI_VCC12_VCC5 |
| 3 | VCC12 |
| 4 | VCC12_VCC5 |
| 5 | COM3_RIL |
| 6 | RI_VCC12_VCC5 |

AT/ATX Power Select

Connector location: JP9



| Pin | Settings |
|--------|--------------------|
| 1-2 On | AT Mode |
| 2-3 On | ATX Mode (Default) |

| Pin | Settings |
|-----|------------|
| 1 | AT_PWRBT# |
| 2 | S_PWRBTN# |
| 3 | ATX_PWRBT# |



PCIe Select

Connector location: SW4



Clear CMOS

Connector location: SW_RTC



| Pin | Settings | |
|-----|----------|-----------------------------------|
| 1 | On | One PCIe 4.0 x16 reversed |
| | Off | One PCIe 4.0 x16 normal (Default) |
| 2 | On | Two PCIe slots 4.0 x8 |
| | Off | One PCIe 4.0 x16 (Default) |

| Pin | Settings |
|-----|----------|
| 1 | CFG2 |
| 2 | CFG3 |
| 3 | GND |
| 4 | GND |

| Pin | Settings |
|---------|------------------|
| All off | Normal (Default) |
| All on | Clear CMOS |


| Pin | Settings |
|-----|-----------|
| 1 | RTCRST_N |
| 2 | SRTCRST_N |
| 3 | GND |
| 4 | GND |

Connector Pin Definitions

External I/O Interfaces - Front Panel

USB 2.0 Ports


Connector location: CN4

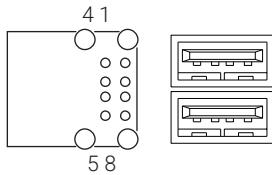

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | 5VUSB2_P1 | 5 | 5VUSB2_P1 |
| 2 | USB2N_10 | 6 | USB2N_11 |
| 3 | USB2P_10 | 7 | USB2P_11 |
| 4 | GND | 8 | GND |

USB 2.0 Ports

Connector location: CN6

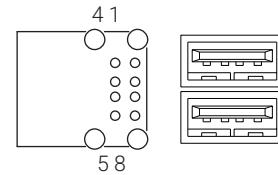


| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | 5VUSB2_P2 | 5 | 5VUSB2_P2 |
| 2 | USB2N_12 | 6 | USB2N_13 |
| 3 | USB2P_12 | 7 | USB2P_13 |
| 4 | GND | 8 | GND |




DisplayPort

Connector location: DP1

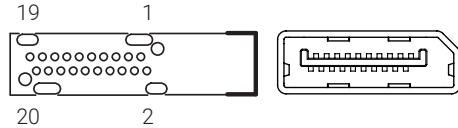

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | LANE0_P | 2 | GND |
| 3 | LANE0_N | 4 | LANE1_P |
| 5 | GND | 6 | LANE1_N |
| 7 | LANE2_P | 8 | GND |
| 9 | LANE2_N | 10 | LANE3_P |
| 11 | GND | 12 | LANE3_N |
| 13 | CONFIG1 | 14 | CONFIG2 |
| 15 | AUX_P | 16 | GND |
| 17 | AUX_N | 18 | DPHPD |
| 19 | GND | 20 | 3V3DPPWR |

LED Indicators

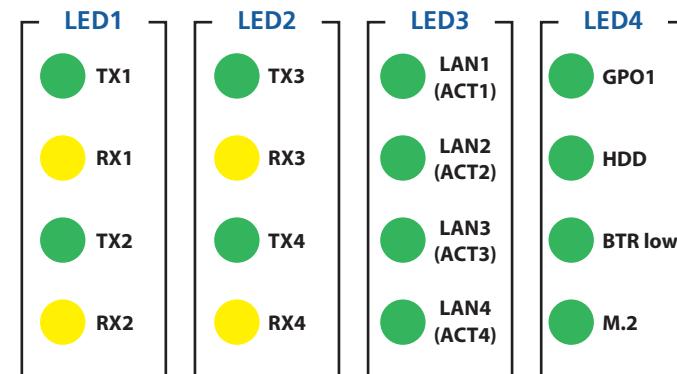


TX1/RX1 represents the LED light for COM port1, and so on up to COM port 4.



LED1

LED light: Green (LED1/3), Yellow (LED2/4)


Connector location: LED1

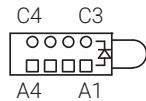

LED2

LED light: Green (LED1/3), Yellow (LED2/4)

Connector location: LED2

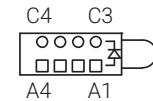

| Pin | Definition | Pin | Definition |
|-----|------------|-----|-------------|
| A1 | RX2_P | C1 | COM2_RXLEDN |
| A2 | TX2_P | C2 | COM2_TXLEDN |
| A3 | RX1_P | C3 | COM1_RXLEDN |
| A4 | TX1_P | C4 | COM1_TXLEDN |


| Pin | Definition | Pin | Definition |
|-----|------------|-----|-------------|
| A1 | RX4_P | C1 | COM4_RXLEDN |
| A2 | TX4_P | C2 | COM4_TXLEDN |
| A3 | RX3_P | C3 | COM3_RXLEDN |
| A4 | TX3_P | C4 | COM3_TXLEDN |



LED3

LED light: Green


Connector location: LED3

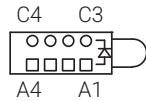

LED4

LED light: Green

Connector location: LED4

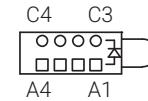


| Pin | Definition | Pin | Definition |
|-----|-----------------|-----|-------------|
| A1 | LAN4_ACT#_LED_P | C1 | LAN4_LEDCTL |
| A2 | LAN3_ACT#_LED_P | C2 | LAN3_LEDCTL |
| A3 | LAN2_ACT#_LED_P | C3 | LAN2_LEDCTL |
| A4 | LAN1_ACT#_LED_P | C4 | LAN1_LEDCTL |

| Pin | Definition | Pin | Definition |
|-----|-----------------|-----|-------------|
| A1 | LAN4_ACT#_LED_P | C1 | LAN4_LEDCTL |
| A2 | LAN3_ACT#_LED_P | C2 | LAN3_LEDCTL |
| A3 | LAN2_ACT#_LED_P | C3 | LAN2_LEDCTL |
| A4 | LAN1_ACT#_LED_P | C4 | LAN1_LEDCTL |



Power Button

Connector location: SW2

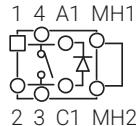


| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | GND | 2 | PBT_PU |
| 3 | PBT_PU | 4 | GND |
| A1 | LED+ | C1 | LED- |
| MH1 | NC | MH2 | NC |



External I/O Interfaces - Rear Panel

DC Power Input

Connector location: CN9

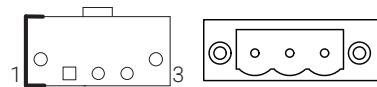

Remote Power On/Off

Connector location: JP4





| Pin | Definition |
|-----|------------|
| 1 | VINPIN1 |
| 2 | VINVSS |
| 3 | VINPIN3 |

| Pin | Definition |
|-----|------------|
| 1 | PWRBTN#_J |
| 2 | GND |
| 3 | SLPS3_RM |



LAN Port 1

Connector location: LAN1

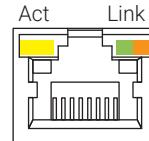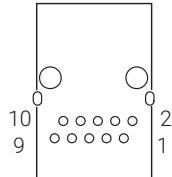

| Pin | Definition | Pin | Definition |
|-----|-----------------|-----|---------------|
| 1 | LAN1_MDIAP | 2 | LAN1_MDIAN |
| 3 | LAN1_MDIBP | 4 | LAN1_MDIBN |
| 5 | LAN1_TVCC1 | 6 | GND |
| 7 | LAN1_MDICP | 8 | LAN1_MDICN |
| 9 | LAN1_MDIIDP | 10 | LAN1_MDIIDN |
| 11 | LAN1_LED2500L_R | 12 | LAN1_LED1GL_R |
| 13 | LAN1_LEDACTL_R | 14 | V3P3A_LAN1 |

| Act | Status |
|-----------------|---------------|
| Flashing Yellow | Data activity |
| Off | No activity |


| Link | Status |
|---------------|----------------------|
| Steady Green | 2.5G/1G network link |
| Steady Orange | 100Mbps network link |
| Off | 10Mbps |



LAN1 and LAN2 support the Preboot eXecution Environment (PXE), defaulted to disabled in BIOS for booting from the LAN, as well as Wake-on-LAN (WoL) functionality.

LAN Port 2 + USB 3.1 Gen1

Connector location: LAN2

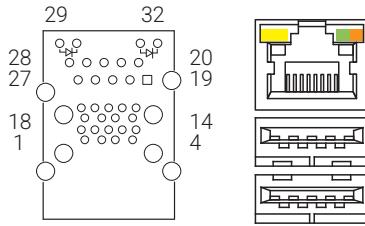

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | 5VUSB3_P1 | 2 | USB2N_1 |
| 3 | USB2P_1 | 4 | GND |
| 5 | USB32_RXN1 | 6 | USB32_RXP1 |
| 7 | GND | 8 | USB32_TXN1 |
| 9 | USB32_TXP1 | 10 | 5VUSB3_P1 |
| 11 | USB2N_2 | 12 | USB2P_2 |
| 13 | GND | 14 | USB32_RXN2 |
| 15 | USB32_RXP2 | 16 | GND |

| Pin | Definition | Pin | Definition |
|-----|---------------|-----|-----------------|
| 17 | USB32_TXN2 | 18 | USB32_TXP2 |
| 19 | LAN2TVCC1 | 20 | LAN2_MDIAP |
| 21 | LAN2_MDIAN | 22 | LAN2_MDIBP |
| 23 | LAN2_MDIBN | 24 | LAN2_MDICP |
| 25 | LAN2_MDICN | 26 | LAN2_MDIDP |
| 27 | LAN2_MDIEN | 28 | GND |
| 29 | V3P3A_LAN2 | 30 | LAN2_LEDACTL_R |
| 31 | LAN2_LED1GL_R | 32 | LAN2_LED2500L_R |




LAN1 and LAN2 support the Preboot eXecution Environment (PXE), defaulted to disabled in BIOS for booting from the LAN, as well as Wake-on-LAN (WoL) functionality.



For more information of LAN port LED indicators, refer to the descriptions provided on the [LAN port 1](#) page.

LAN Port 3 + USB 3.1 Gen1

Connector location: LAN3

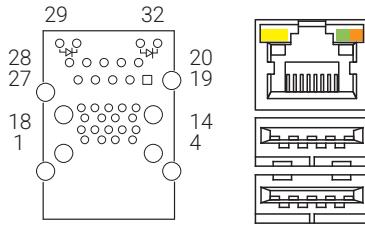

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | 5VUSB3_P2 | 2 | USB2N_3 |
| 3 | USB2P_3 | 4 | GND |
| 5 | USB32_RXN3 | 6 | USB32_RXP3 |
| 7 | GND | 8 | USB32_TXN3 |
| 9 | USB32_TXP3 | 10 | 5VUSB3_P2 |
| 11 | USB2N_4 | 12 | USB2P_4 |
| 13 | GND | 14 | USB32_RXN4 |
| 15 | USB32_RXP4 | 16 | GND |


| Pin | Definition | Pin | Definition |
|-----|---------------|-----|-----------------|
| 17 | USB32_TXN4 | 18 | USB32_TXP4 |
| 19 | LAN3TVCC1 | 20 | LAN3_MDIAP |
| 21 | LAN3_MDIAN | 22 | LAN3_MDIBP |
| 23 | LAN3_MDIBN | 24 | LAN3_MDICP |
| 25 | LAN3_MDICN | 26 | LAN3_MDIDP |
| 27 | LAN3_MDIEN | 28 | GND |
| 29 | V3P3A_LAN3 | 30 | LAN3_LEDACTL_R |
| 31 | LAN3_LED1GL_R | 32 | LAN3_LED2500L_R |



For more information of LAN port LED indicators, refer to the descriptions provided on the [LAN port 1](#) page.

LAN Port 4 + USB 3.1 Gen1

Connector location: LAN4

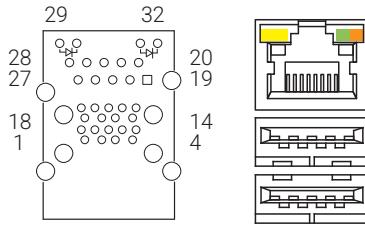

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | 5VUSB3_P3 | 2 | USB2N_5 |
| 3 | USB2P_5 | 4 | GND |
| 5 | USB32_RXN5 | 6 | USB32_RXP5 |
| 7 | GND | 8 | USB32_TXN5 |
| 9 | USB32_TXP5 | 10 | 5VUSB3_P3 |
| 11 | USB2N_6 | 12 | USB2P_6 |
| 13 | GND | 14 | USB32_RXN6 |
| 15 | USB32_RXP6 | 16 | GND |

| Pin | Definition | Pin | Definition |
|-----|---------------|-----|-----------------|
| 17 | USB32_TXN6 | 18 | USB32_TXP6 |
| 19 | LAN4_TVCC1 | 20 | LAN4_MDIAP |
| 21 | LAN4_MDIAN | 22 | LAN4_MDIBP |
| 23 | LAN4_MDIBN | 24 | LAN4_MDICP |
| 25 | LAN4_MDICN | 26 | LAN4_MDIDP |
| 27 | LAN4_MDIEN | 28 | GND |
| 29 | V3P3A_LAN4 | 30 | LAN4_LEDACTL_R |
| 31 | LAN4_LED1GL_R | 32 | LAN4_LED2500L_R |




For more information of LAN port LED indicators, refer to the descriptions provided on the [LAN port 1](#) page.



VGA + HDMI®

Connector location: VGA_HDMI1

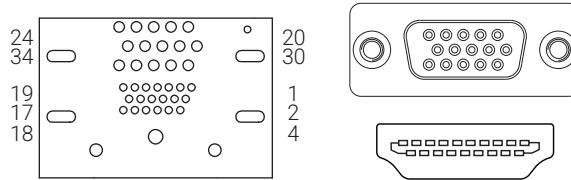

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| A1 | HDMITX2P1 | A2 | GND |
| A3 | HDMITX2N1 | A4 | HDMITX1P1 |
| A5 | GND | A6 | HDMITX1N1 |
| A7 | HDMITX0P1 | A8 | GND |
| A9 | HDMITX0N1 | A10 | HDMICLKP1 |
| A11 | GND | A12 | HDMICLKN1 |
| A15 | HDMIDDCSCL | A16 | HDMIDDCSDA |
| A17 | GND | A18 | VCC5HDMI |
| A19 | HDMIHPD | | |

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| B20 | RED_VGA | B21 | GREEN_VGA |
| B22 | BLUE_VGA | B23 | NC |
| B24 | GND | B25 | GND |
| B26 | GND | B27 | GND |
| B28 | VGA_+5V | B29 | GND |
| B30 | NC | B31 | VGA_SDA_C |
| B32 | HSYNC_VGA | B33 | VSYNC_VGA |
| B34 | GND | | |



Internal Connectors - Top Side

Audio Connectors

Connector location: IN1, MIC1, OUT1, SPK1

IN1: 1  4MIC1: 1  4

IN1

| Pin | Definition |
|-----|------------|
| 1 | LINE1-L1 |
| 2 | AGND |
| 3 | LINEIN_JD |
| 4 | LINE1-R1 |

MIC1

| Pin | Definition |
|-----|------------|
| 1 | MIC_OUT-L |
| 2 | AGND |
| 3 | MIC_JD |
| 4 | MIC_OUT-R |

Connector location: OUT1, SPK1

OUT1: 1  4SPK1: 1  4

OUT1

| Pin | Definition |
|-----|--------------|
| 1 | LINE_OUT_LC |
| 2 | AGND |
| 3 | LINEOUT_JD |
| 4 | LINE_OUT_RC1 |


SPK1

| Pin | Definition |
|-----|------------|
| 1 | OUT-LR+_C |
| 2 | OUT-LR-_C |
| 3 | AGND |
| 4 | OUT-RR+_C |
| 5 | OUT-RR-_C |



RTC Battery Connector

Connector location: BAT1

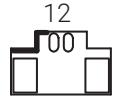


| Pin | Definition |
|-----|------------|
| 1 | GND |
| 2 | 3V_BAT1 |

M.2 Key B

Connector type: M.2 Key B for PCIe/SATA/USB3.2/USB2.0

Connector location: CN2

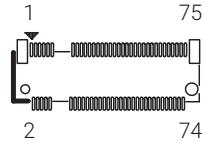

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | GND | 2 | M2LTEPWR |
| 3 | GND | 4 | M2LTEPWR |
| 5 | GND | 6 | M2POWEROFF |
| 7 | USB_M2B_DP | 8 | M2LTEDISL |
| 9 | USB_M2B_DN | 10 | M2SATADSSL |
| 11 | GND | 12 | |
| 13 | | 14 | |
| 15 | | 16 | |
| 17 | | 18 | |

| Pin | Definition | Pin | Definition |
|-----|--------------|-----|----------------|
| 19 | | 20 | |
| 21 | M2LTECONFIG0 | 22 | NC |
| 23 | NC | 24 | NC |
| 25 | NC | 26 | NC |
| 27 | GND | 28 | BKEY_UIM_VPP |
| 29 | USB_M2B_RXN | 30 | BKEY_UIM_RESET |
| 31 | USB_M2B_RXP | 32 | BKEY_UIM_CLK |
| 33 | GND | 34 | BKEY_UIM_DATA |
| 35 | USB_M2B_TXN | 36 | BKEY_UIM_PWR |

Continued on next page



| Pin | Definition | Pin | Definition |
|------------|-------------------|------------|-------------------|
| 37 | USB_M2B_TXP | 38 | NC |
| 39 | GND | 40 | NC |
| 41 | NGFF_PE_SSD_RXP1 | 42 | NC |
| 43 | NGFF_PE_SSD_RXN1 | 44 | NC |
| 45 | GND | 46 | NC |
| 47 | NGFF_PE_SSD_TXN1 | 48 | NC |
| 49 | NGFF_PE_SSD_TXP1 | 50 | M2B_PLTRSTN |
| 51 | GND | 52 | SRCCCLKREQ3L_M2B |
| 53 | CLK_PCIE_M2B_N | 54 | I_WAKEN |
| 55 | CLK_PCIE_M2B_P | 56 | NC |


| Pin | Definition | Pin | Definition |
|------------|-------------------|------------|-------------------|
| 57 | GND | 58 | NC |
| 59 | NC | 60 | NC |
| 61 | NC | 62 | NC |
| 63 | NC | 64 | NC |
| 65 | NC | 66 | NC |
| 67 | M2LTERSTL | 68 | M2SUSCLK |
| 69 | M2LTECONFIG1 | 70 | M2LTEPWR |
| 71 | GND | 72 | M2LTEPWR |
| 73 | GND | 74 | M2LTEPWR |
| 75 | M2LTECONFIG2 | | |



M.2 Key M

Connector type: M.2 Key M for PCIe/SATA

Connector location: CN1

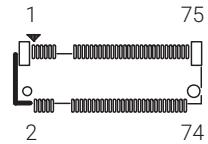

| Pin | Definition | Pin | Definition |
|-----|---------------|-----|------------|
| 1 | GND | 2 | M2MKEYPWR |
| 3 | GND | 4 | M2MKEYPWR |
| 5 | H_PCIEM2MRXN3 | 6 | NC |
| 7 | H_PCIEM2MRXP3 | 8 | NC |
| 9 | GND | 10 | M2SATADSSL |
| 11 | H_PCIEM2MTXN3 | 12 | M2MKEYPWR |
| 13 | H_PCIEM2MTXP3 | 14 | M2MKEYPWR |
| 15 | GND | 16 | M2MKEYPWR |
| 17 | H_PCIEM2MRXN2 | 18 | M2MKEYPWR |

| Pin | Definition | Pin | Definition |
|-----|---------------|-----|------------|
| 19 | H_PCIEM2MRXP2 | 20 | NC |
| 21 | GND | 22 | NC |
| 23 | H_PCIEM2MTXN2 | 24 | NC |
| 25 | H_PCIEM2MTXP2 | 26 | NC |
| 27 | GND | 28 | NC |
| 29 | H_PCIEM2MRXN1 | 30 | NC |
| 31 | H_PCIEM2MRXP1 | 32 | NC |
| 33 | GND | 34 | NC |
| 35 | H_PCIEM2MTXN1 | 36 | NC |

Continued on next page




| Pin | Definition | Pin | Definition |
|------------|-------------------|------------|-------------------|
| 37 | H_PCIEM2MTXP1 | 38 | DEVSLP_0 |
| 39 | GND | 40 | NC |
| 41 | PCIE_mSATA_RXN_R | 42 | NC |
| 43 | PCIE_mSATA_RXP_R | 44 | NC |
| 45 | GND | 46 | NC |
| 47 | PCIE_mSATA_TXN_R | 48 | NC |
| 49 | PCIE_mSATA_TXP_R | 50 | M2M_PLTRSTN |
| 51 | GND | 52 | SRCCCLKREQ7L |
| 53 | CLK_PCIE_M2M_N | 54 | I_WAKEN |
| 55 | CLK_PCIE_M2M_P | 56 | NC |

| Pin | Definition | Pin | Definition |
|------------|-------------------|------------|-------------------|
| 57 | GND | 58 | NC |
| 59 | | 60 | |
| 61 | | 62 | |
| 63 | | 64 | |
| 65 | | 66 | |
| 67 | NC | 68 | M2MSUSCLK |
| 69 | PCIE_mSATA_SEL | 70 | M2MKEYPWR |
| 71 | GND | 72 | M2MKEYPWR |
| 73 | GND | 74 | M2MKEYPWR |
| 75 | GND | | |

Mini PCIe Connector

Connector location: CN3

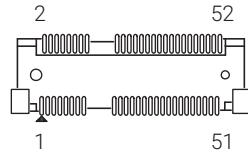

| Pin | Definition | Pin | Definition |
|-----|----------------------|-----|-------------------|
| 1 | I_WAKEN | 14 | UIM_RESET |
| 2 | 3VSBMINIPCIE | 15 | GND |
| 3 | N/A | 16 | UIM_VPP |
| 4 | GND | 17 | N/A |
| 5 | N/A | 18 | GND |
| 6 | 1V5MINIPCIE | 19 | N/A |
| 7 | SRCCLKREQ2L_MINIPCIE | 20 | MINICARD2DIS# |
| 8 | UIM_PWR | 21 | GND |
| 9 | GND | 22 | MINIPCIEPERSTN |
| 10 | UIM_DATA | 23 | PCIE_mSATA_RXN_1R |
| 11 | CLK_PCIE_MINIPCIE_N | 24 | 3VSBMINIPCIE |
| 12 | UIM_CLK | 25 | PCIE_mSATA_RXP_1R |
| 13 | CLK_PCIE_MINIPCIE_P | 26 | GND |


| Pin | Definition | Pin | Definition |
|-----|-------------------|-----|------------------|
| 27 | GND | 40 | GND |
| 28 | 1V5MINIPCIE | 41 | 3VSBMINIPCIE |
| 29 | GND | 42 | N/A |
| 30 | SMB_CLK | 43 | GND |
| 31 | PCIE_mSATA_TXN_1R | 44 | N/A |
| 32 | SMB_DATA | 45 | N/A |
| 33 | PCIE_mSATA_TXP_1R | 46 | N/A |
| 34 | GND | 47 | N/A |
| 35 | GND | 48 | 1V5MINIPCIE |
| 36 | USB2_DN7 | 49 | N/A |
| 37 | GND | 50 | GND |
| 38 | USB2_DP7 | 51 | PCIE_mSATA_SEL_1 |
| 39 | 3VSBMINIPCIE | 52 | 3VSBMINIPCIE |



USB Dongle Connector

Connector type: USB 2.0 Type A

Connector location: CN5

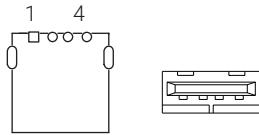

| Pin | Definition |
|-----|------------|
| 1 | VCC5 |
| 2 | USB2N_6_C |
| 3 | USB2P_6_C |
| 4 | GND |

COM Port 1

Connector type: RS-232/RS422/RS485

Connector location: COM1



| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | COM1_DCDL | 2 | COM1_RXD |
| 3 | COM1_TXD | 4 | COM1_DTRL |
| 5 | GND | 6 | COM1_DSRL |
| 7 | COM1_RTSL | 8 | COM1_CTSL |
| 9 | COM1_RIL | 10 | GND |



COM Port 2

Connector type: RS-232/RS422/RS485

Connector location: COM2



COM Port 3

Connector type: RS-232

Connector location: COM3



| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | COM2_DCDL | 2 | COM2_RXD |
| 3 | COM2_TXD | 4 | COM2_DTRL |
| 5 | GND | 6 | COM2_DSRL |
| 7 | COM2_RTSL | 8 | COM2_CTS |
| 9 | COM2_RIL | 10 | GND |

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | COM3_DCDL | 2 | COM3_RXD |
| 3 | COM3_TXD | 4 | COM3_DTRL |
| 5 | GND | 6 | COM3_DSRL |
| 7 | COM3_RTSL | 8 | COM3_CTS |
| 9 | COM3_RIL | 10 | GND |



COM Port 4

Connector type: RS-232

Connector location: COM4



COM4_RS422 (Optional)

Connector type: RS-232

Connector location: COM4_RS422



| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | COM4_DCDL | 2 | COM4_RXD |
| 3 | COM4_TXD | 4 | COM4_DTRL |
| 5 | GND | 6 | COM4_DSRL |
| 7 | COM4_RTSL | 8 | COM4_CTSL |
| 9 | COM4_RIL | 10 | GND |

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | COM1_Z | 2 | COM1_Y |
| 3 | COM1_A | 4 | COM1_B |
| 5 | GND | 6 | NC |
| 7 | NC | 8 | NC |
| 9 | NC | 10 | GND |



Fan Connectors

Connector location: FAN_CPU, FAN_SYS



FAN_CPU


| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | GND | 2 | VCC12 |
| 3 | FAN1TACH | 4 | FAN1PWM |

FAN_SYS

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | GND | 2 | VCC12 |
| 3 | FAN2TACH | 4 | FAN2PWM |

BIOS FW Connector

Connector location: JFW1

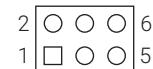


| Pin | Definition |
|-----|-------------|
| 6 | BIOSSPISI |
| 5 | BIOSSPISO |
| 4 | BIOSSPICLK |
| 3 | BIOSSPICSLO |
| 2 | GND |
| 1 | VSPI |




GPIO Connector

Connector location: JP3

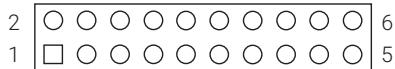

LED Connector

Connector location: JP5

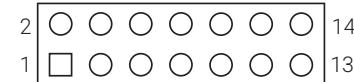

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | VCC5 | 2 | VCC5 |
| 3 | SGPI1 | 4 | SGP01 |
| 5 | SGPI2 | 6 | SGP02 |
| 7 | SGPI3 | 8 | SGP03 |
| 9 | SGPI4 | 10 | SGP04 |
| 11 | SGPI5 | 12 | SGP05 |
| 13 | SGPI6 | 14 | SGP06 |
| 15 | SGPI7 | 16 | SGP07 |
| 17 | SGPI8 | 18 | SGP08 |
| 19 | GND | 20 | GND |

| Pin | Definition | Pin | Definition |
|-----|-----------------|-----|-------------|
| 1 | DIAG1_P | 2 | BAT_LOWL |
| 3 | LAN1_ACT#_LED_P | 4 | LAN1_LEDCTL |
| 5 | LAN2_ACT#_LED_P | 6 | LAN2_LEDCTL |
| 7 | LAN3_ACT#_LED_P | 8 | LAN3_LEDCTL |
| 9 | LAN4_ACT#_LED_P | 10 | LAN4_LEDCTL |
| 11 | SATALED#_P | 12 | I_SATALEDN |
| 13 | SGP33_P | 14 | S_GP33 |



SMBUS Connector

Connector location: JP6




| Pin | Settings |
|-----|------------|
| 1 | SMB_CLK_C |
| 2 | SMB_DATA_C |
| 3 | GND |



Power Module Connector

Connector location: JP10

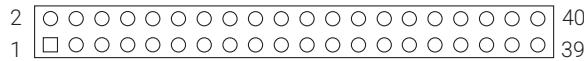

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | VIN_M | 2 | VIN_M |
| 3 | VIN_M | 4 | VIN_M |
| 5 | VIN_M | 6 | VIN_M |
| 7 | N/A | 8 | N/A |
| 9 | GND | 10 | GND |
| 11 | GND | 12 | GND |
| 13 | GND | 14 | GND |
| 15 | GND | 16 | GND |
| 17 | GND | 18 | GND |
| 19 | GND | 20 | GND |

| Pin | Definition | Pin | Definition |
|-----|--------------|-----|--------------|
| 21 | GND | 22 | GND |
| 23 | GND | 24 | GND |
| 25 | UART3_TXD | 26 | UART3_RXD_PM |
| 27 | I_SLP3_N | 28 | PM_DETECTL |
| 29 | Remote_PBTPU | 30 | N/A |
| 31 | VCC12_PCIE | 32 | VCC12_PCIE |
| 33 | VCC12_PCIE | 34 | VCC12_PCIE |
| 35 | VCC12_PCIE | 36 | VCC12_PCIE |
| 37 | VCC12_PCIE | 38 | VCC12_PCIE |
| 39 | VCC12_PCIE | 40 | VCC12_PCIE |



SMBUS Connector

Connector location: JP_PBT




| Pin | Settings |
|-----|----------|
| 1 | PBT_PU |
| 2 | GND |



Internal Connectors - Bottom Side

SIM Card Slot

Connector location: IDE1

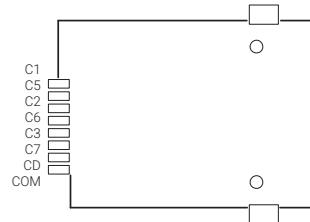

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| C1 | UIM_PWR | C2 | UIM_RESET |
| C3 | UIM_CLK | C5 | GND |
| C6 | UIM_VPP | C7 | UIM_DATA |
| MH1 | GND | MH2 | GND |
| SW1 | GND | SW2 | GND |

SATA Power Connector

Connector location: CN7, CN8



| Pin | Definition |
|-----|------------|
| 1 | VCC5 |
| 2 | GND |

PCIe X16 Slot

Connector location: PCIE1



| Pin | Definition | Pin | Definition |
|-----|-------------------|-----|-------------------|
| A1 | PCIE_PRSNT1 | A2 | VCC12_PCIE |
| A3 | VCC12_PCIE | A4 | GND |
| A5 | PCIEX16_TCK | A6 | PCIEX16_TDI |
| A7 | PCIEX16_TDO | A8 | PCIEX16_TMS |
| A9 | VCC3 | A10 | VCC3 |
| A11 | I_PLTRSTN | A12 | GND |
| A13 | CLK_PCIE16_SLOT_P | A14 | CLK_PCIE16_SLOT_N |
| A15 | GND | A16 | PEG_RXP0 |
| A17 | PEG_RXN0 | A18 | GND |
| A19 | FAN_CTL2 | A20 | GND |
| A21 | PEG_RXP1 | A22 | PEG_RXN1 |
| A23 | GND | A24 | GND |
| A25 | PEG_RXP2 | A26 | PEG_RXN2 |
| A27 | GND | A28 | GND |
| A29 | PEG_RXP3 | A30 | PEG_RXN3 |
| A31 | GND | A32 | NC |
| A33 | NC | A34 | GND |
| A35 | PEG_RXP4 | A36 | PEG_RXN4 |
| A37 | GND | A38 | GND |
| A39 | PEG_RXP5 | A40 | PEG_RXN5 |
| A41 | GND | A42 | GND |

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| A43 | PEG_RXP6 | A44 | PEG_RXN6 |
| A45 | GND | A46 | GND |
| A47 | PEG_RXP7 | A48 | PEG_RXN7 |
| A49 | GND | A50 | NC |
| A51 | GND | A52 | PEG_RXP8 |
| A53 | PEG_RXN8 | A54 | GND |
| A55 | GND | A56 | PEG_RXP9 |
| A57 | PEG_RXN9 | A58 | GND |
| A59 | GND | A60 | PEG_RXP10 |
| A61 | PEG_RXP10 | A62 | GND |
| A63 | GND | A64 | PEG_RXP11 |
| A65 | PEG_RXN11 | A66 | GND |
| A67 | GND | A68 | PEG_RXP12 |
| A69 | PEG_RXN12 | A70 | GND |
| A71 | GND | A72 | PEG_RXP13 |
| A73 | PEG_RXN13 | A74 | GND |
| A75 | GND | A76 | PEG_RXP14 |
| A77 | PEG_RXN14 | A78 | GND |
| A79 | GND | A80 | PEG_RXP15 |
| A81 | PEG_RXN15 | A82 | GND |

Continued on next page



| Pin | Definition | Pin | Definition |
|------------|-------------------|------------|-------------------|
| B1 | VCC12_PCIE | B2 | VCC12_PCIE |
| B3 | VCC12_PCIE | B4 | GND |
| B5 | SMB_CLK | B6 | SMB_DAT |
| B7 | GND | B8 | VCC3 |
| B9 | PCIEX16_TRST# | B10 | 3VSB |
| B11 | I_WAKEN | B12 | FAN_TAC2 |
| B13 | GND | B14 | PEG_TXP0_C |
| B15 | PEG_TXN0_C | B16 | GND |
| B17 | PRSNT2#_1 | B18 | GND |
| B19 | PEG_TXP1_C | B20 | PEG_TXN1_C |
| B21 | GND | B22 | GND |
| B23 | PEG_TXP2_C | B24 | PEG_TXN2_C |
| B25 | GND | B26 | GND |
| B27 | PEG_TXP3_C | B28 | PEG_TXN3_C |
| B29 | GND | B30 | NC |
| B31 | PRSNT2#_2 | B32 | GND |
| B33 | PEG_TXP4_C | B34 | PEG_TXN4_C |
| B35 | GND | B36 | GND |
| B37 | PEG_TXP5_C | B38 | PEG_TXN5_C |
| B39 | GND | B40 | GND |
| B41 | PEG_TXP6_C | B42 | PEG_TXN6_C |

| Pin | Definition | Pin | Definition |
|------------|-------------------|------------|-------------------|
| B43 | GND | B44 | GND |
| B45 | PEG_TXP7_C | B46 | PEG_TXN7_C |
| B47 | GND | B48 | PRSNT2#_3 |
| B49 | GND | B50 | PEG_TXP8_C |
| B51 | PEG_TXN8_C | B52 | GND |
| B53 | GND | B54 | PEG_TXP9_C |
| B55 | PEG_TXN9_C | B56 | GND |
| B57 | GND | B58 | PEG_TXP10_C |
| B59 | PEG_TXN10_C | B60 | GND |
| B61 | GND | B62 | PEG_TXP11_C |
| B63 | PEG_TXN11_C | B64 | GND |
| B65 | GND | B66 | PEG_TXP12_C |
| B67 | PEG_TXN12_C | B68 | GND |
| B69 | GND | B70 | PEG_TXP13_C |
| B71 | PEG_TXN13_C | B72 | GND |
| B73 | GND | B74 | PEG_TXP14_C |
| B75 | PEG_TXN14_C | B76 | GND |
| B77 | GND | B78 | PEG_TXP15_C |
| B79 | PEG_TXN15_C | B80 | GND |
| B81 | PRSNT2#_4 | B82 | NC |



SATA Connectors

Connector location: SATA1, SATA2



SATA1

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | GND | 2 | SATA_TXP2 |
| 3 | SATA_TXN2 | 4 | GND |
| 5 | SATA_RXN2 | 6 | SATA_RXP2 |
| 7 | GND | | |

SATA2

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | GND | 2 | SATA_TXP3 |
| 3 | SATA_TXN3 | 4 | GND |
| 5 | SATA_RXN3 | 6 | SATA_RXP3 |
| 7 | GND | | |

CHAPTER 3: SYSTEM SETUP

Removing the Top Cover




Prior to removing the chassis cover, make sure the unit's power is off and disconnected from the power sources to prevent electric shock or system damage.


1. Remove the 4 screws on the sides.



2. Remove the 4 screws on the top.


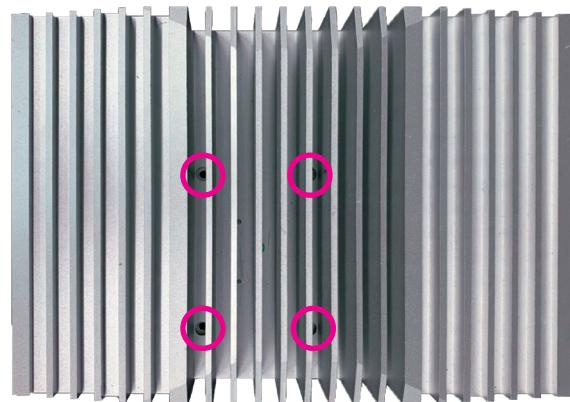


3. With the screws removed, lift up the cover and remove it from the chassis.
4. When reinstalling the top cover to the system, ensure that the 4 mounting holes on the top cover is aligned correctly to the four copper standoffs around the CPU socket.

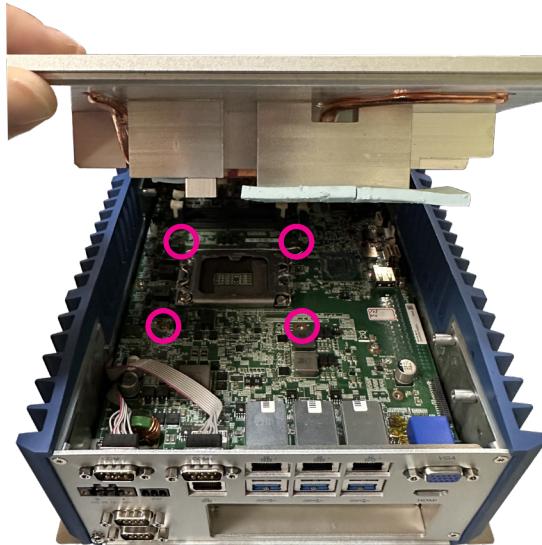


Removing the Bottom Cover

1. Locate the 6 screws on the bottom cover.
2. Remove the screws, then lift up the bottom cover and remove it from the chassis.

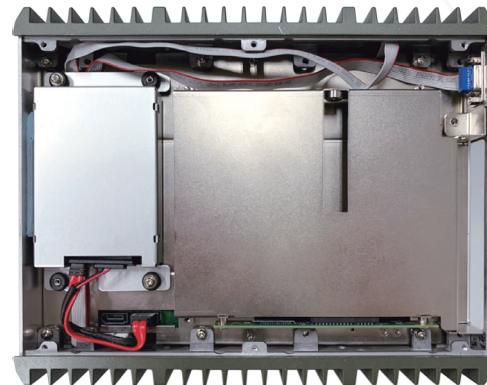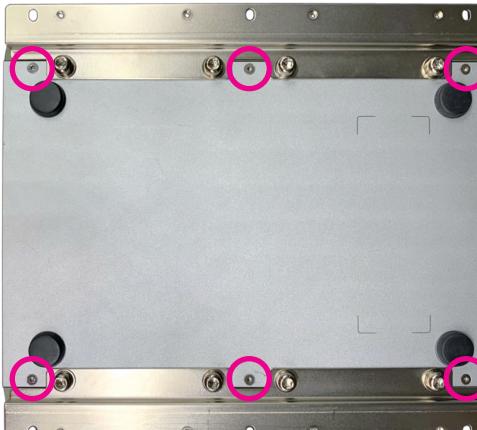


Installing a CPU


1. Locate the CPU socket on the board. Unlock the socket by pushing the load lever down, moving it sideways until it is released from the retention tab.

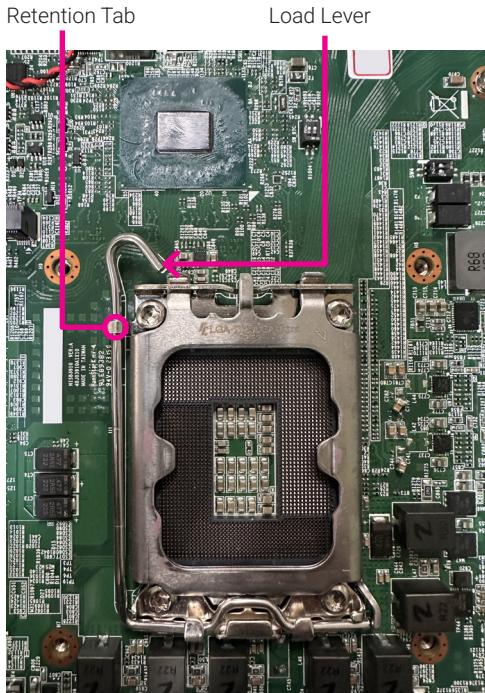


2. Lift the load lever up to open the CPU retention bracket.

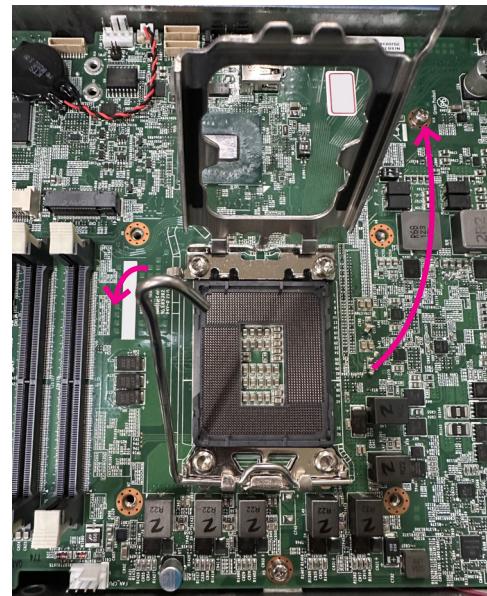

3. Insert the CPU into the socket. The triangular edge on the CPU must align with the corner of the CPU socket shown on the photo.

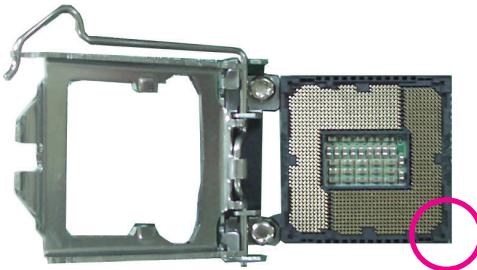

The CPU's notch will at the same time fit into the socket's alignment key.

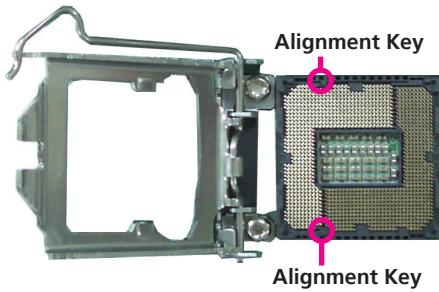

- Handle the CPU by its edges and avoid touching the pins.
- The CPU will fit in only one orientation and can easily be inserted without exerting any force.


4. Close the load plate and then hook the load lever under the retention.



Do not force the CPU into the socket. Forcing the CPU into the socket may bend the pins and damage the CPU.

Installing a SO-DIMM Memory Module



1. Locate the SO-DIMM sockets and release the locks.
2. Insert the SO-DIMM module into the socket and apply even pressure to both ends of the module until it slips into the socket. While pushing the module into position, the locks will close automatically.

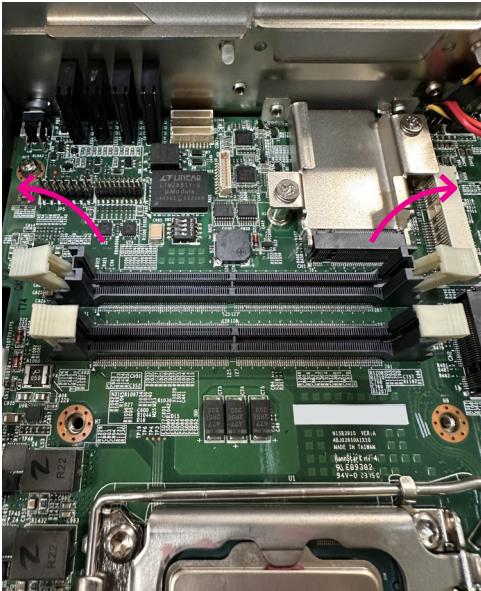

3. Repeat steps 1 and 2 to install the second memory module if you wish to add more memory.

Installing a Mini PCIe Module

1. Locate the Mini PCIe slot on the board.
2. Insert a Mini PCIe module into the slot at a 45-degree angle until the gold-plated connector on the edge of the module completely disappears inside the slot.
3. Push the module down and tighten a screw into the mounting hole on the module to secure it.

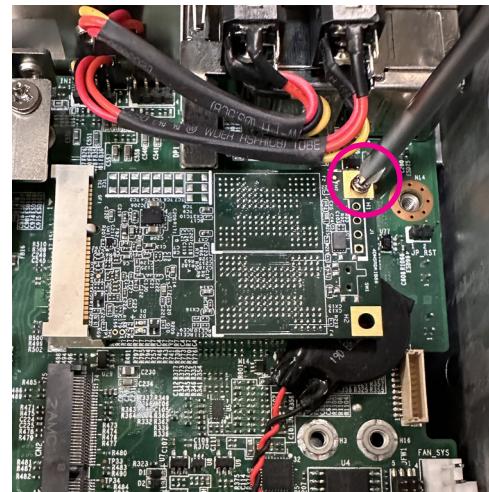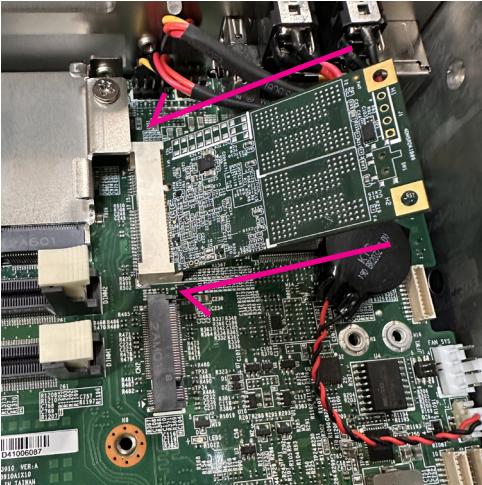

4. Attach the heatsink which has double-sided tape applied onto the Mini PCIe card.




Installing a SIM Card

1. The SIM card is located on the front panel and covered with a panel. To insert the SIM card, refer to the image below to loosen the screws.



2. Place the SIM card directly into the card slot. To remove the SIM card, gently push on its bottom edge.



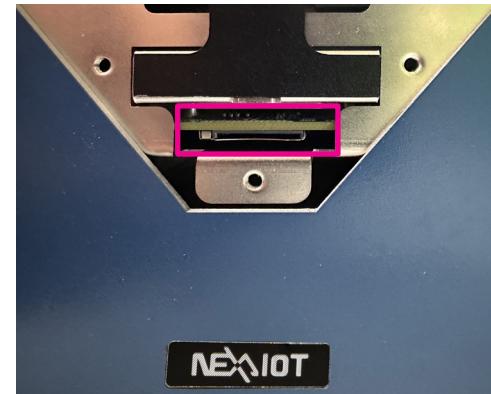


Installing an M.2 Module (External)

1. The external M.2 slot is located on the front panel and covered with a panel. To insert an M.2 module, refer to the image below to loosen the screws.
2. Follow the location indicated below to pull out the M.2 bracket.




3. Stick thermal pad (P/N:5060200111X00) onto the M.2 bracket, and stick ceramic thermal pads (P/N: 5044440181X00) onto the chipsets of the M.2 module respectively
4. Slide the M.2 module onto the mounting plate of the M.2 bracket, and secure it with a screw.

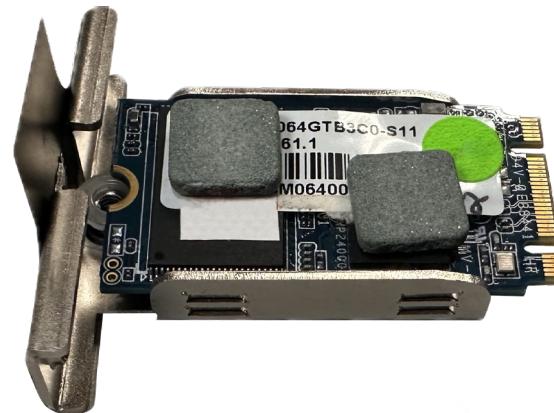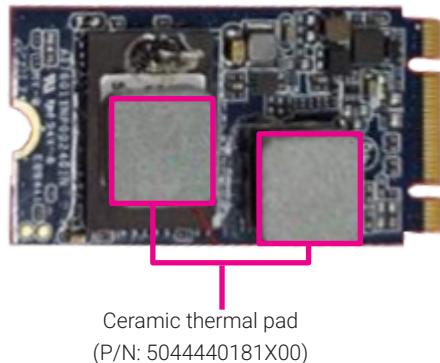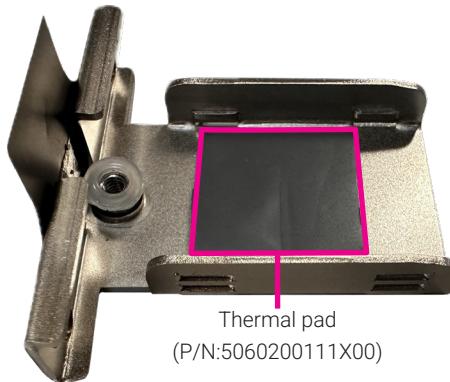


5. Install the M.2 bracket back to its original position. Make sure the connector on the edge of the module is plugged firmly into the connector on the board.

Installing an M.2 Module (Internal)

1. Locate the M.2 slot on the board.

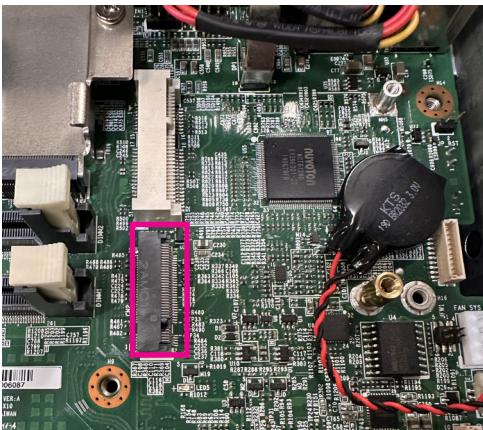


2. Insert the M.2 module into the slot at a 30-degree angle until the gold-plated connector on the edge of the module completely disappears inside the slot. Push the module down and then secure it with a mounting screw.

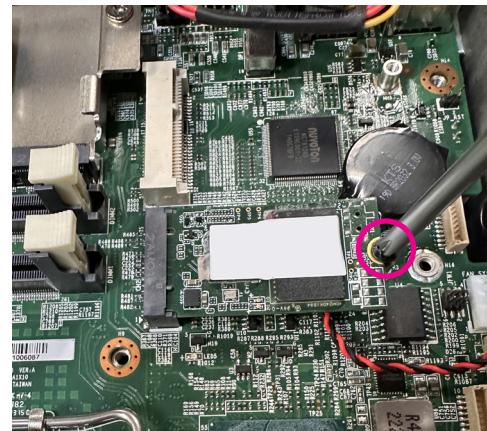


Installing an Internal SATA Storage Drive (NISE 3910E/E16/E2/P2/P2E)

1. With the bottom cover of the chassis removed, loosen the screws securing the storage bracket, and lift it up.
2. Place the storage drive into the bracket and secure the drive with screws.

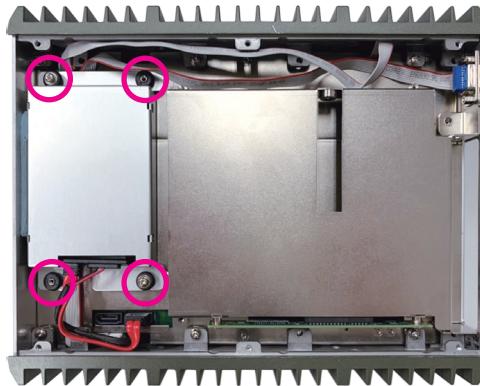


3. Plug the SATA connector into the storage drive and secure the storage bracket back to its original location. If the SATA power and data cables are higher than the chassis, please rearrange the cables so that they are inside the chassis, as shown by the dotted line below.

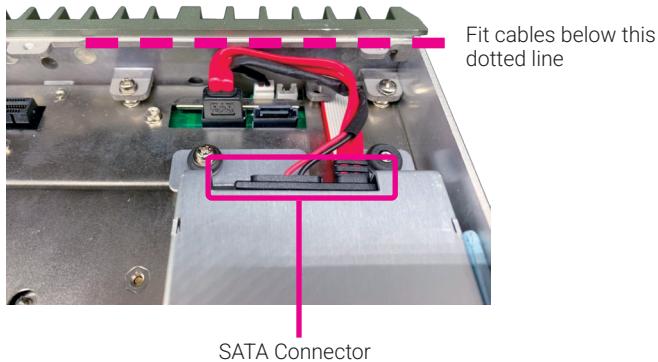

Installing an Internal SATA Storage Drive (NISE 3910R)

1. On the rear panel of NISE 3910R, loosen the screws on the SSD/HDD drive bay, then hold the drive bay handle to pull it out.
2. Insert the storage drive into the drive bay with the SATA data and power connector facing towards the end. Then, while supporting the storage drive, turn the bracket to the other side. From the outside of the storage bracket, secure the drive in place with screws.

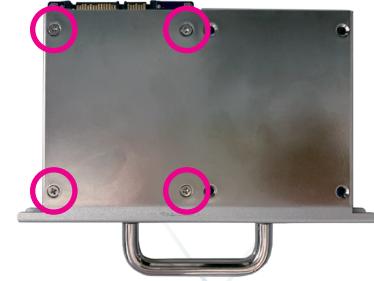


3. Insert the drive bay back in the SSD/HDD slot and tighten the screws to secure it in place.

Wallmount Brackets

The wallmount brackets provide a convenient and economical way of mounting the system on the wall.

1. The mounting holes are located at the bottom of the system. Secure the brackets on each side of the system using the provided mounting screws (M6*10mm).

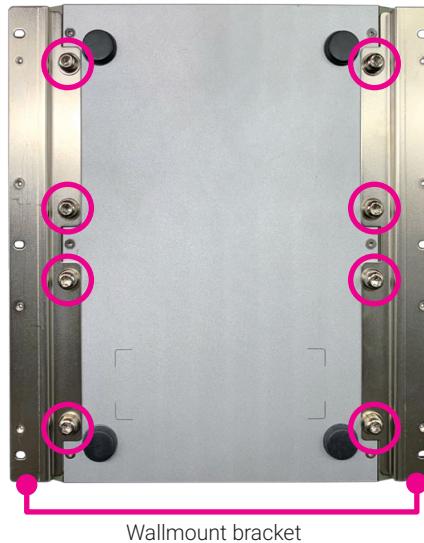

2. Secure the system to the wall by fastening screws through the mounting holes of the bracket.



CHAPTER 4: BIOS SETUP

This chapter describes how to use the BIOS setup program for the NISE 3910 series. The BIOS screens provided in this chapter are for reference only and may change if the BIOS is updated in the future.

To check for the latest updates and revisions, visit the NexAIoT website at www.nexaiot.com.

About BIOS Setup

The BIOS (Basic Input and Output System) Setup program is a menu driven utility that enables you to make changes to the system configuration and tailor your system to suit your individual work needs. It is a ROM-based configuration utility that displays the system's configuration status and provides you with a tool to set system parameters.

These parameters are stored in non-volatile battery-backed-up CMOS RAM that saves this information even when the power is turned off. When the system is turned back on, the system is configured with the values found in CMOS.

With easy-to-use pull down menus, you can configure such items as:

- Hard drives, diskette drives, and peripherals
- Video display type and display options
- Password protection from unauthorized use

- Power management features

The settings made in the setup program affect how the computer performs. It is important, therefore, first to try to understand all the setup options, and second, to make settings appropriate for the way you use the computer.

When to Configure the BIOS

- This program should be executed under the following conditions:
- When changing the system configuration
- When a configuration error is detected by the system and you are prompted to make changes to the setup program
- When resetting the system clock
- When redefining the communication ports to prevent any conflicts
- When making changes to the Power Management configuration
- When changing the password or making other changes to the security setup

Normally, CMOS setup is needed when the system hardware is not consistent with the information contained in the CMOS RAM, whenever the CMOS RAM has lost power, or the system features need to be changed.

Default Configuration

Most of the configuration settings are either predefined according to the Load Optimal Defaults settings which are stored in the BIOS or are automatically detected and configured without requiring any actions. There are a few settings that you may need to change depending on your system configuration.

Entering Setup



When the system is powered on, the BIOS will enter the Power-On Self Test (POST) routines. These routines perform various diagnostic checks; if an error is encountered, the error will be reported in one of two different ways:

- If the error occurs before the display device is initialized, a series of beeps will be transmitted.
- If the error occurs after the display device is initialized, the screen will display the error message.

Powering on the computer and immediately pressing **** allows you to enter Setup.

Press the  key to enter Setup:

Legends
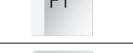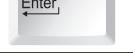
| Key | Function |
|---|--|
|  | Moves the highlight left or right to select a menu. |
|  | Moves the highlight up or down between sub-menus or fields. |
|  | Exits the BIOS Setup Utility. |
|  | Scrolls forward through the values or options of the highlighted field. |
|  | Scrolls backward through the values or options of the highlighted field. |
|  | Selects a field. |
|  | Displays General Help. |
|  | Load previous values. |
|  | Load optimized default values. |
|  | Saves and exits the Setup program. |
|  | Press <Enter> to enter the highlighted sub-menu. |



Scroll Bar

When a scroll bar appears to the right of the setup screen, it indicates that there are more available fields not shown on the screen. Use the up and down arrow keys to scroll through all the available fields.

Submenu


When "►" appears on the left of a particular field, it indicates that a submenu which contains additional options are available for that field. To display the submenu, move the highlight to that field and press .

BIOS Setup Utility

Once you enter the AMI BIOS Setup Utility, the Main Menu will appear on the screen. The main menu allows you to select from several setup functions and one exit. Use arrow keys to select among the items and press  to accept or enter the submenu.

Main

The Main menu is the first screen that you will see when you enter the BIOS Setup Utility.

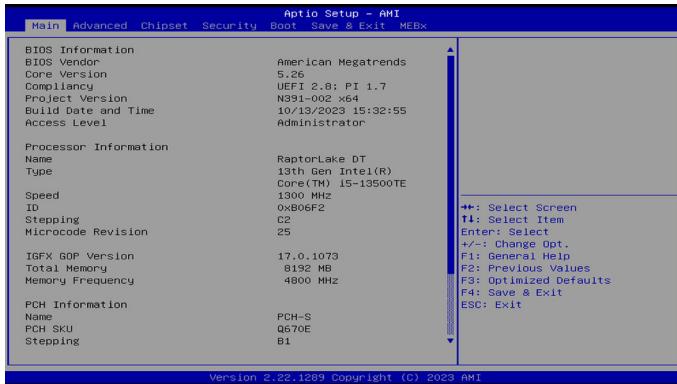

System Language

Selects the language of the system.

System Date

The date format is <day>, <month>, <date>, <year>. Day displays a day, from Monday to Sunday. Month displays the month, from January to December. Date displays the date, from 1 to 31. Year displays the year, from 1999 to 2099.

System Time


The time format is <hour>, <minute>, <second>. The time is based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00. Hour displays hours from 00 to 23. Minute displays minutes from 00 to 59. Second displays seconds from 00 to 59.

Advanced

The Advanced menu allows you to configure your system for basic operation. Some entries are defaults required by the system board, while others, if enabled, will improve the performance of your system or let you set some features according to your preference.



Setting incorrect field values may cause the system to malfunction.

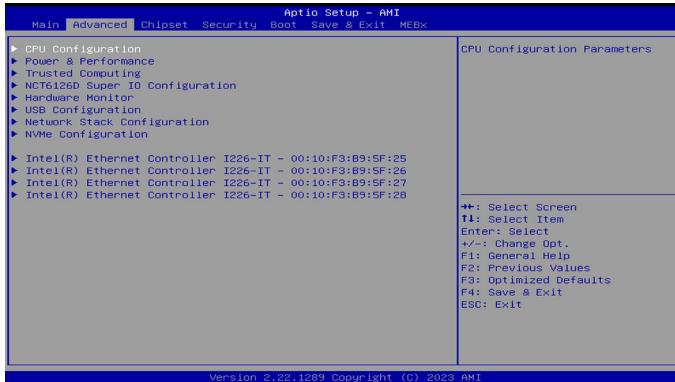

CPU Configuration

This section is used to configure the CPU.



Intel (VMX) Virtualization Technology

Enable or disable Intel Virtualization technology.

Active Processors Cores

Select the number of cores to enable in each processor package.

Hyper-Threading

Enable or disable hyper-threading technology.



Power & Performance


This section is used to configure the CPU power management features.



CPU - Power Management Control

Enter the CPU - Power Management Control submenu.

CPU - Power Management Control

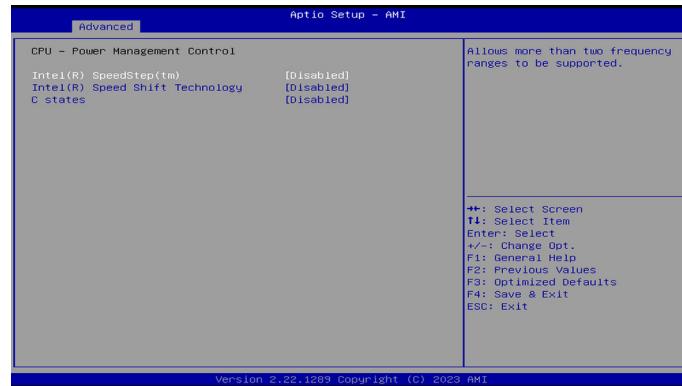

Intel(R) SpeedStep(tm)

Enable or disable Intel SpeedStep technology.

Intel(R) Speed Shift Technology

Enable or disable Intel Speed Shift Technology support. Enabling it will expose the CPPC v2 interface to allow hardware controlled P-states.

C states

Enable or disable CPU C states support for power saving.



Trusted Computing

This section is used to configure Trusted Platform Module (TPM) settings.



Security Device Support

Enable or disable BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

SHA256 PCR Bank

Enable or disable SHA256 PCR Bank.

Pending operation

Schedule an operation for the security device.

Platform Hierarchy

Enable or disable platform hierarchy.

Storage Hierarchy

Enable or disable storage hierarchy.

Endorsement Hierarchy

Enable or disable endorsement hierarchy.

Physical Presence Spec Version

Configure the physical presence spec version.

Device Select

Configure the TPM version. TPM 1.2 will restrict support to TPM 1.2 devices and TPM 2.0 will restrict support to TPM 2.0 devices. Auto will support both TPM 1.2 and 2.0 devices with the default set to TPM 2.0 devices if not found, and TPM 1.2 devices will be enumerated.


Disable Block Sid

Override to allow SID authentication in TCG storage device.



NCT6126D Super IO Configuration

This section is used to configure the serial ports.

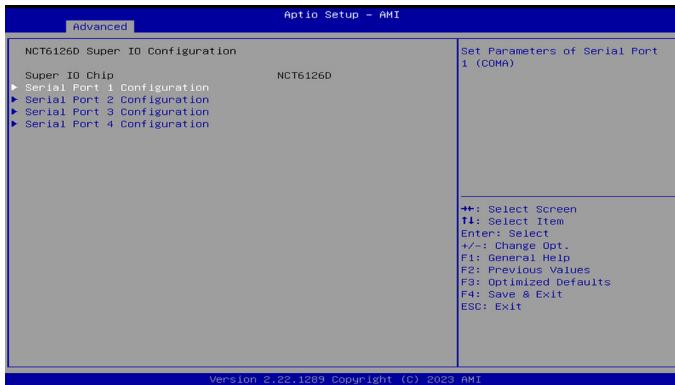


Serial Port 1/2/3/4 Configuration

Enter the Serial Port 1/2/3/4 Configuration submenu.

Serial Port 1/2/3/4 Configuration

This section is used to configure serial port 1/2/3/4.

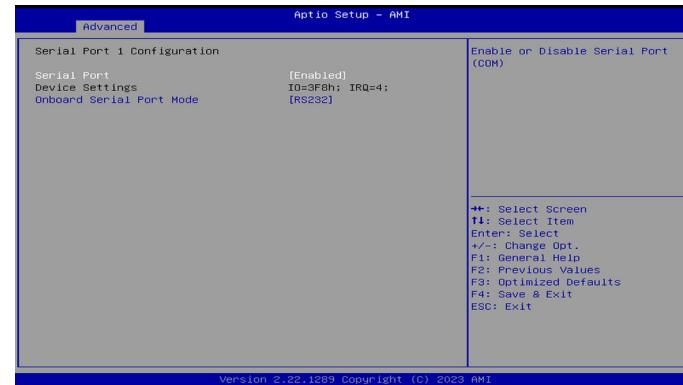

Serial Port 1/2/3/4

Enable or disable the serial port.


Onboard Serial Port Mode 1/2

Select this to change the serial port mode to RS-232, RS-422, or RS-485.




Hardware Monitor

This section is used to monitor hardware status such as temperature, fan speed, and voltages.

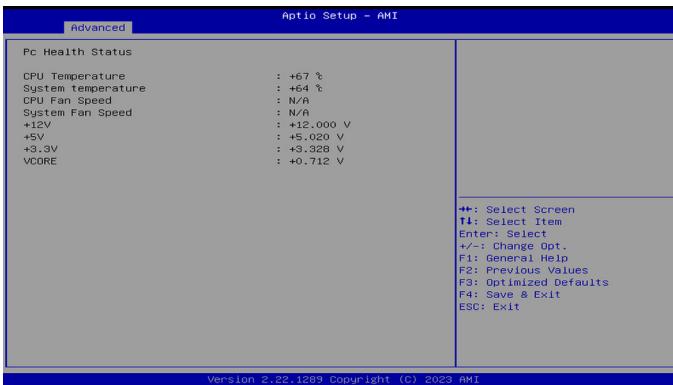

USB Configuration

This section is used to configure the USB.

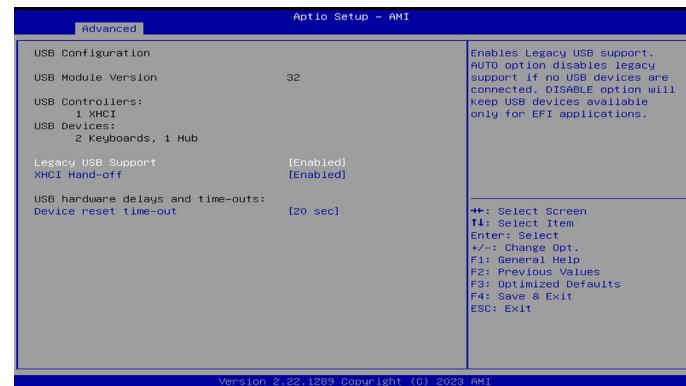

Legacy USB Support

Enabled Enables Legacy USB.

Auto Disables support for Legacy when no USB devices are connected.

Disabled Keeps USB devices available only for EFI applications.

XHCI Hand-off

This is a workaround for OSs that does not support XHCI hand-off. The XHCI ownership change should be claimed by the XHCI driver.


Device reset time-out

Selects the USB mass storage device's start unit command timeout.



Network Stack Configuration

This section is used to configure the network stack.

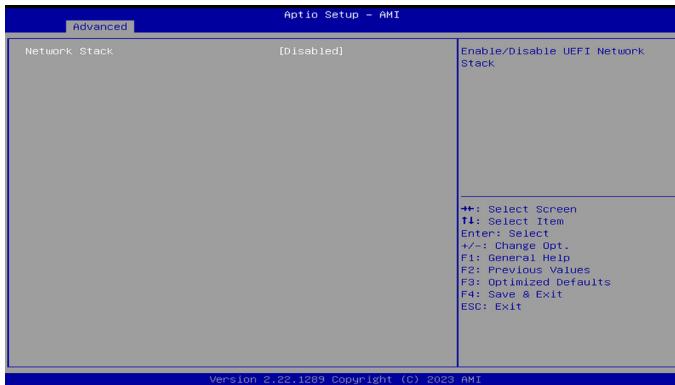


Network Stack

Enable or disable UEFI network stack.

NVMe Configuration

This section is used to configure the NVMe devices installed.

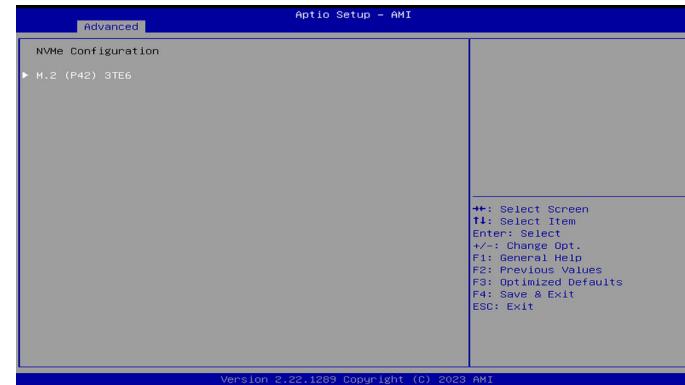


NVMe Configuration

See the detailed information of installed NVMe device.



Intel(R) Ethernet Controller I226-IT

This section is used to display information of the Intel Ethernet controller.

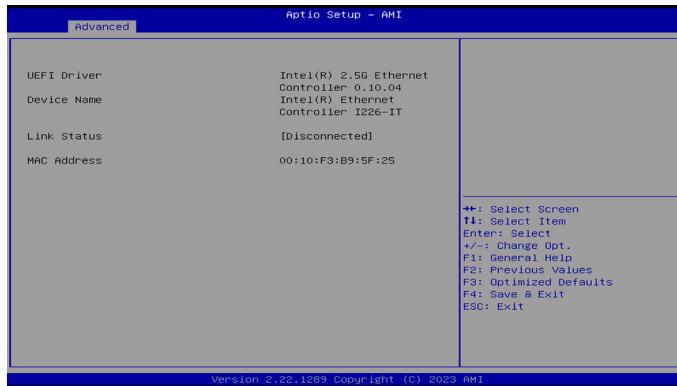

Chipset

This section gives you functions to configure the system based on the specific features of the chipset. The chipset manages bus speeds and access to system memory resources.



System Agent (SA) Configuration


Configure the System Agent (SA) parameters.

PCH-IO Configuration

Configure the PCH-IO parameters.

System Agent (SA) Configuration

This section is used to configure the System Agent (SA) configuration.

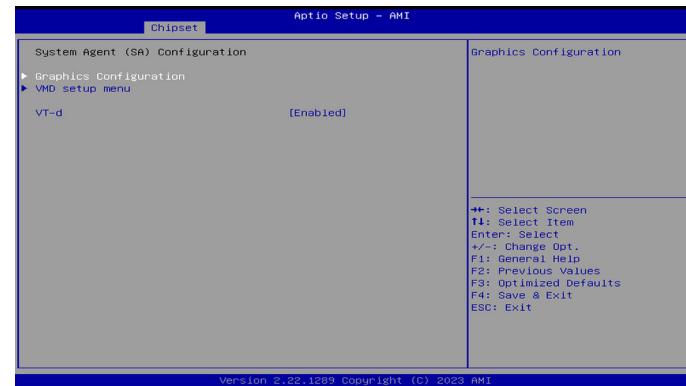

Graphic Configuration

Enter the Graphic Configuration submenu.

VMD setup menu

Enter the VMD setup menu submenu.

VT-d

Enable or disable VT-d capability.

Graphic Configuration



DVMT Pre-Allocated

Select DVMT 5.0 Pre-Allocated (Fixed) graphic memory size used by the internal graphic device.

VMD Configuration




Enable VMD controller

Enable or disable the VMD controller.



PCH-IO Configuration

This section is used to configure PCH-IO configuration.

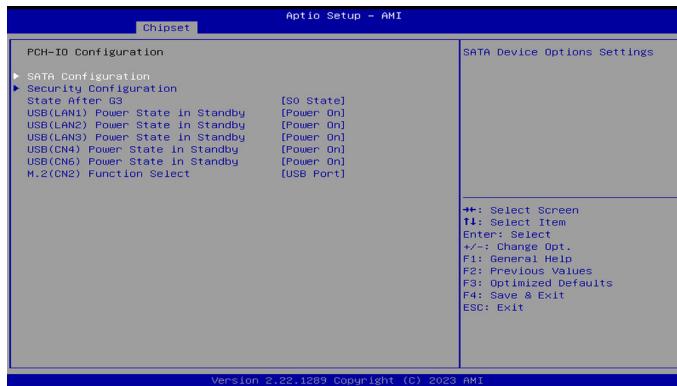

SATA Configuration

Enter the SATA Configuration sub-menu.

Security Configuration

Enter the Security Configuration sub-menu.

State After G3

Specify what state to go to when power is re-applied after a power failure (G3 state).

USB (LAN1/LAN2/LAN3/CN4/CN6) Power State in Standby


Select USB(LAN1/LAN2/LAN3/CN4/CN6) power state in standby mode.

M.2 (CN2) Function Select

Select PClex2 or PCIE+USB3.




SATA Configuration

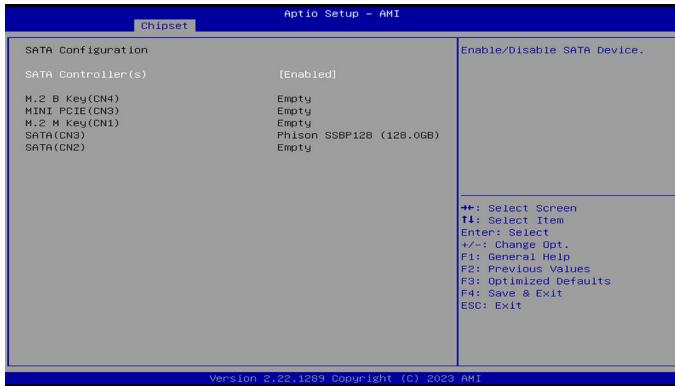

SATA Controller(s)

Enable or disable SATA device.

Security Configuration

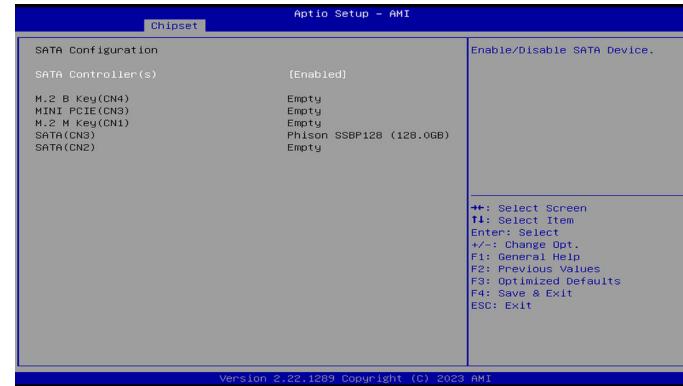

RTC Memory Lock

Enable will lock bytes 38h-3Fh in the lower/upper 128-byte bank of RTC RAM.



Security




Administrator Password

Select this to reconfigure the administrator's password.

User Password

Select this to reconfigure the user's password.

Boot

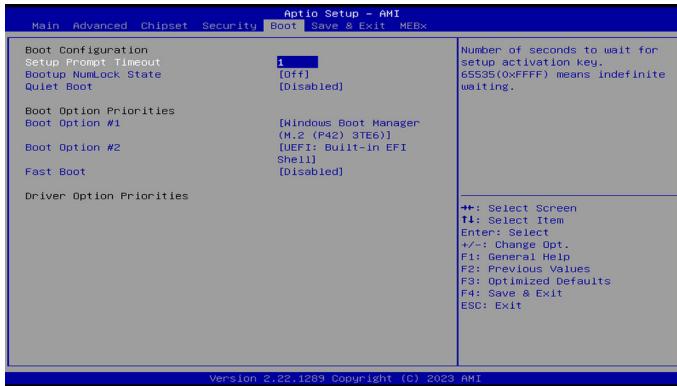

Adjust the boot sequence of the system. Boot Option #1 is the first boot device that the system will boot from, next will be #2 and so forth.

Fast Boot

Enable or disables boot with initialization of a minimal set of devices required to launch active boot option. Has no effect for BBS boot options.

Setup Prompt Timeout

Select the number of seconds to wait for the setup activation key. 65535(0xFFFF) denotes indefinite waiting.

Bootup NumLock State


This allows you to determine the default state of the numeric keypad. By default, the system boots up with NumLock on wherein the function of the numeric keypad is the number keys. When set to Off, the function of the numeric keypad is the arrow keys.

Quiet Boot

| | |
|----------|---|
| Enabled | Displays OEM logo instead of the POST messages. |
| Disabled | Displays normal POST messages. |

Boot Option Priorities

Save & Exit

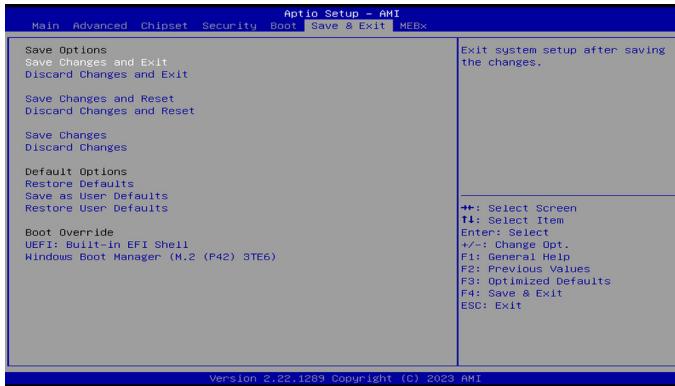

Save Changes and Exit

To save the changes and exit the Setup utility, select this field then press **<Enter>**. A dialog box will appear. Confirm by selecting Yes. You can also press **<F4>** to save and exit Setup.

Discard Changes and Exit

To exit the Setup utility without saving the changes, select this field then press **<Enter>**. You may be prompted to confirm again before exiting. You can also press **<ESC>** to exit without saving the changes.

Save Changes and Reset

To save the changes and reset, select this field then press **<Enter>**. A dialog box will appear. Confirm by selecting Yes.

Discard Changes and Reset

To exit the Setup utility and reset without saving the changes, select this field then press **<Enter>**. You may be prompted to confirm again before exiting.

Save Changes

To save changes and continue configuring the BIOS, select this field then press **<Enter>**. A dialog box will appear. Confirm by selecting Yes.

Discard Changes

To discard the changes, select this field then press **<Enter>**. A dialog box will appear. Confirm by selecting Yes to discard all changes made and restore the previously saved settings.

Restore Defaults

To restore the BIOS to default settings, select this field then press **<Enter>**. A dialog box will appear. Confirm by selecting Yes.

Save as User Defaults

To use the current configurations as user default settings for the BIOS, select this field then press **<Enter>**. A dialog box will appear. Confirm by selecting Yes.

Restore User Defaults

To restore the BIOS to user default settings, select this field then press **<Enter>**. A dialog box will appear. Confirm by selecting Yes.


Boot Override

To bypass the boot sequence from the Boot Option List and boot from a particular device, select the desired device and press **<Enter>**.



MEBx

This MEBx menu is allowed you to view and changed the MEBx configuration.

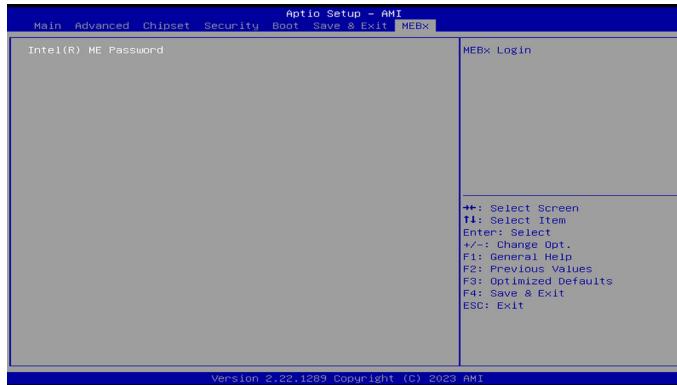

Intel(R) ME Password

MEBx Login and configure AMT BIOS features.